 
 


Assembly instructions



Montageanleitung 3812


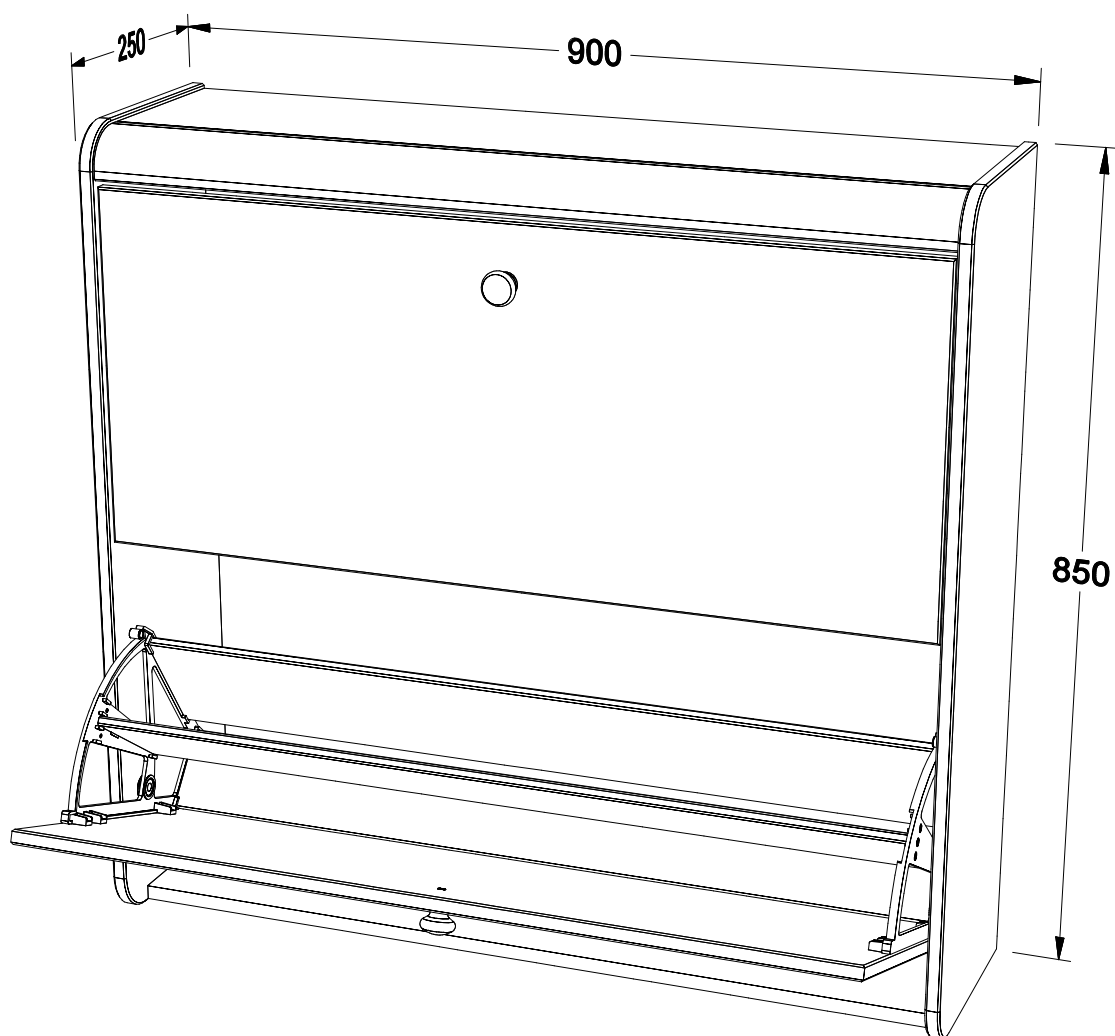




A  Ø8 x 35 16 x	E  Ø6,3 x 12 22 x	J  Ø3,0 x 15 12 x	N  Ø4,0 x 35 2 x	O  Ø4,0 x 60 3 x	Q  4 mm 1 x
R  Ø15 x 11 8 x	S  L - 34 8 x	V  Ø1,2 x 20 50 x	X  Ø34 x 29 2 x	Y  20 x 20 x 16 3 x	AF  870 mm 1 x
AG  295 x 200 2 x	AH  295 x 200 2 x	AI  Ø26 4 x	AJ  Ø20 4 x	AK  Ø10 x 21 4 x	





         
Hier können Sie die Schrauben zur
besseren Identifizierung nachmessen
(alle Maßangaben in mm)

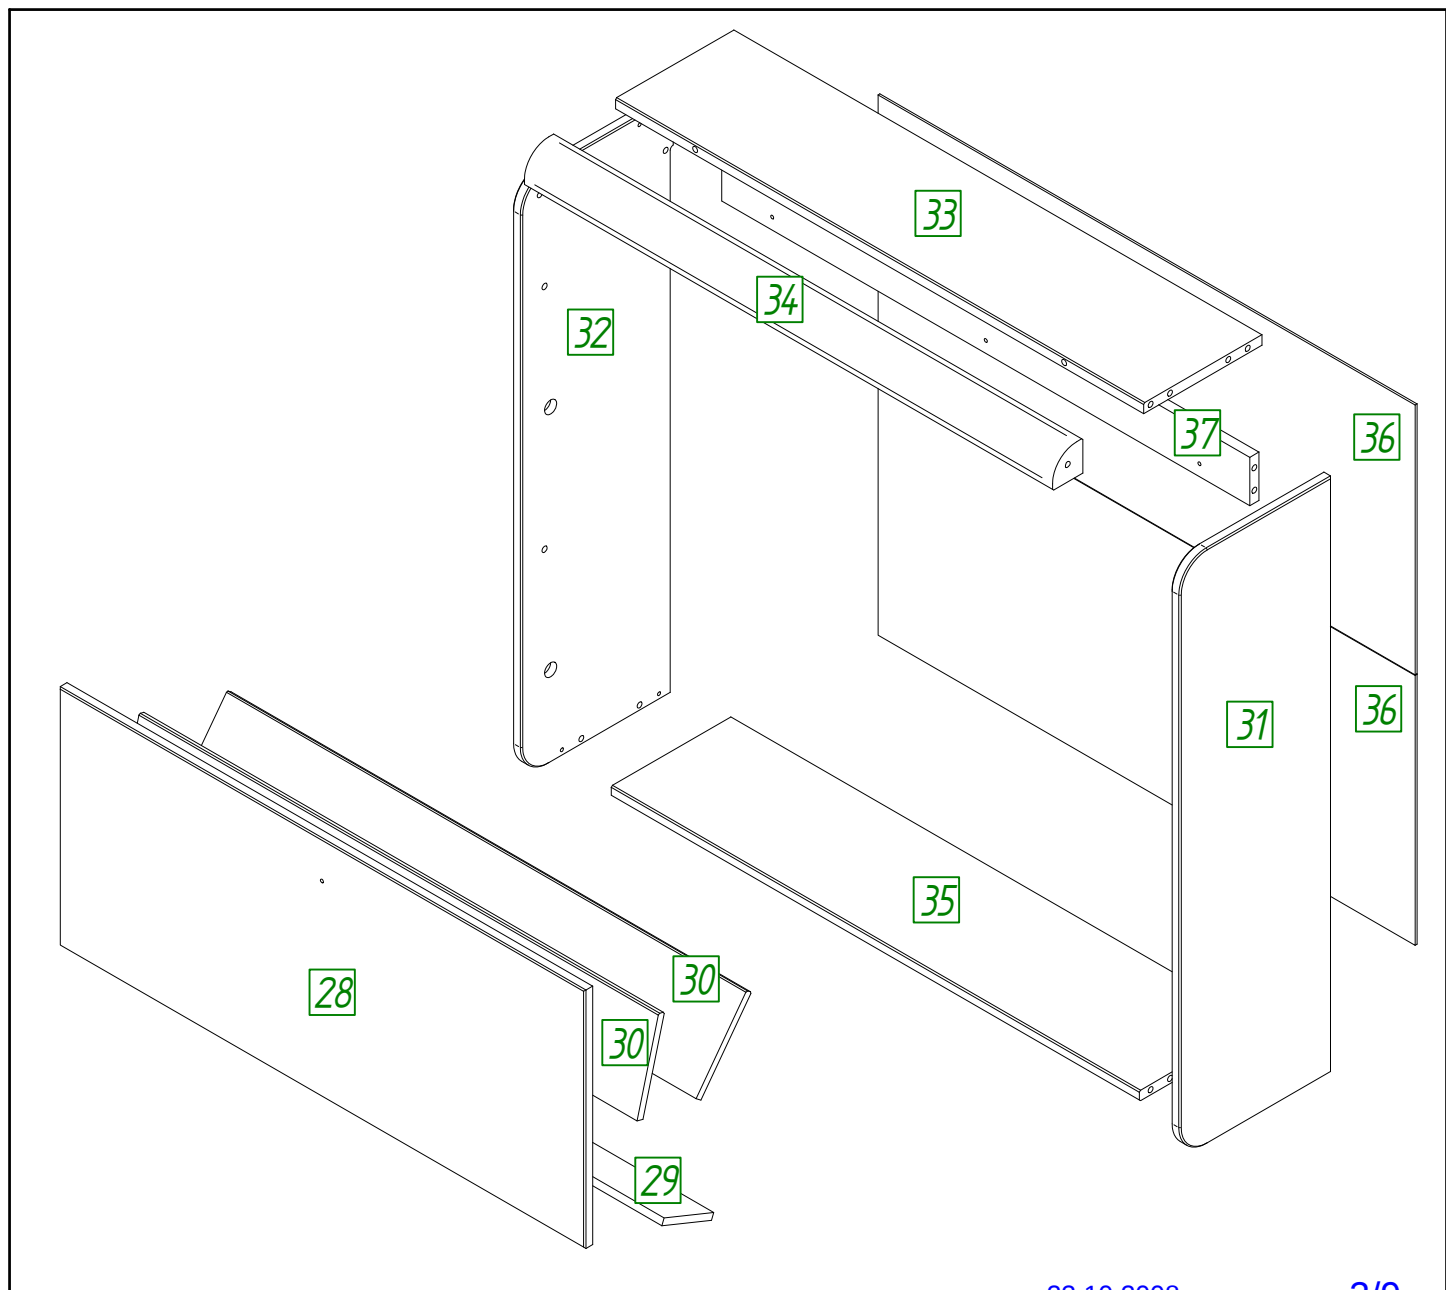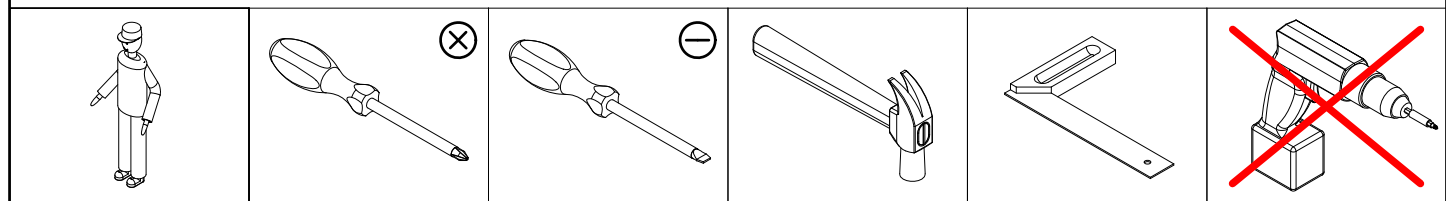

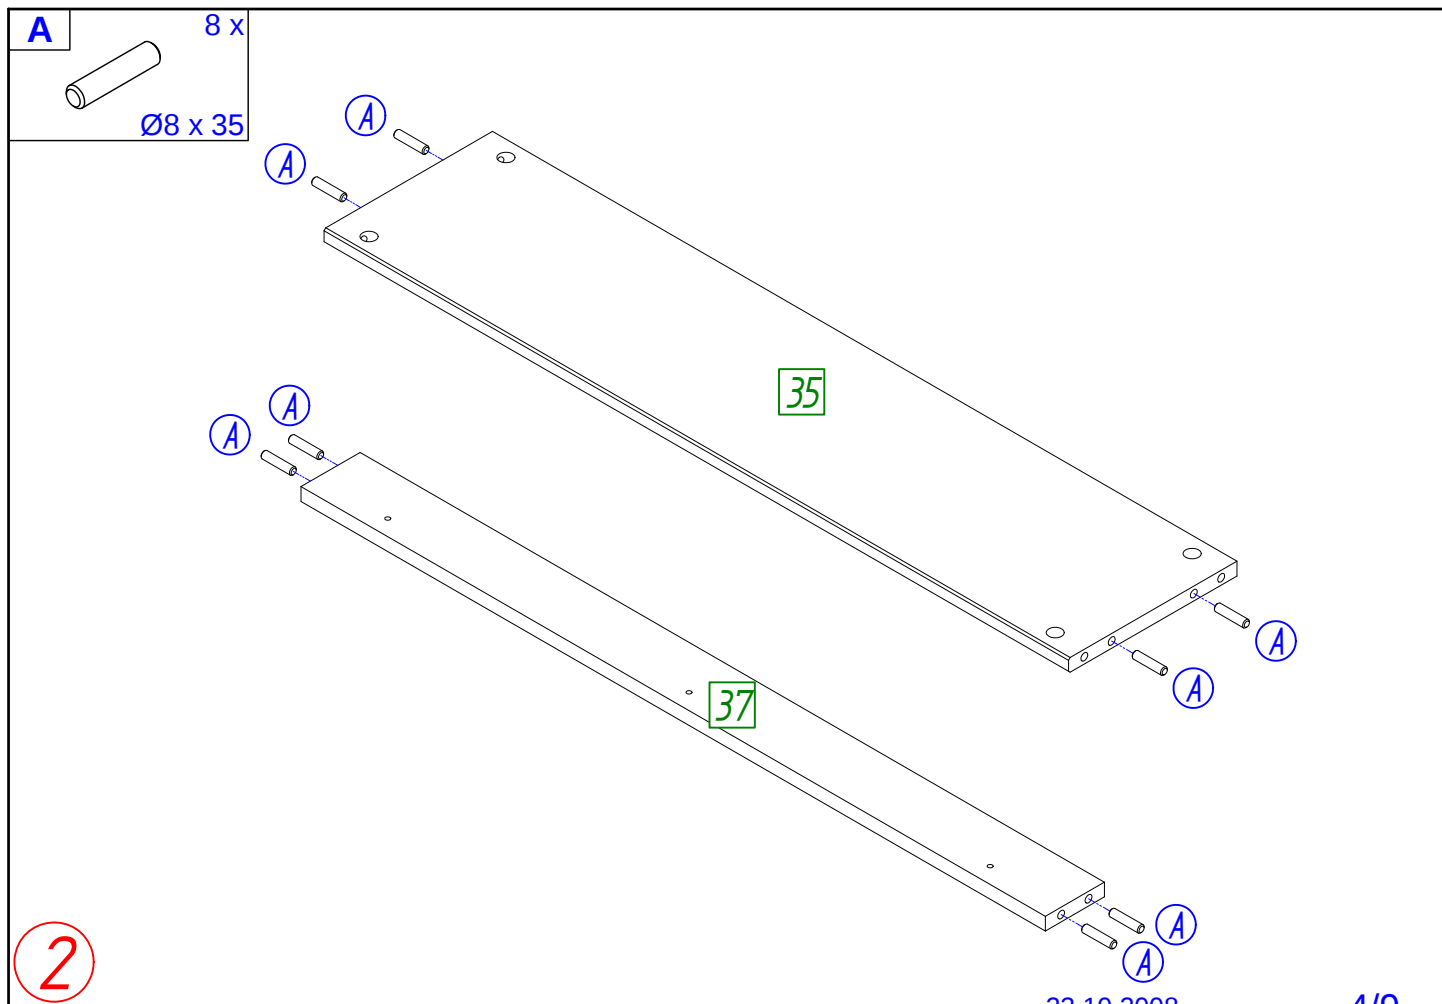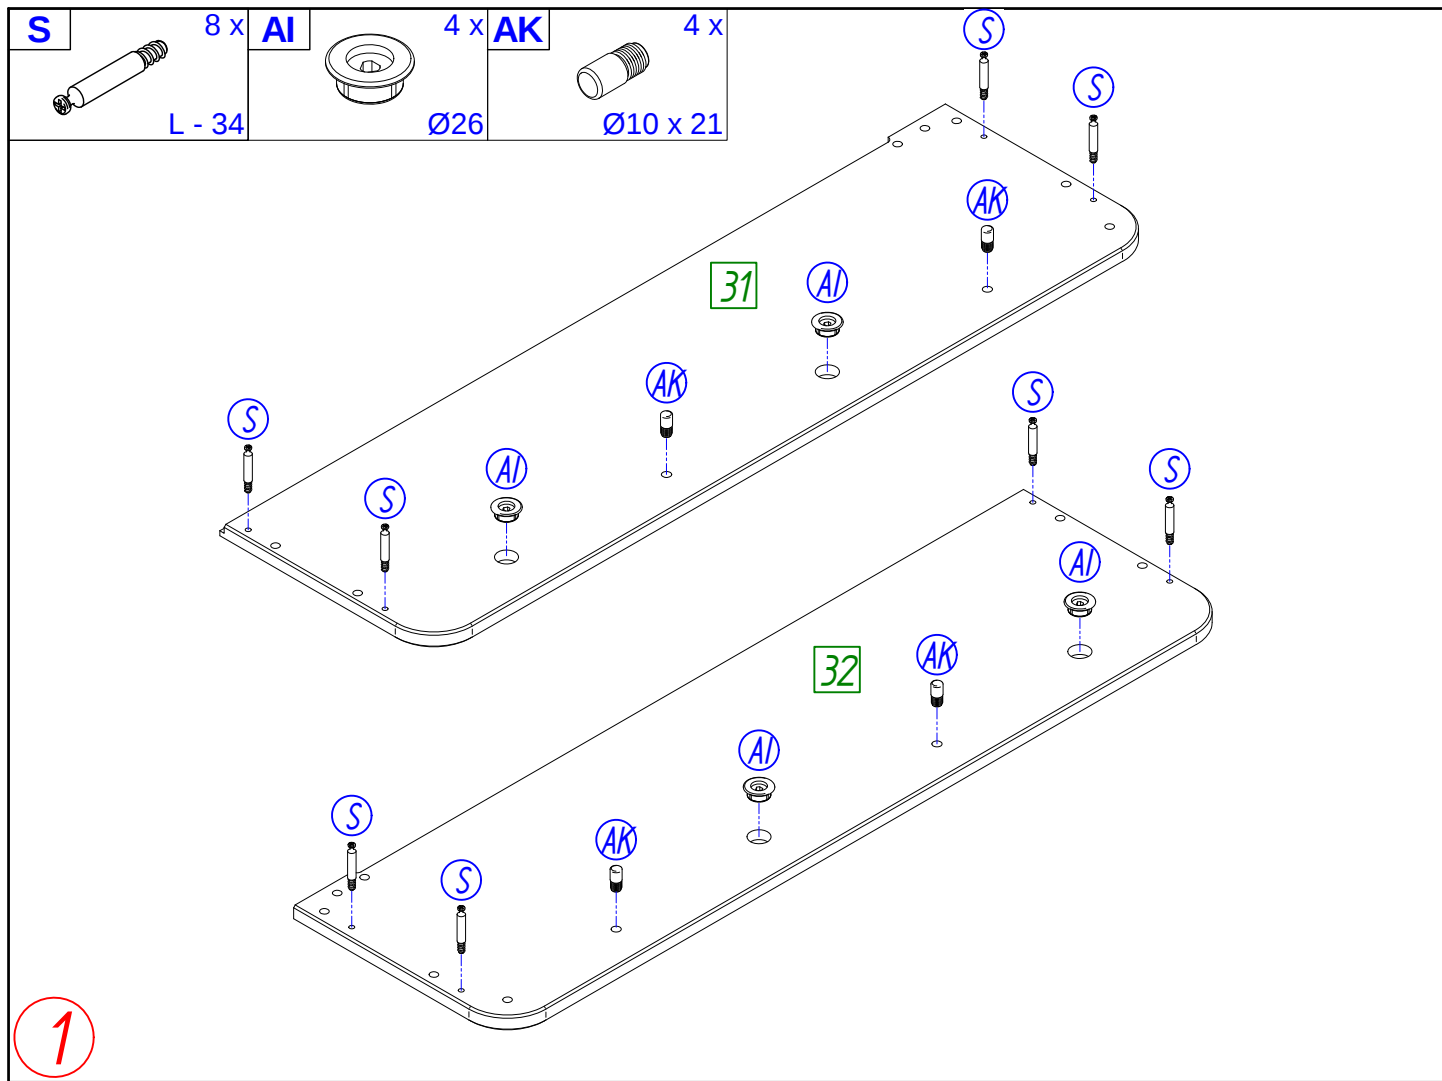


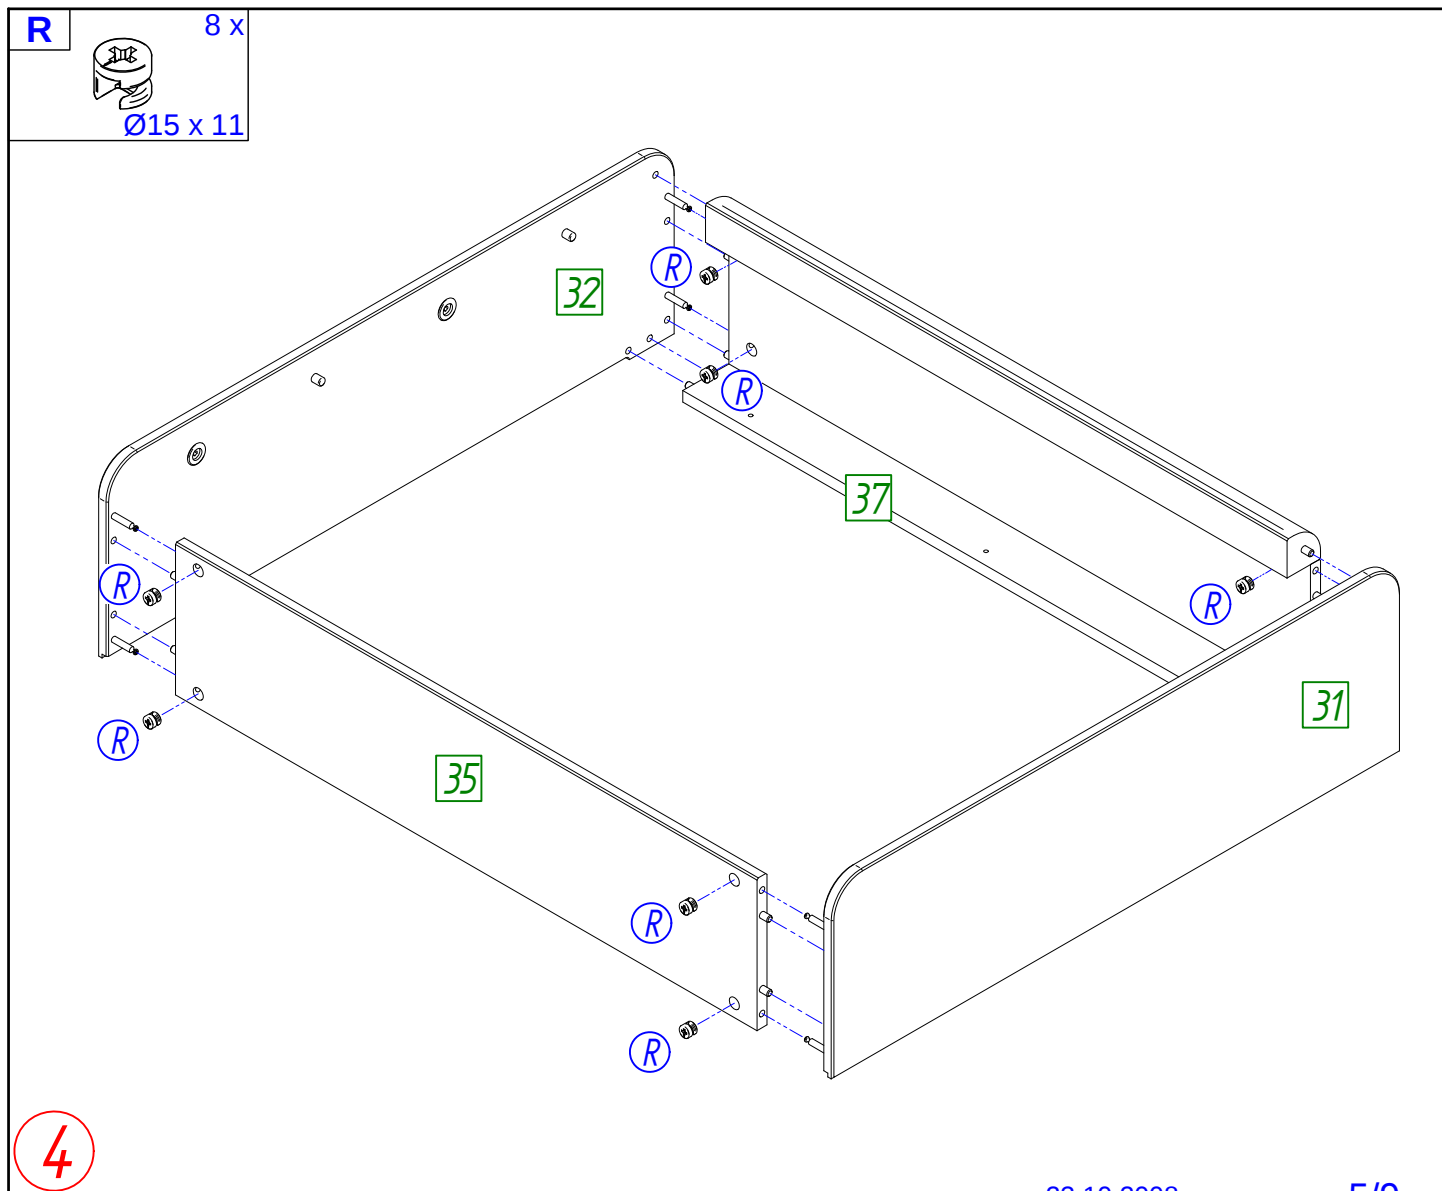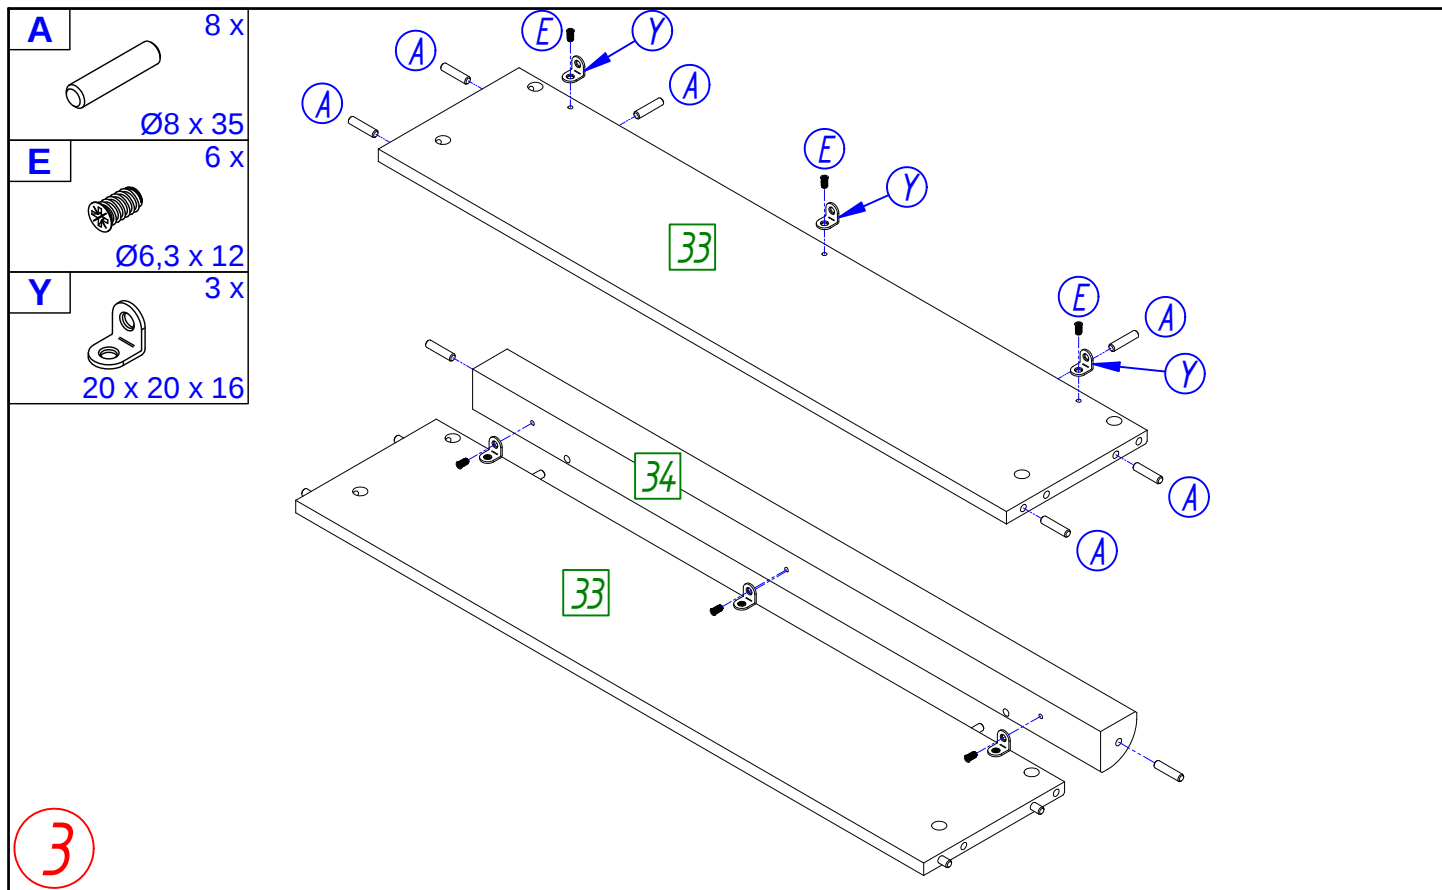

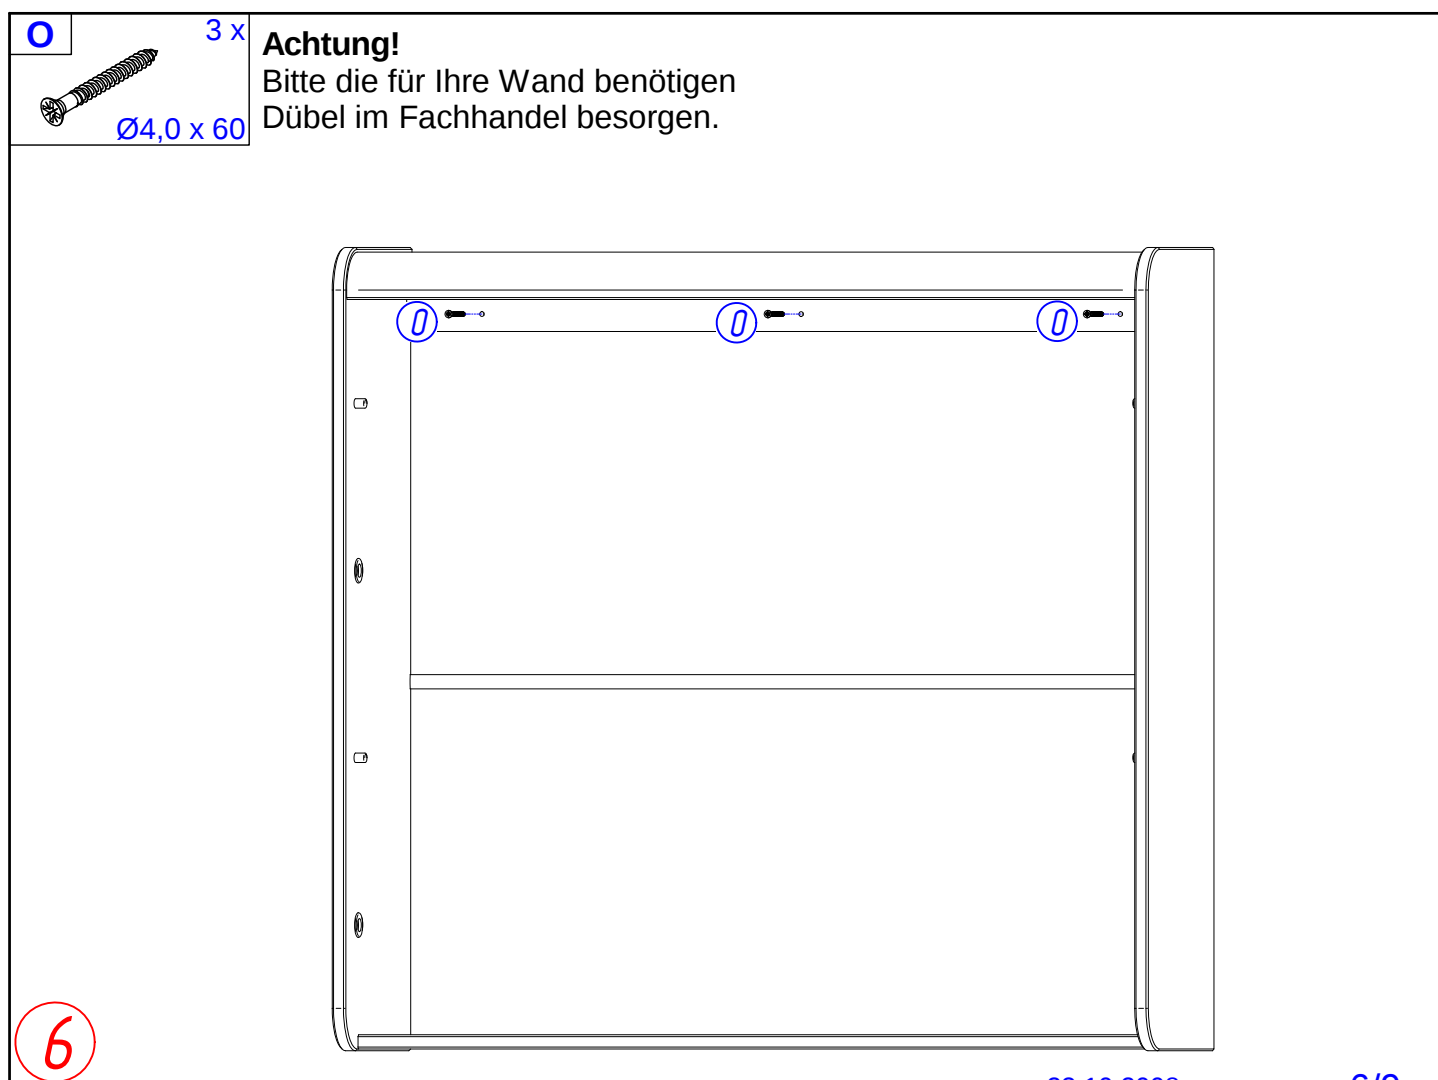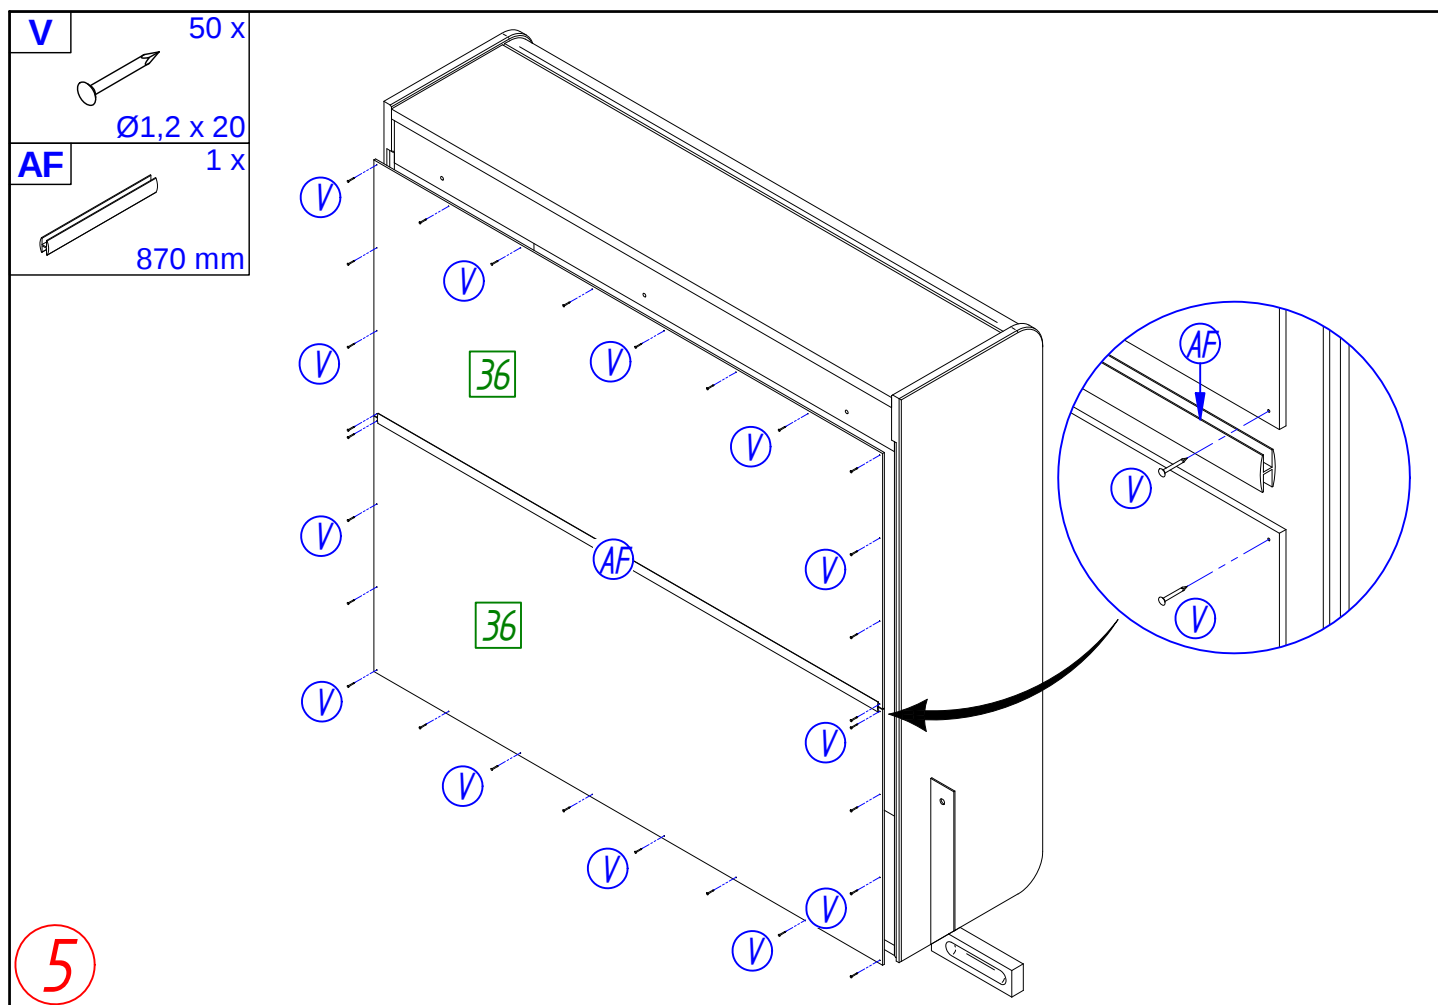

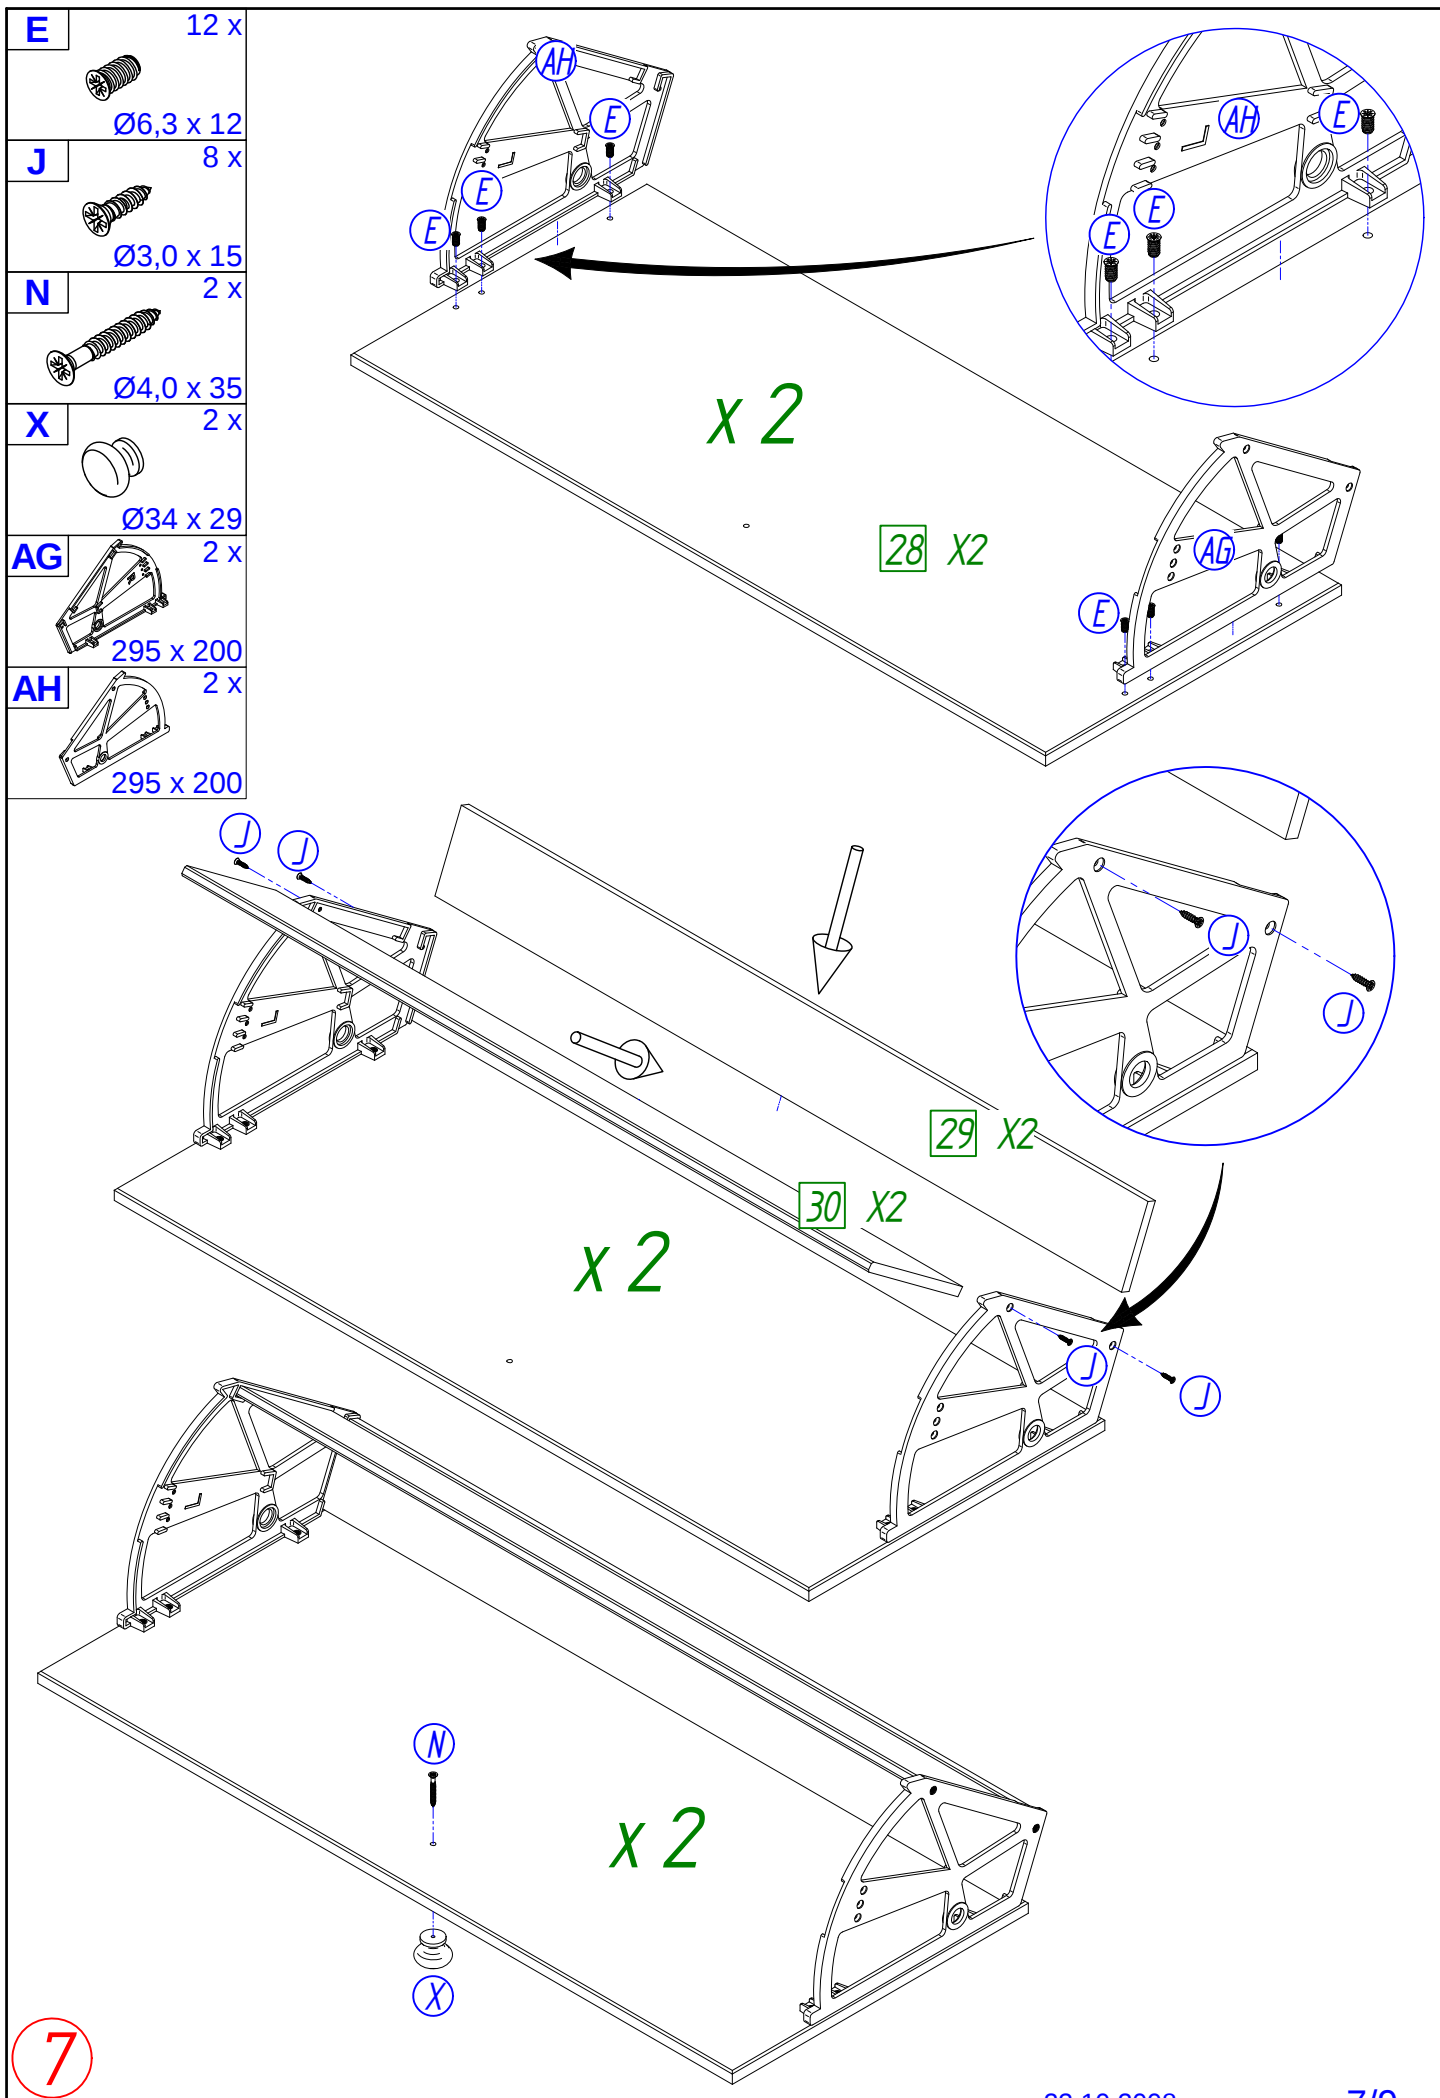

E	4 x	AJ	4 x
			
Ø6,3 x 12		Ø20	

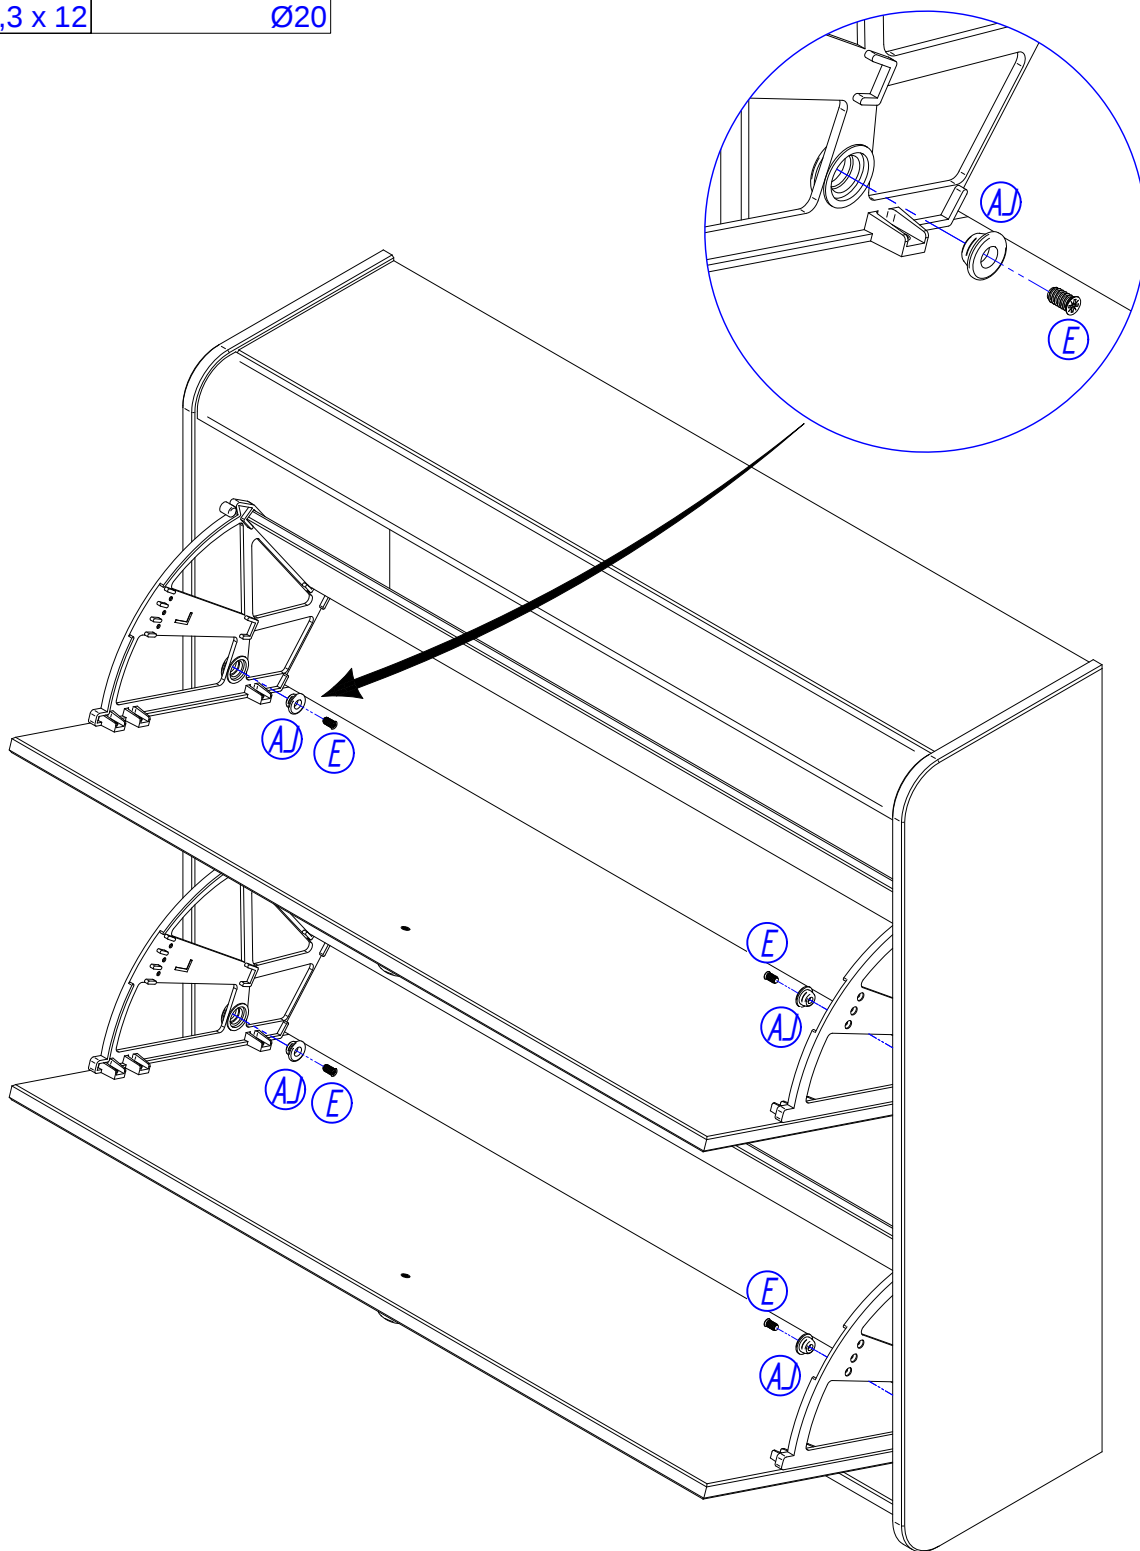 


J

4 x



 Ø3,0 x 15

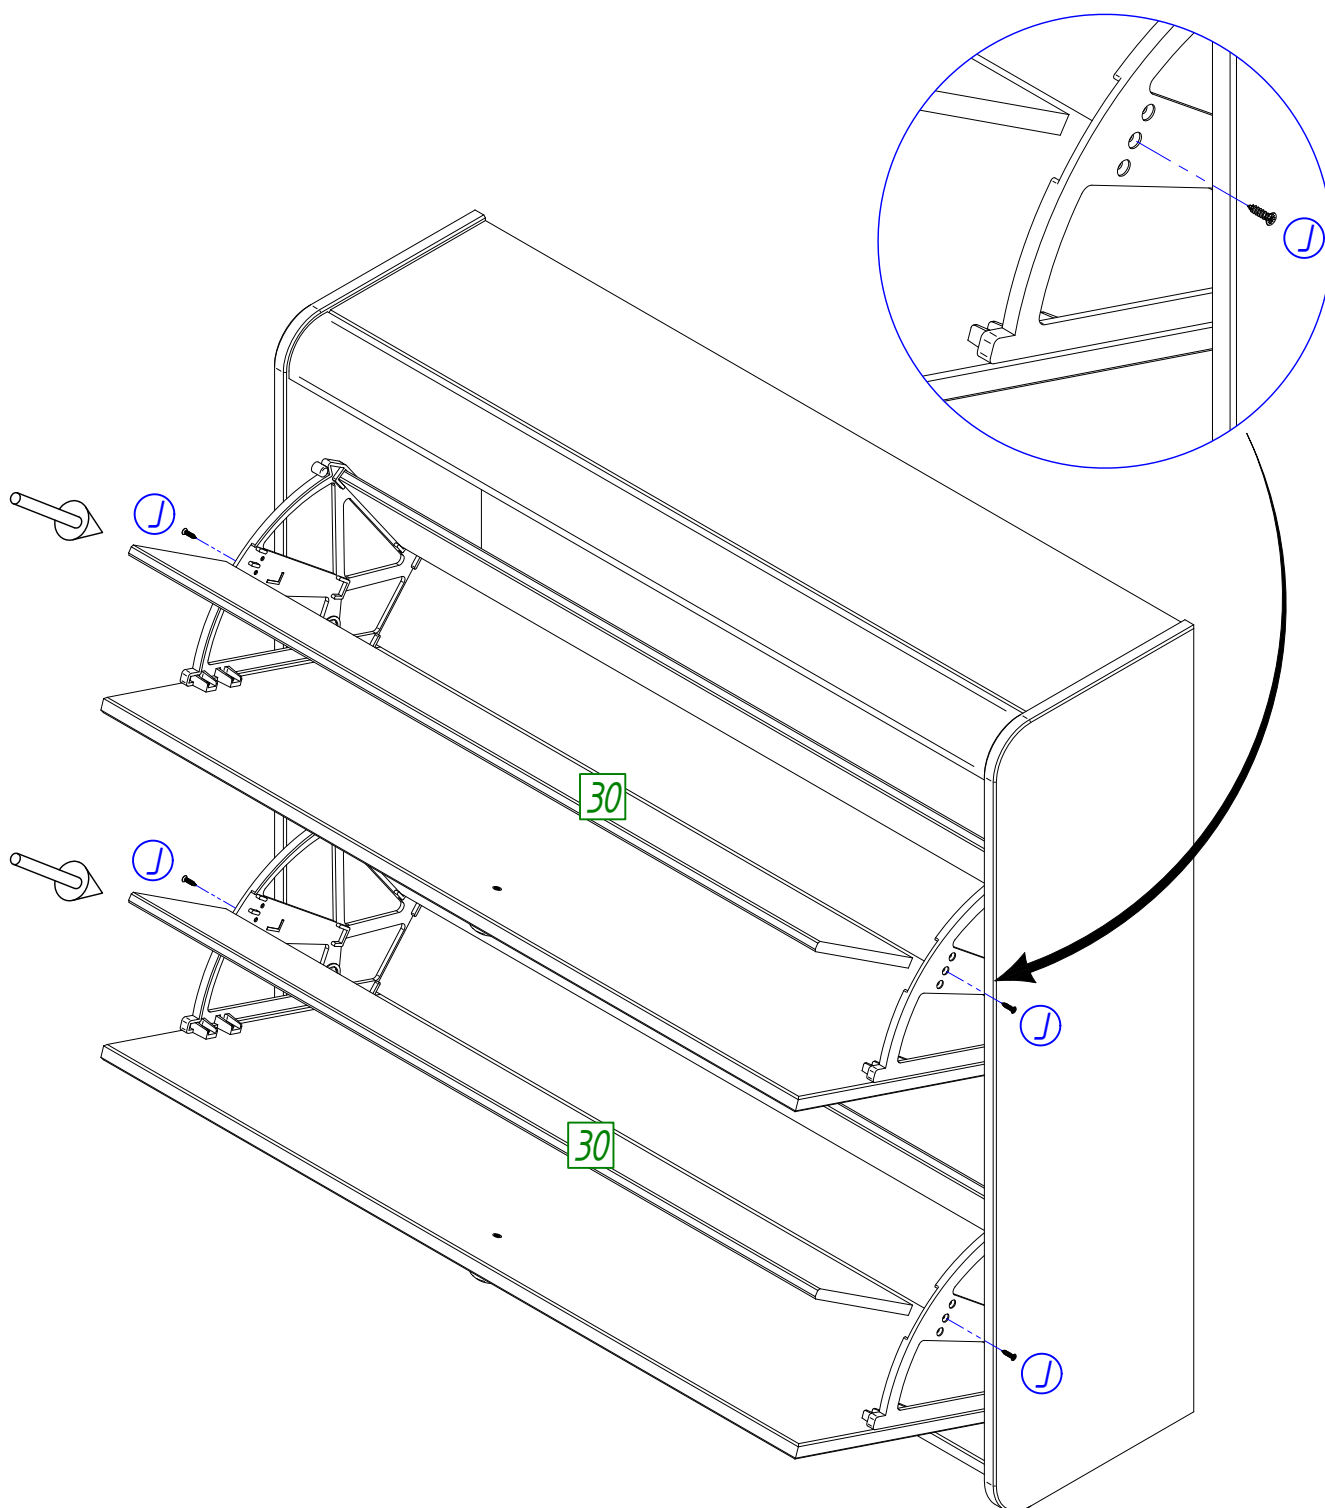**9**