



Assembly Instruction

Model : Katie 4 Door Pantry

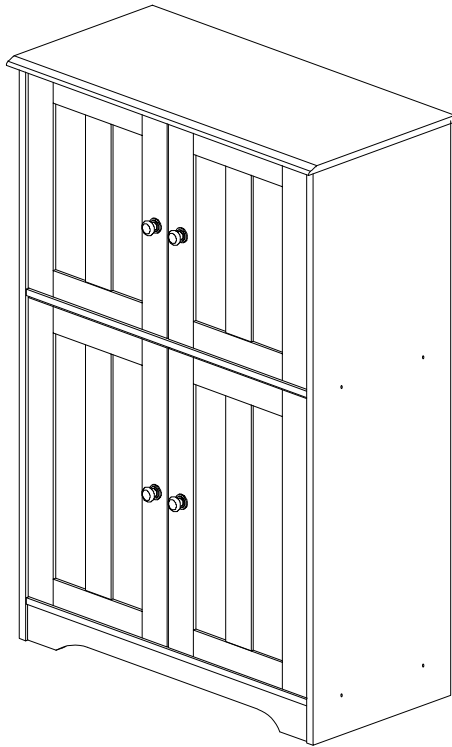

Hardware List


No.	Picture	Description	Qty
1		Wood Dowel - Ø8x30mm	22 pcs
2		Cam Bolt	4 pcs
3		Cam Lock - 12mm	4 pcs
4		Screw - #8 x 5/8"	32 pcs
5		Screw - M4 x 30mm	4 pcs
6		Screw - M8 x 38mm	8 pcs
7		13mm Screw Cap	8 pcs
8		Nail	26 pcs
9		2 Pin Stopper	2 pcs
10		Round Ball Handle	4 pcs
11		Nail Leg	4 pcs
12		Hinges	8 pcs
13		Cam Lock Cap	4 pcs
14		Shelf Stub	12 pcs
15	(a)	Safety Bracket	1 pcs
	(b)	Screw	1 pcs
	(c)	Screw	1 pcs
	(d)	Wall Plug	1 pcs

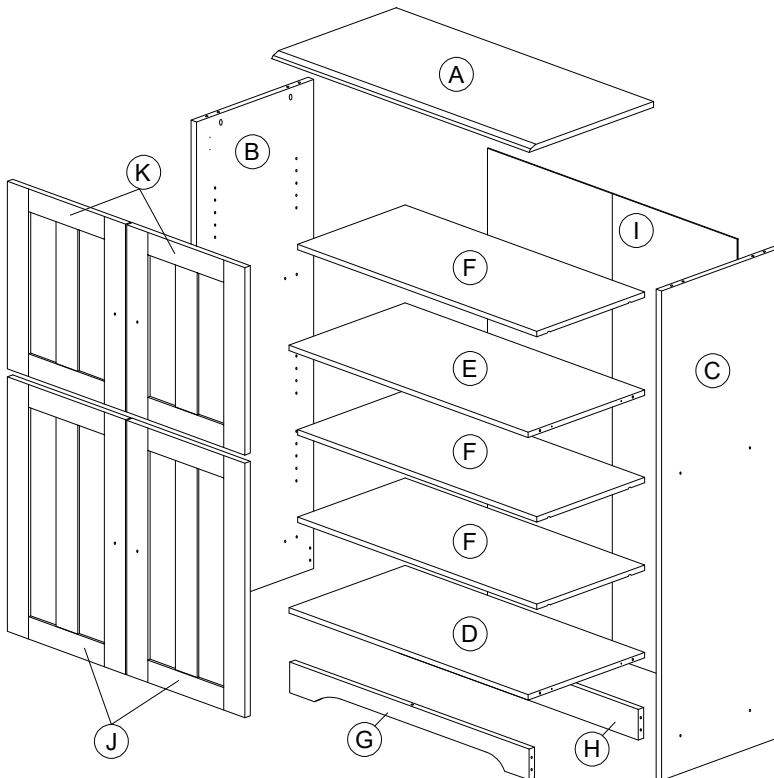

Part List

Label	Description	Qty
A	Top Panel	1
B	Left Panel	1
C	Right Panel	1
D	Bottom Panel	1
E	Fixed Panel	1
F	Adjustable Panel	3
G	Crossbar Front	1
H	Crossbar Back	1
I	Back Panel	1
J	Lower Door Panel	2
K	Upper Door Panel	2


Dowel / Cam - Lock Installation

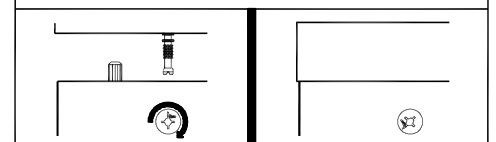

Assembly Instruction


STEP 1

Install 22pcs Wood Dowel (1) into panel (B), (C), (D), (E), (G), and (H).

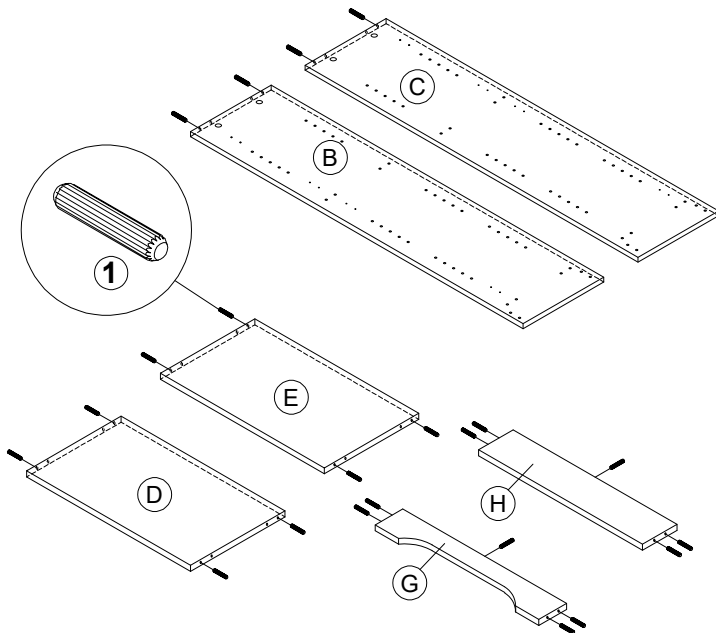


STEP 2

Install 4pcs cam bolt (2) into panel (A).
Install 2pcs stopper (9) into panel (A) & (E).
Install 1 pcs safety bracket (15a) use screw (15b) into panel (A) and do not fully tighten the screw(15b)

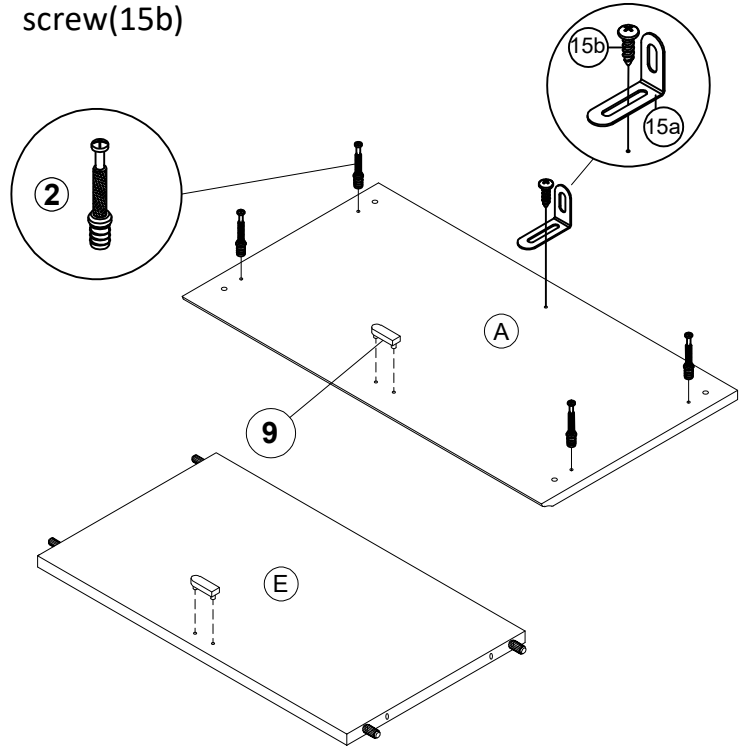


STEP 3

Attach panel (G) & (H) to panel (D).

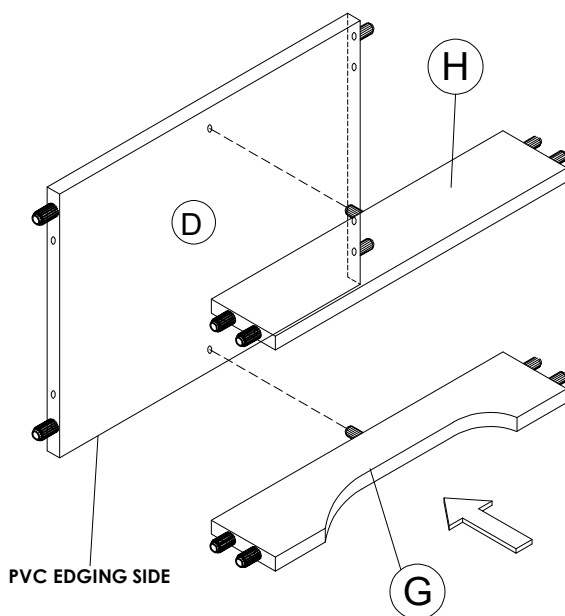

STEP 4


Attach panel (D), (E), (G) & (H) to panel (B) using 4pcs screw (6) with screwdriver to tighten board together.

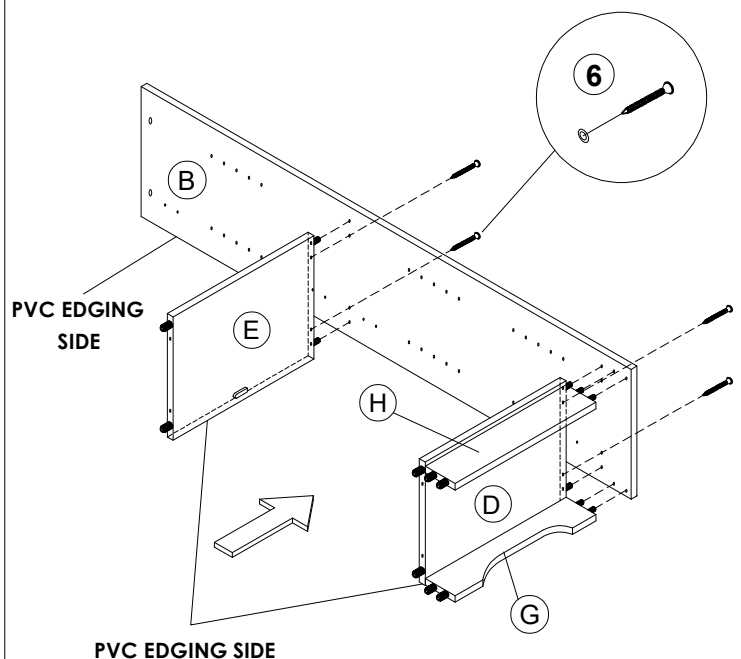

Assembly Instruction


STEP 5

Attach panel (C) to panel (D), (E), (G), and (H) using 4pcs screw (6) with screwdriver to tighten board together.

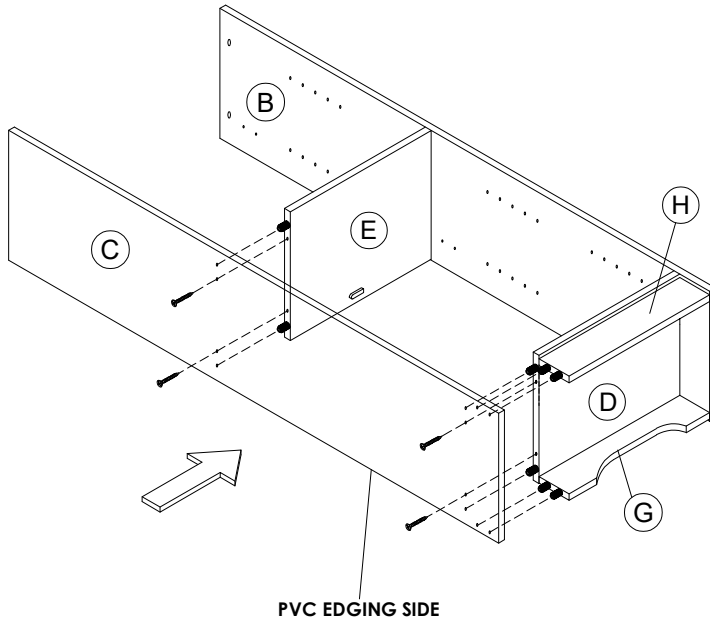


STEP 6

Attach panel (A) to panel (B) & (C) with 4pcs Cam Lock-12mm (3).

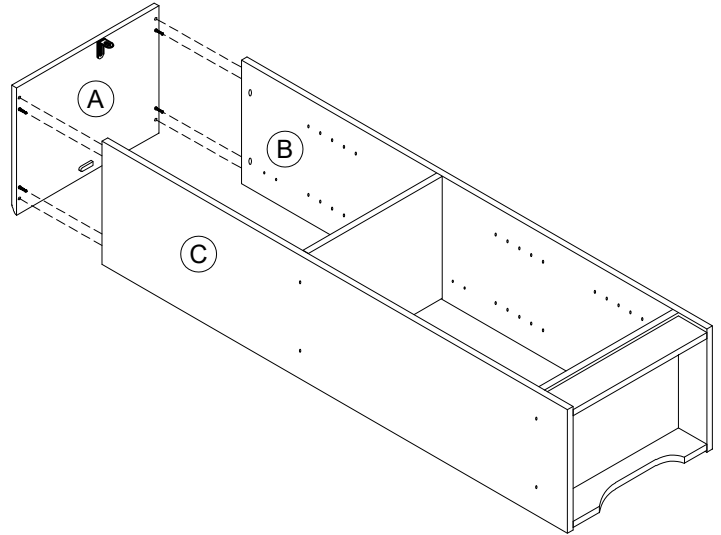


STEP 7

Attach panel (I) arrow on top with 26pcs nail (8) marking line as shown below. Attach 4pcs nail leg (11) at bottom of panel (B) and (C)

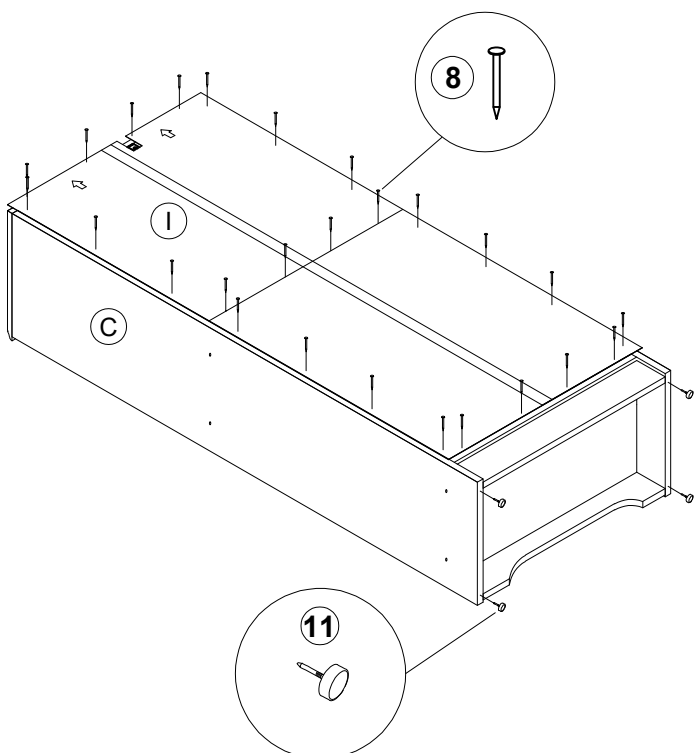

STEP 8


Insert 12pcs shelf stub (14) to panel (B) & (C) as shown.

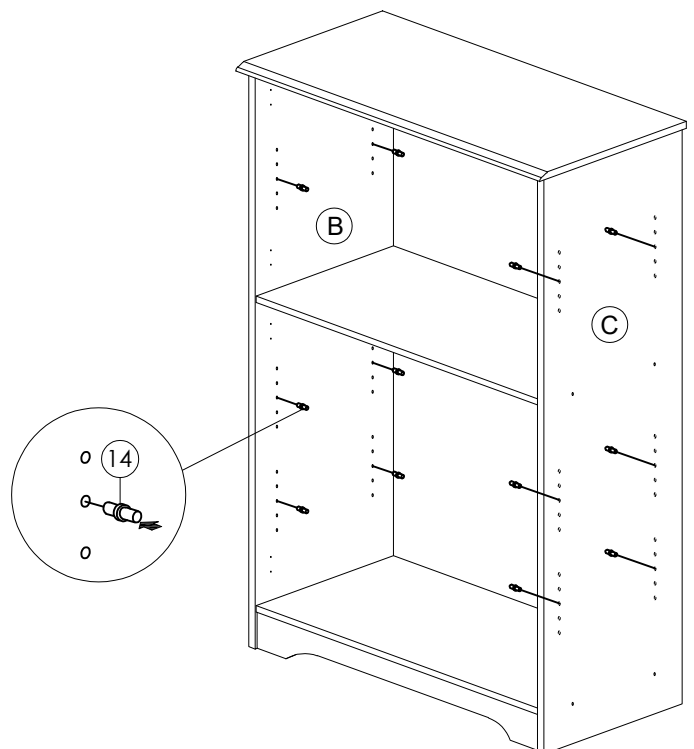

Assembly Instruction


STEP 9

Insert panel (F) and rest all on top of shelf stub.

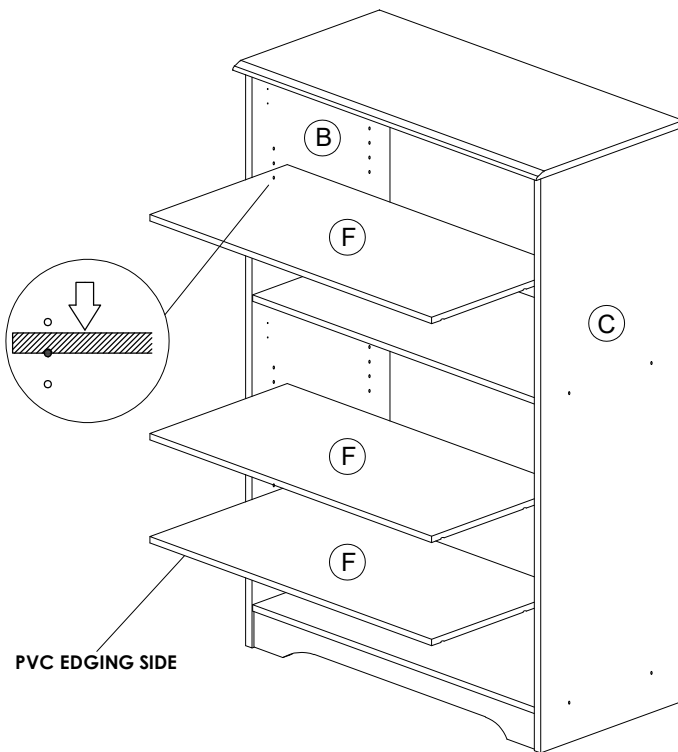


STEP 10

Install 8pcs hinges (12) to panel (J) and (K) with 16pcs screw (4) as shown below. Install 4pcs handle (10) to panel (J) and (K) with 4pcs screw (5) as shown.

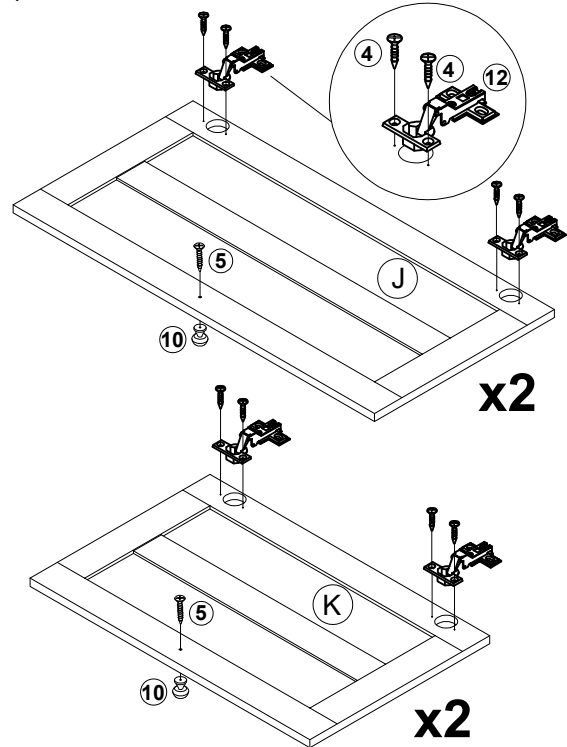


STEP 11

Attach 4pcs Cam Lock Cap (13) to 4pcs Cam Lock - 12mm (3). Assembly panel (J) and (K) with 16pcs screw (4)

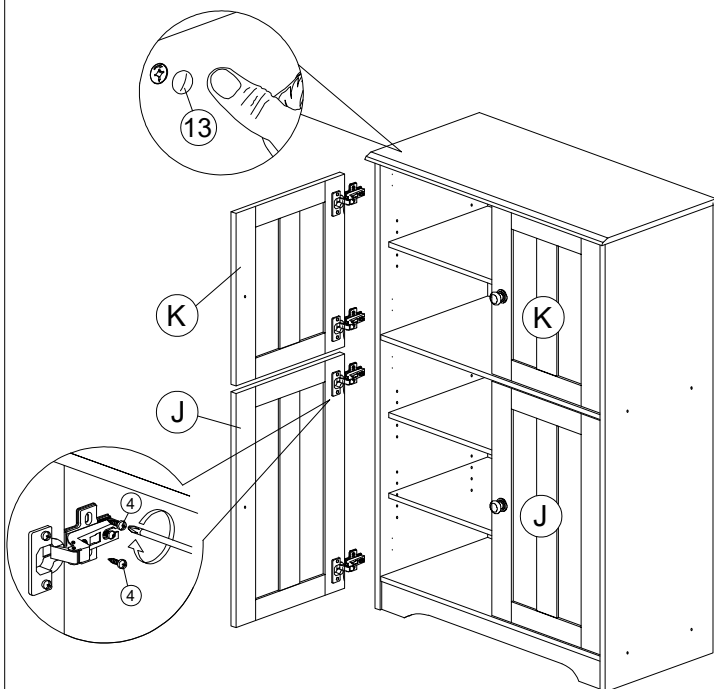

STEP 12


Attach 8pcs screw cap (7) to both side panel as shown.

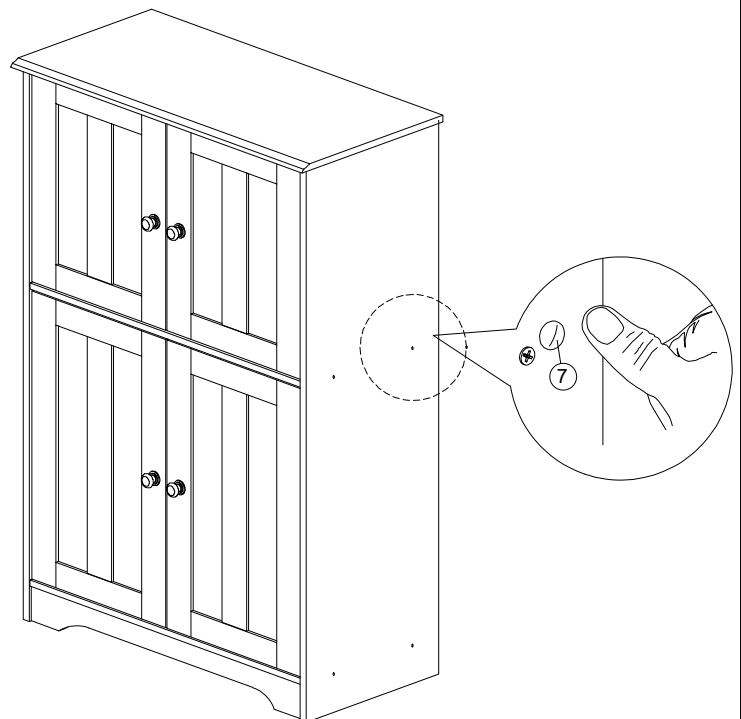

Assembly Instruction


STEP 13

Move the cabinet against the wall where it will be placed. mark on the wall through the hole on safety bracket (15a). Drill 1 hole in the wall using a drill hole size of 6mm diameter to insert the wall plug.

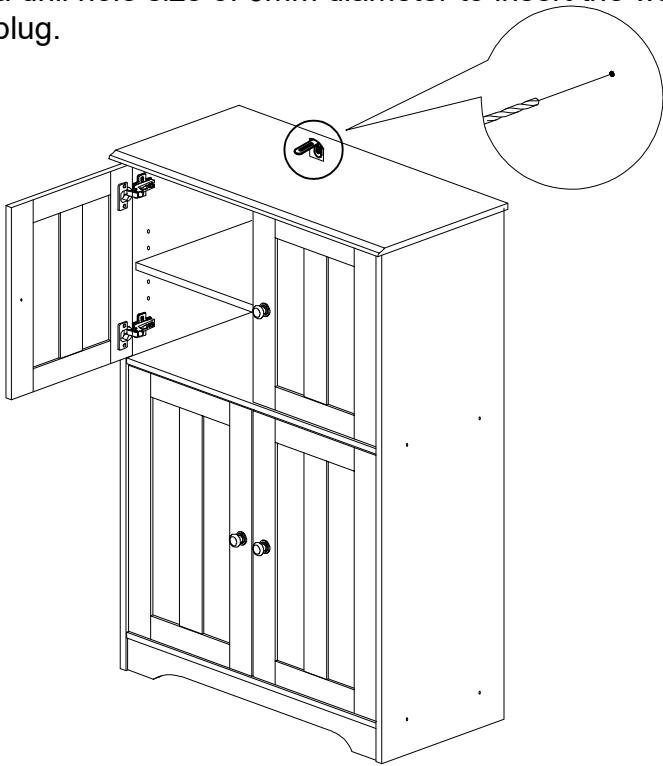

STEP 14

Use a hammer, insert 1pcs wall plug (15d) into the hole that have been drilled.

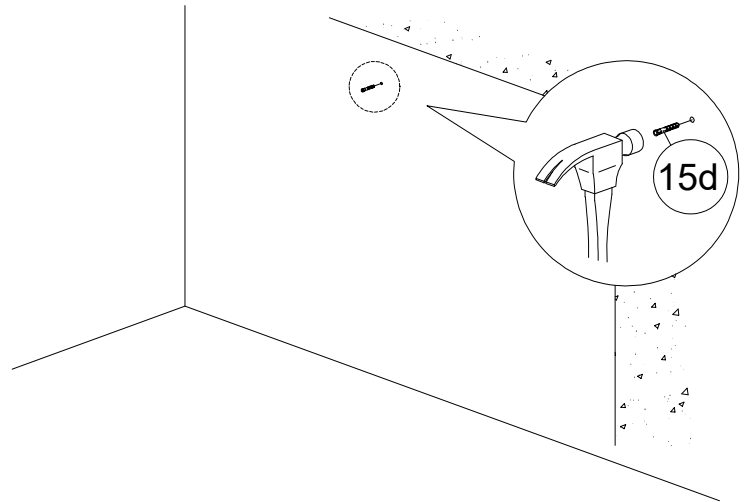

STEP 15

Move your unit into location and fasten the safety bracket(15a) to the wall plug(15d) with the screw(15c).Tighten the screw that was not fully tightened in Step 2.

