





Hilma

45950

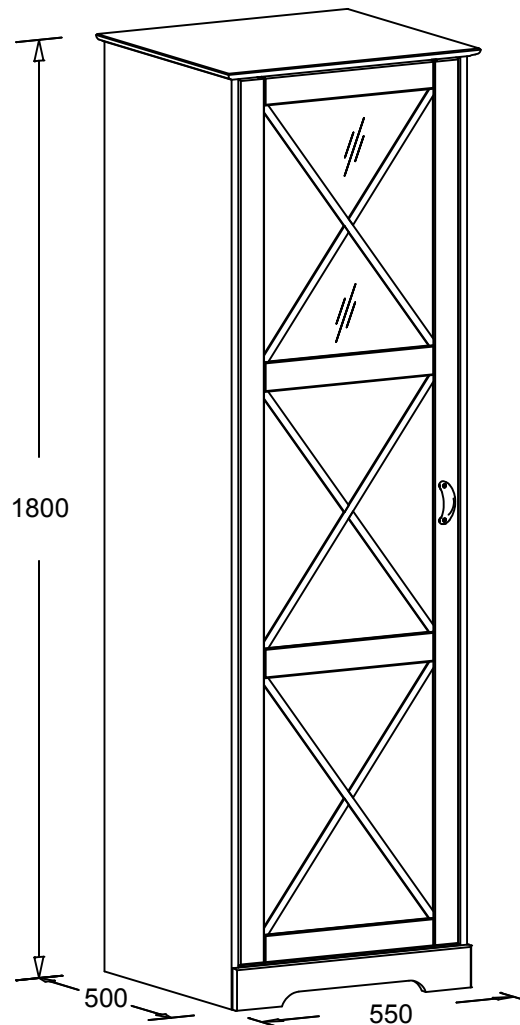

- D **Montageanleitung**
- NL **Handleiding voor de montage**
- TR **Montaj talimatı**
- FR **Instructions d' assemblage**


- GB **Assembly instructions**
- PL **Instrukcja montażu**
- RU **Инструкция по монтажу**

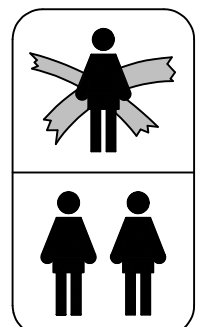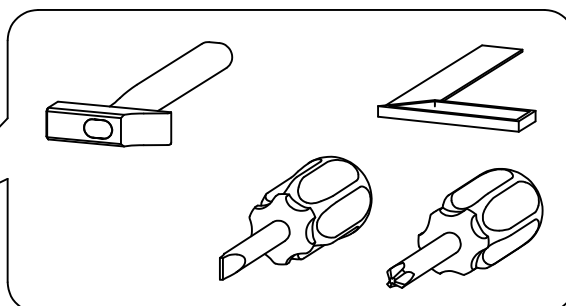
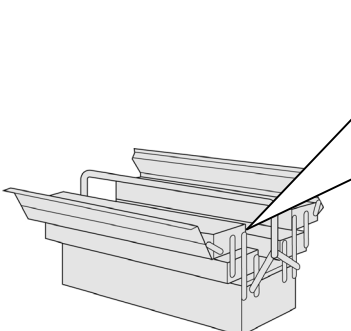






Service • Dienstverlening • Serwis • Servis • Сервисная служба	
Name • Naam • Nazwa • Nom • İsim • Название	
Nr. • No. • Номер	
Typ • Type • Tip • Тип	

Ac x 8 ø8 x 30mm	Ba x 10 ø6,3 x 12mm	C x 3 2mm	Ca x 3 ø26mm	Ea x 8 ø3,5 x 15mm
Eo x 1 ø4 x 60mm	Er x 2 ø3 x 12mm	Er x 2 ø3 x 12mm	G x 12 ø5 x 11mm / cc34	Ga x 12 ø15 x 11mm
I x 50 1,2 x 20mm	Ib x 1 	K x 5 20 x 20 x 16 x 2mm	Kc x 1 20 x 42 x 70 x 1,7mm	L x 2 ø7 x 15mm
M x 2 ø25, ø5 x 7mm	N x 6 ø5/ø5mm	Pp x 1 cc66mm		

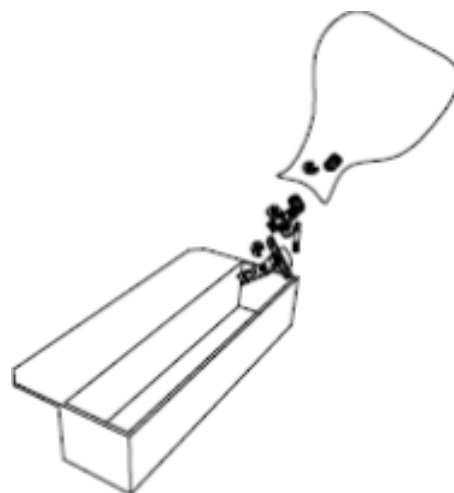

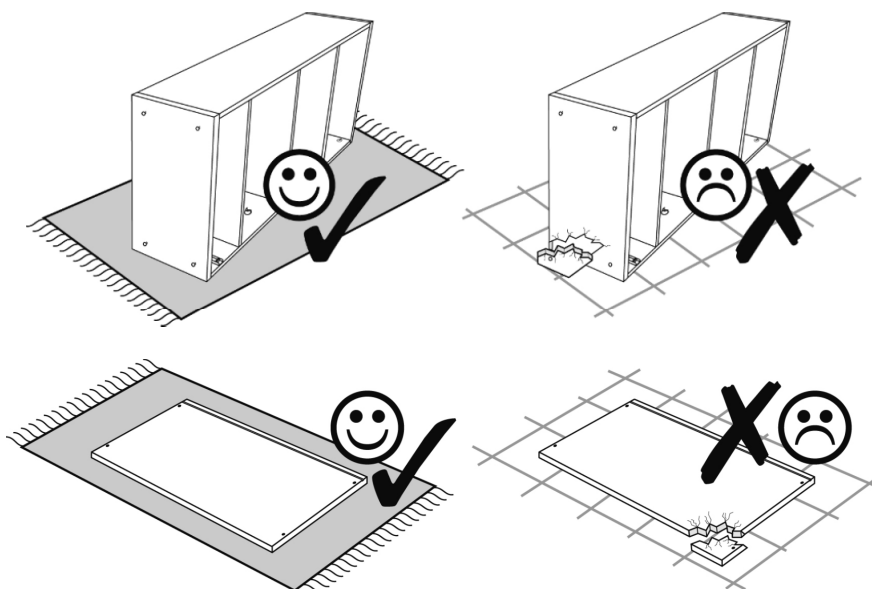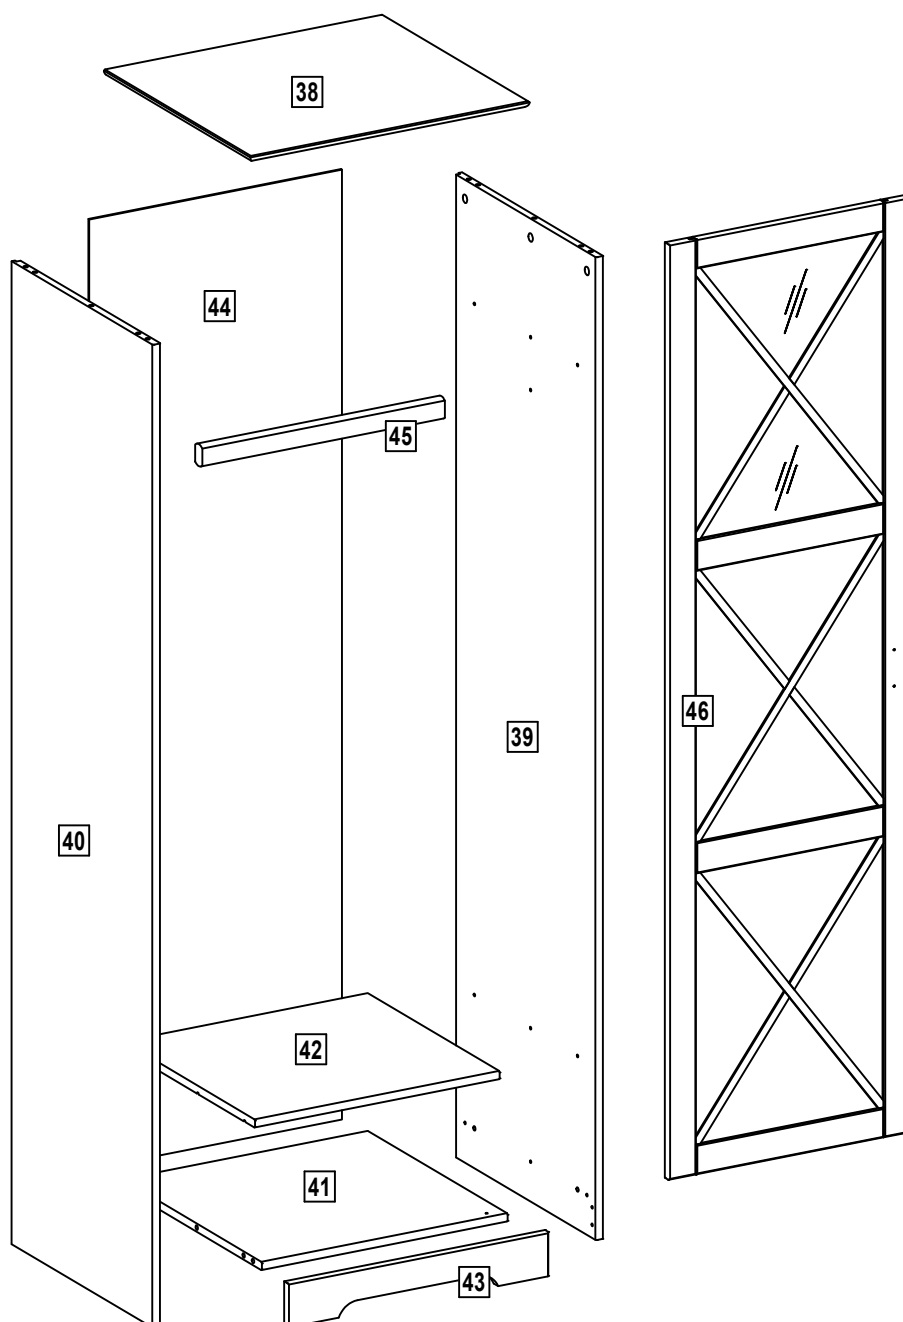

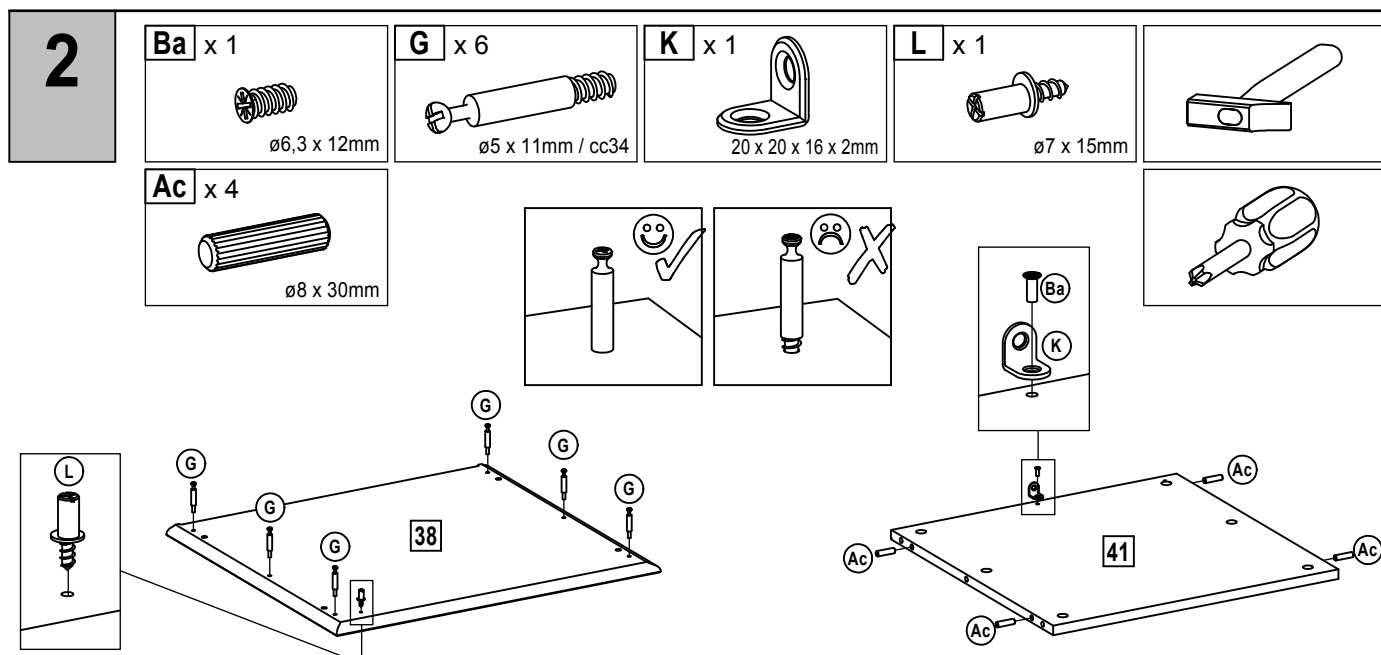
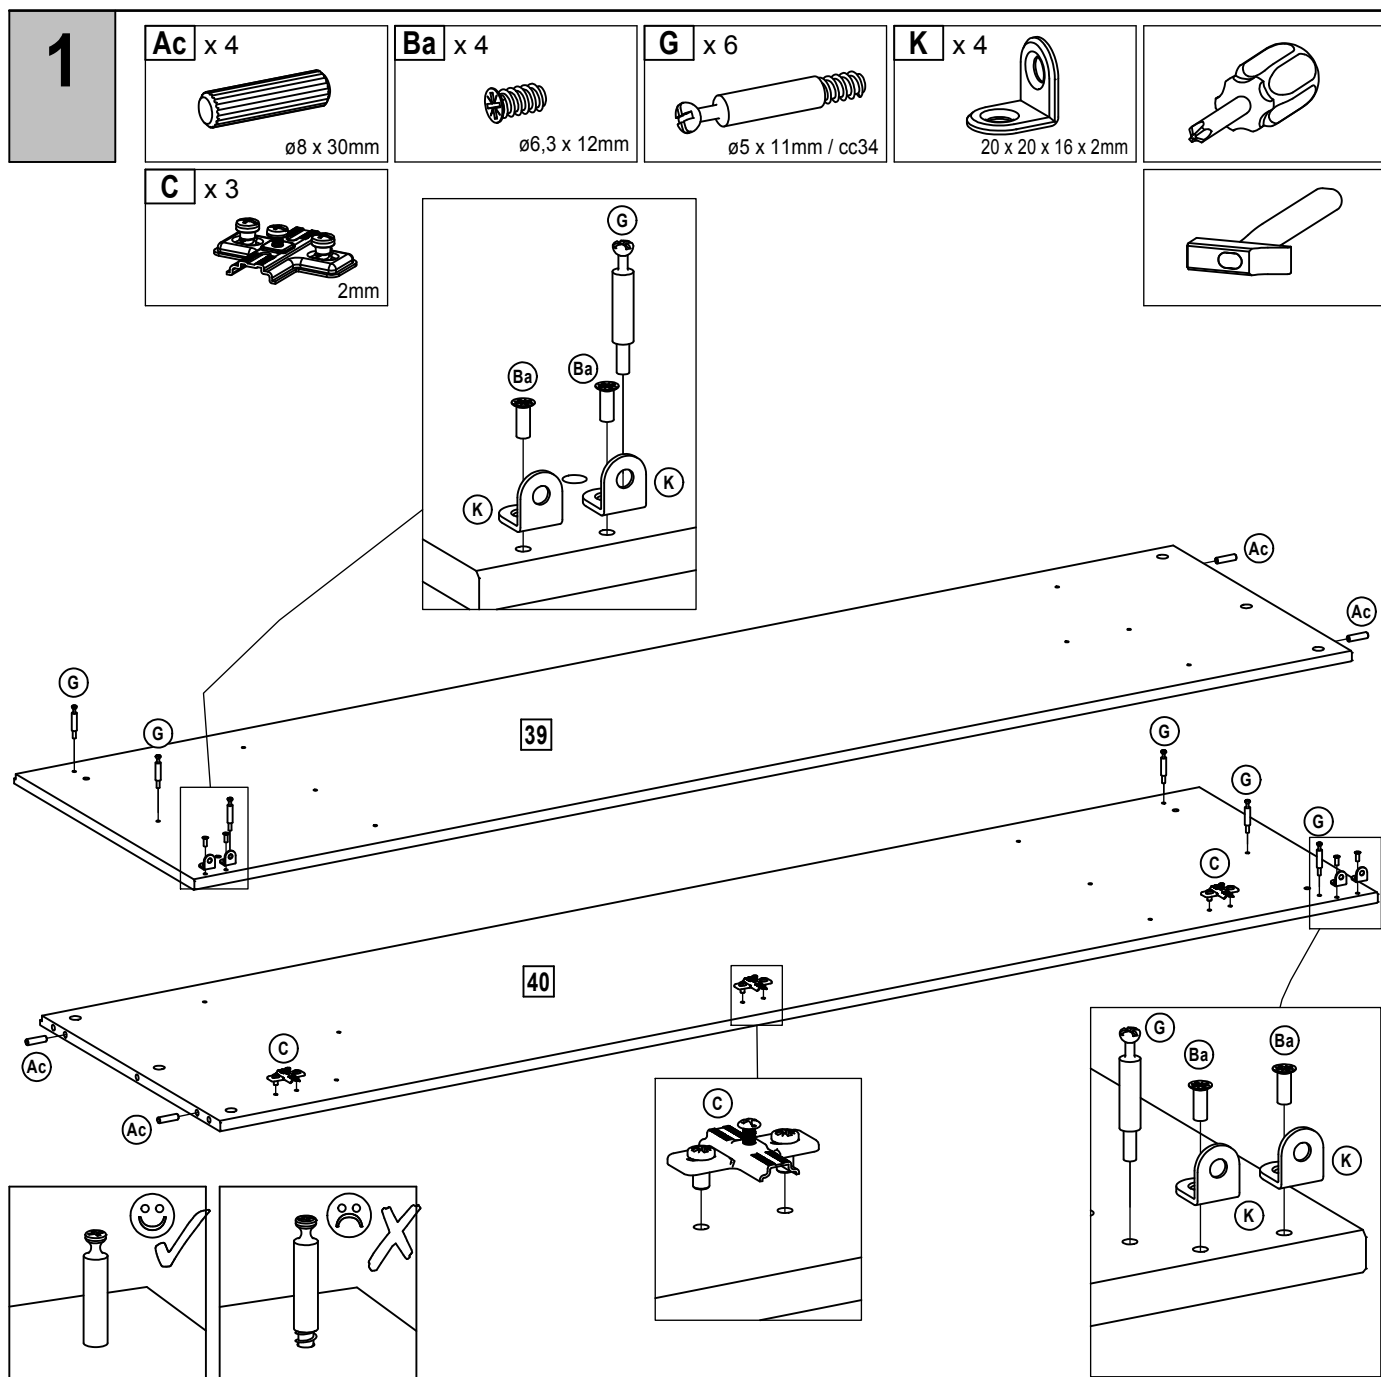


3

Ga x 6



ø15 x 11mm

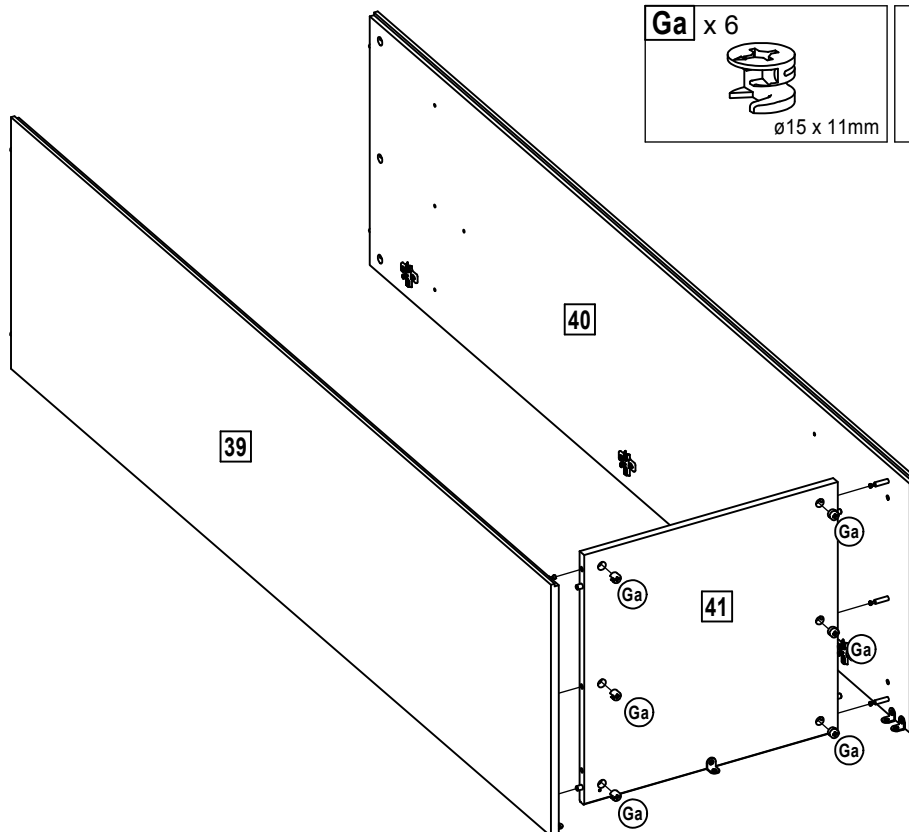

4

Ba x 5






ø6,3 x 12mm






Ga x 6








ø15 x 11mm

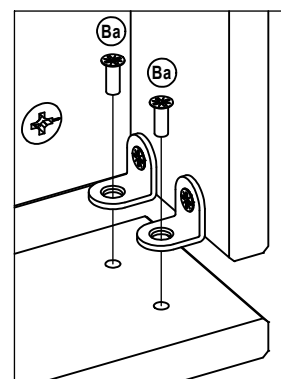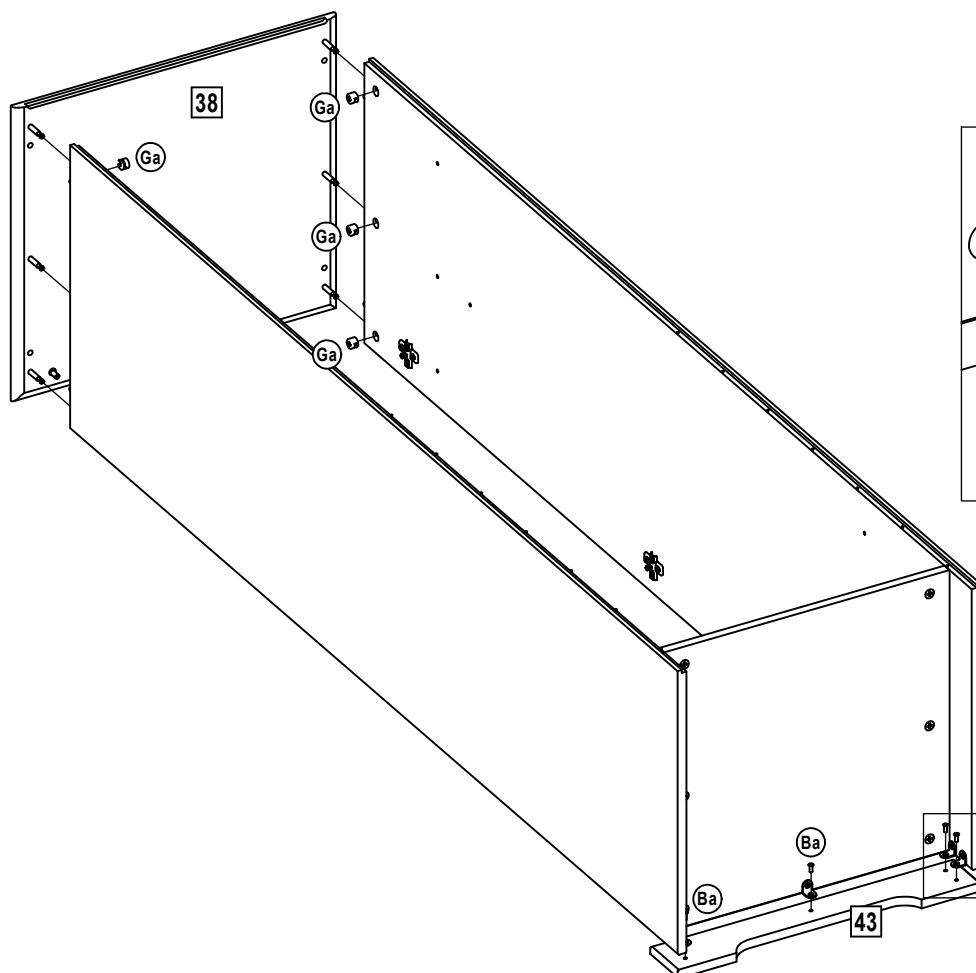






5

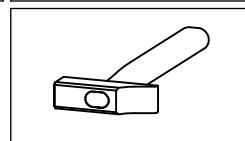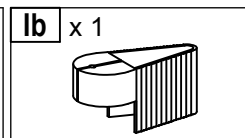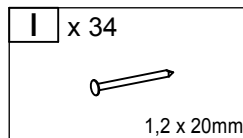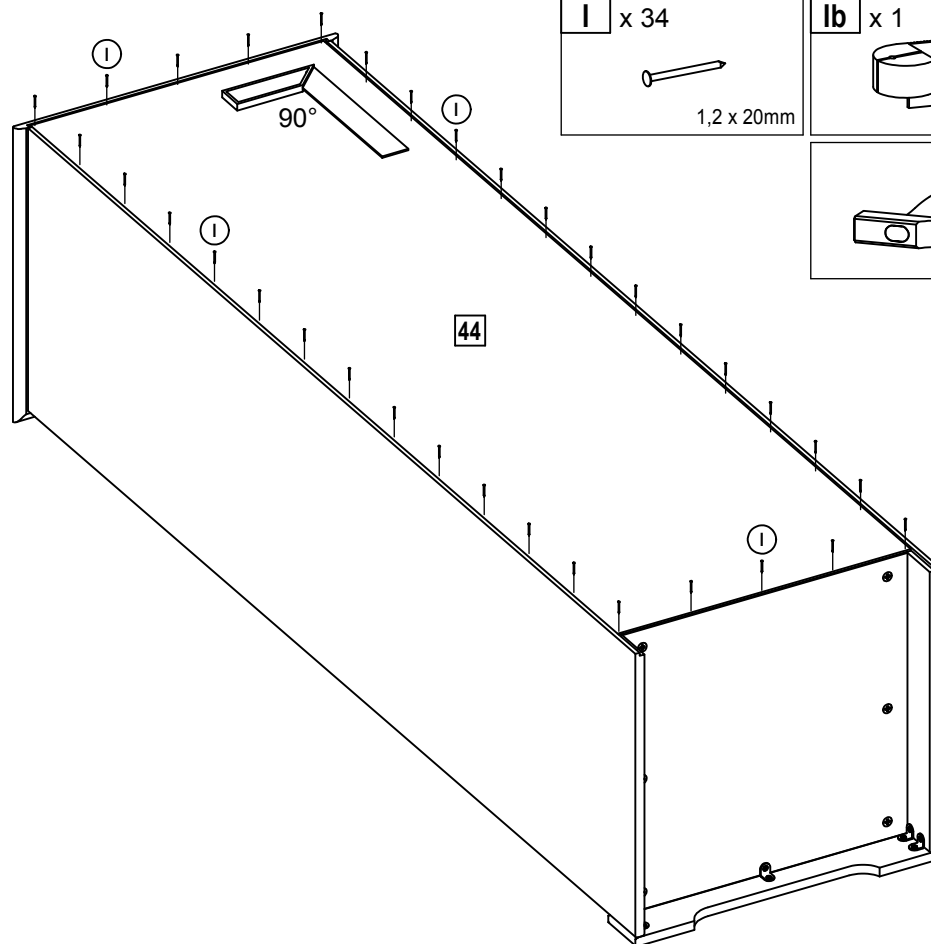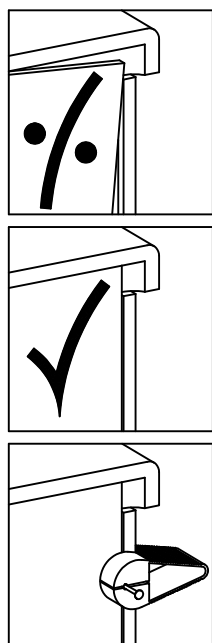

6

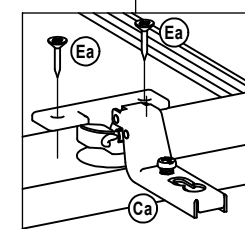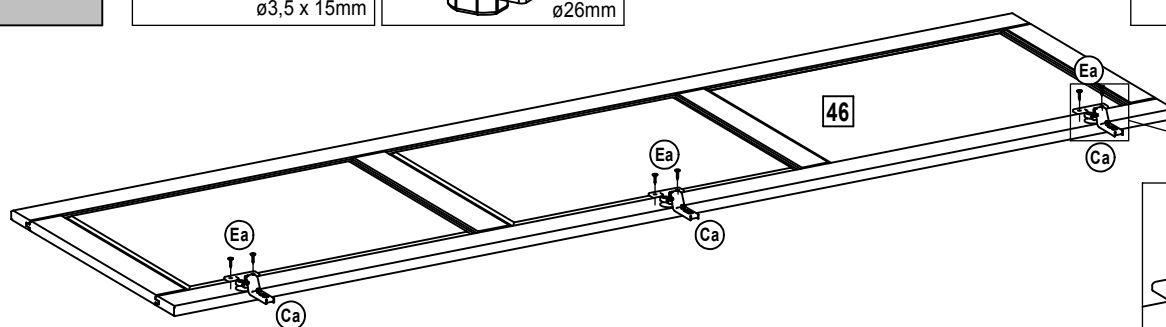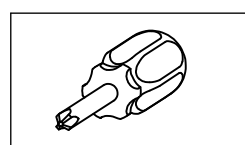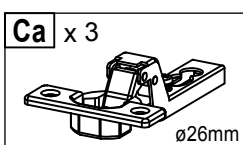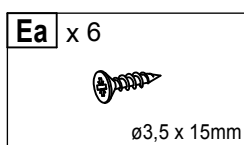

7

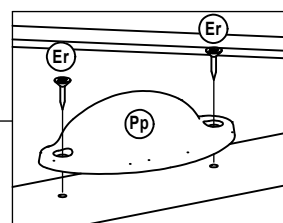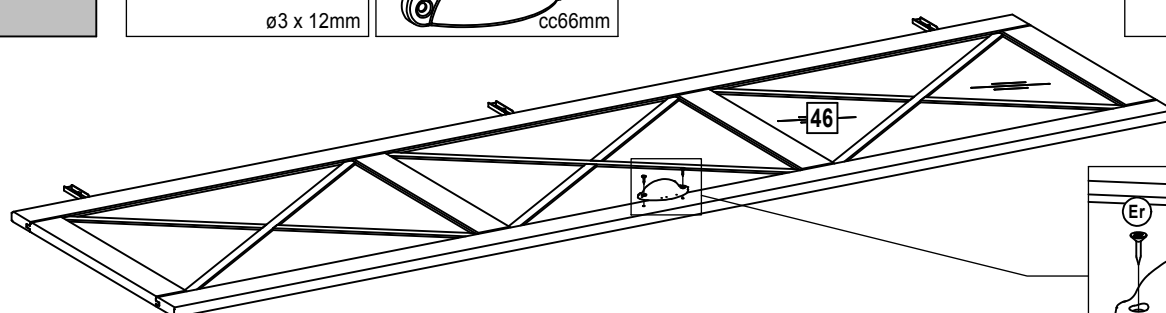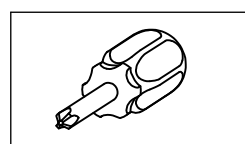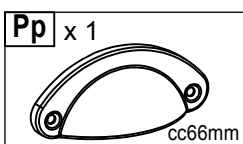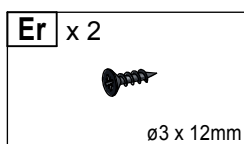

8

Ea x 2




ø3,5 x 15mm

Eo x 1






ø4 x 60mm

Kc x 1



20 x 42 x 70 x 1,7mm

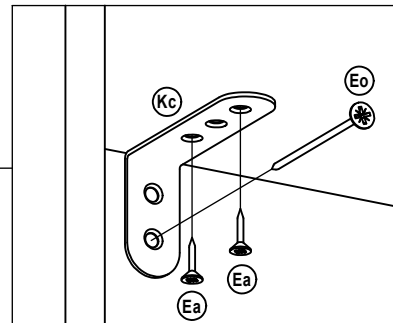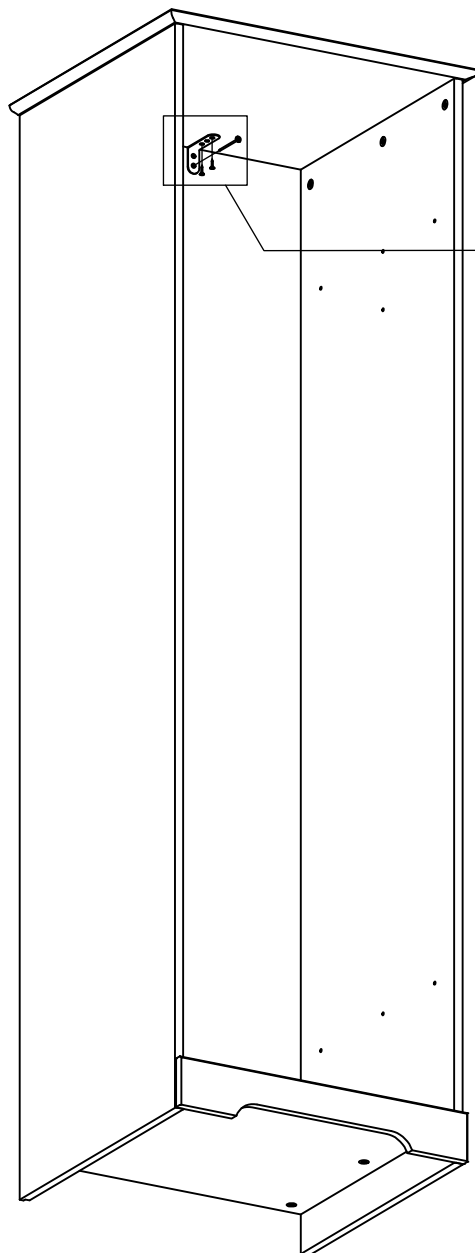

⚠	Achtung ▪ Attention ▪ Opgelet ▪ Uwaga ▪ Dikkat ▪ Внимание	⚠
(D)	Wandbefestigung dient als Kippschutz - unbedingt anbringen! Bei einigen Wandtypen kann ein Spezialdübel erforderlich sein!	
(GB)	The wall fastening serves to prevent tipping - be absolutely sure to mount it! For certain walltypes, a special dowel may be necessary!	
(NL)	Bevestiging aan de muur dient als kantelbescherming - zeker en vast bevestigen! Bij enkele muurtypes is een speciale plug misschien vereist!	
(PL)	Mocowanie do ściany jest jednocześnie zabezpieczeniem przed przewróceniem - koniecznie zamontować! Do niektórych rodzajów ścian konieczne mogą być specjalne wkręty!	
(TR)	Duvardaki sabitleme, devrilmeye karşı bir emniyet tedbiridir ve mutlaka monte edilmelidir! Bazı duvar tiplerinde bunun için özel bir dübel gerekli olabilir!	
(RU)	Обязательно установите крепление на стене во избежание опрокидывания! Для некоторых типов стен может потребоваться специальный дюбель!	
(F)	Assurez vous de la nature de votre mur et utilisez les chevilles adaptées. Ne pas hésiter à emmener la vis une pour obtenir les chevilles de.	

9

Er x 2



ø3 x 12mm

L x 1



ø7 x 15mm

M x 2





ø25, ø5 x 7mm

N x 6



ø5/ø5mm

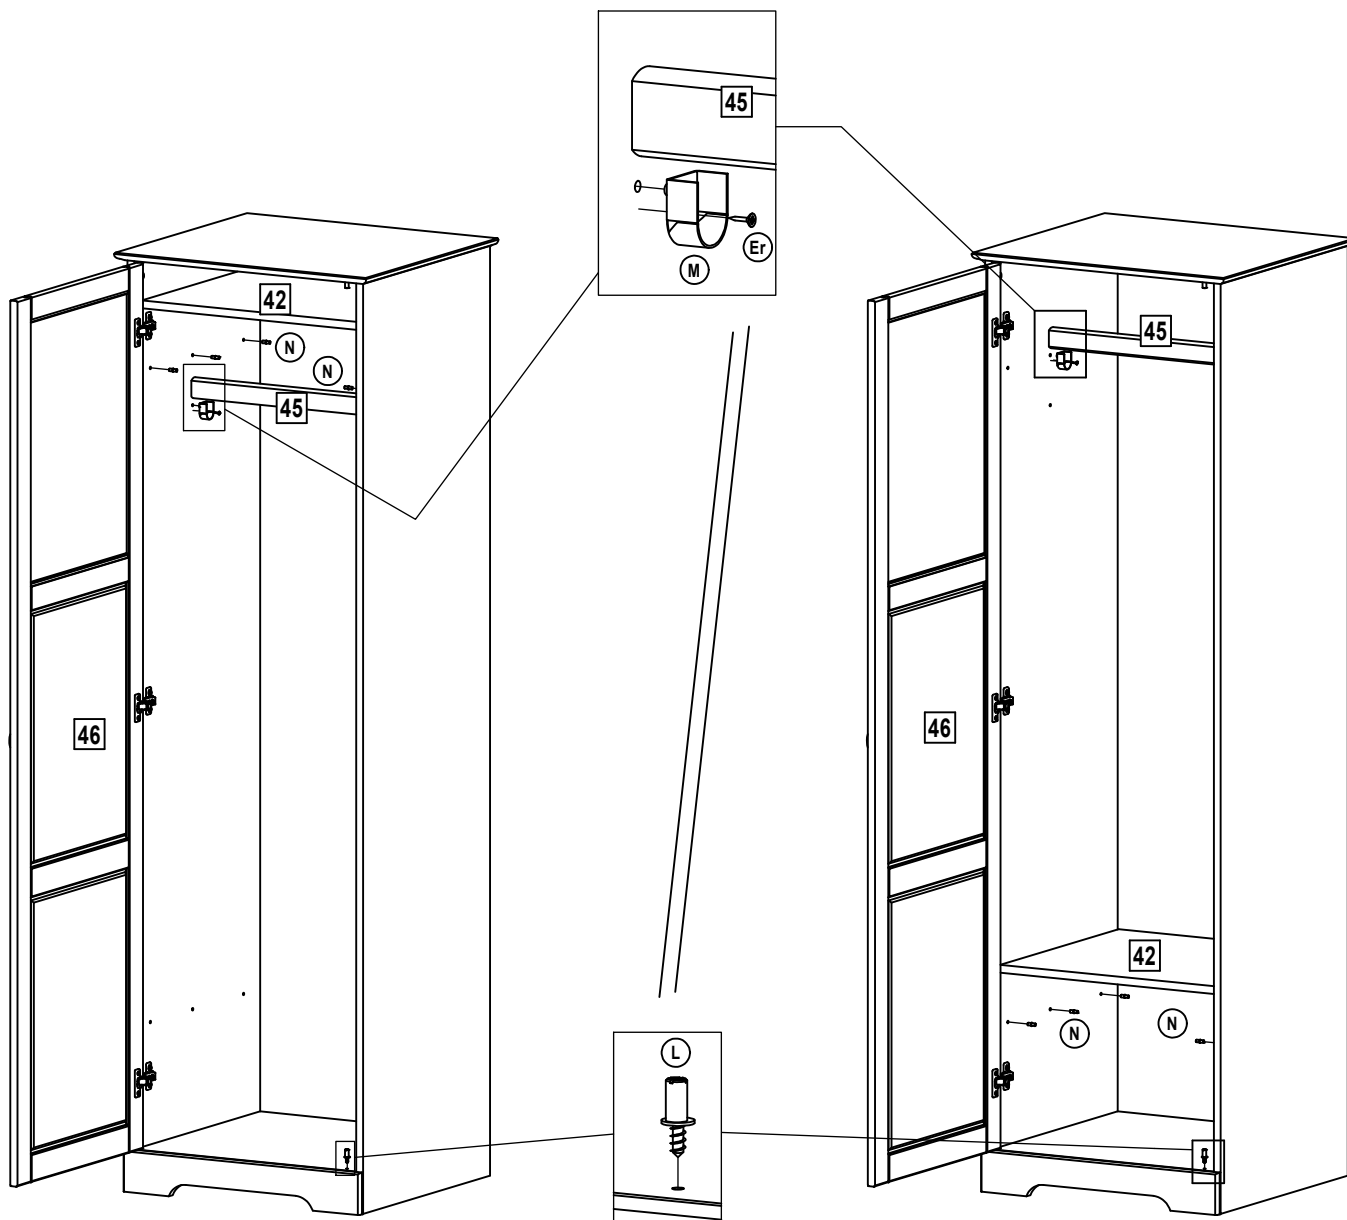

10

