


Kubo 57337

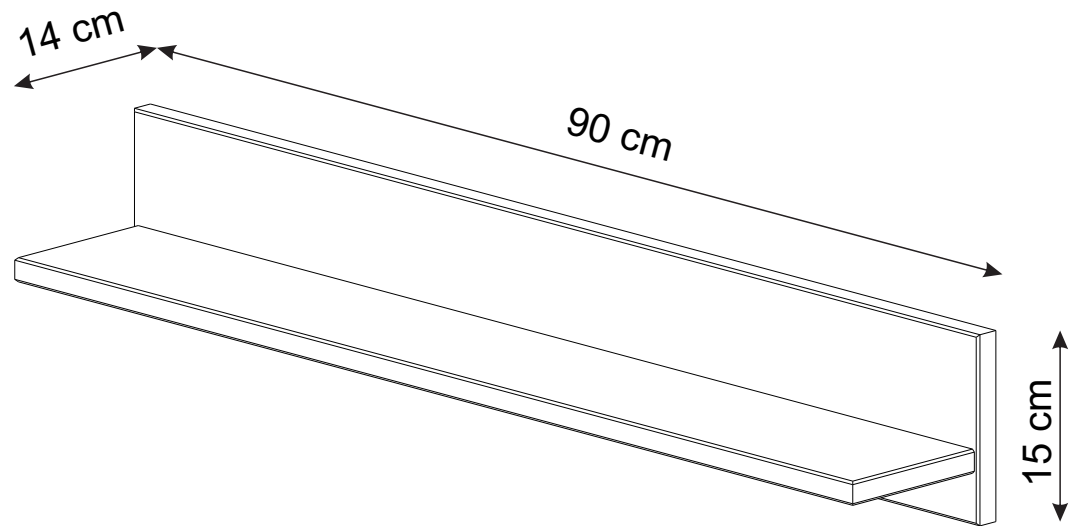

(D) Montageanleitung
57337

(FR) Notice de montage
57337

(NL) Handleiding voor de montage
57337

(CZ) Montážní návod
57337

(HU) Szerelési útmutató
57337

(TR) Montaj talimatı
57337

(GB) Assembly instructions
57337


(IT) Istruzioni di montaggio
57337

(PL) Instrukcja montażu
57337

(SK) Návod na montáž
57337

(RO) Instrucțiuni de montaj
57337

(RU) Инструкция по монтажу
57337

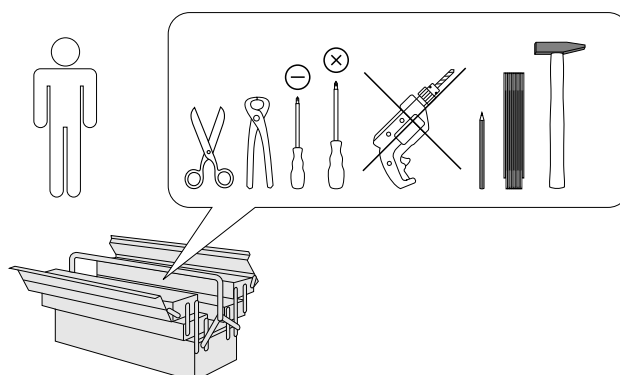

0
10
20
30
40
50
60
70
80
90
100
110
120
130
140
150
160
170
180
190
200

Service • Dienstverlening • Serwis • Servis • Сервисная служба

Name • Naam • Nazwa • isim • Название

Nr. • No. • Homep

Typ • Type • Tip • Тип

A

4x40
4x

B

3x16
4x

C

8x30
3x




D

4,5x60
2x



E

4,5x60
2x


2

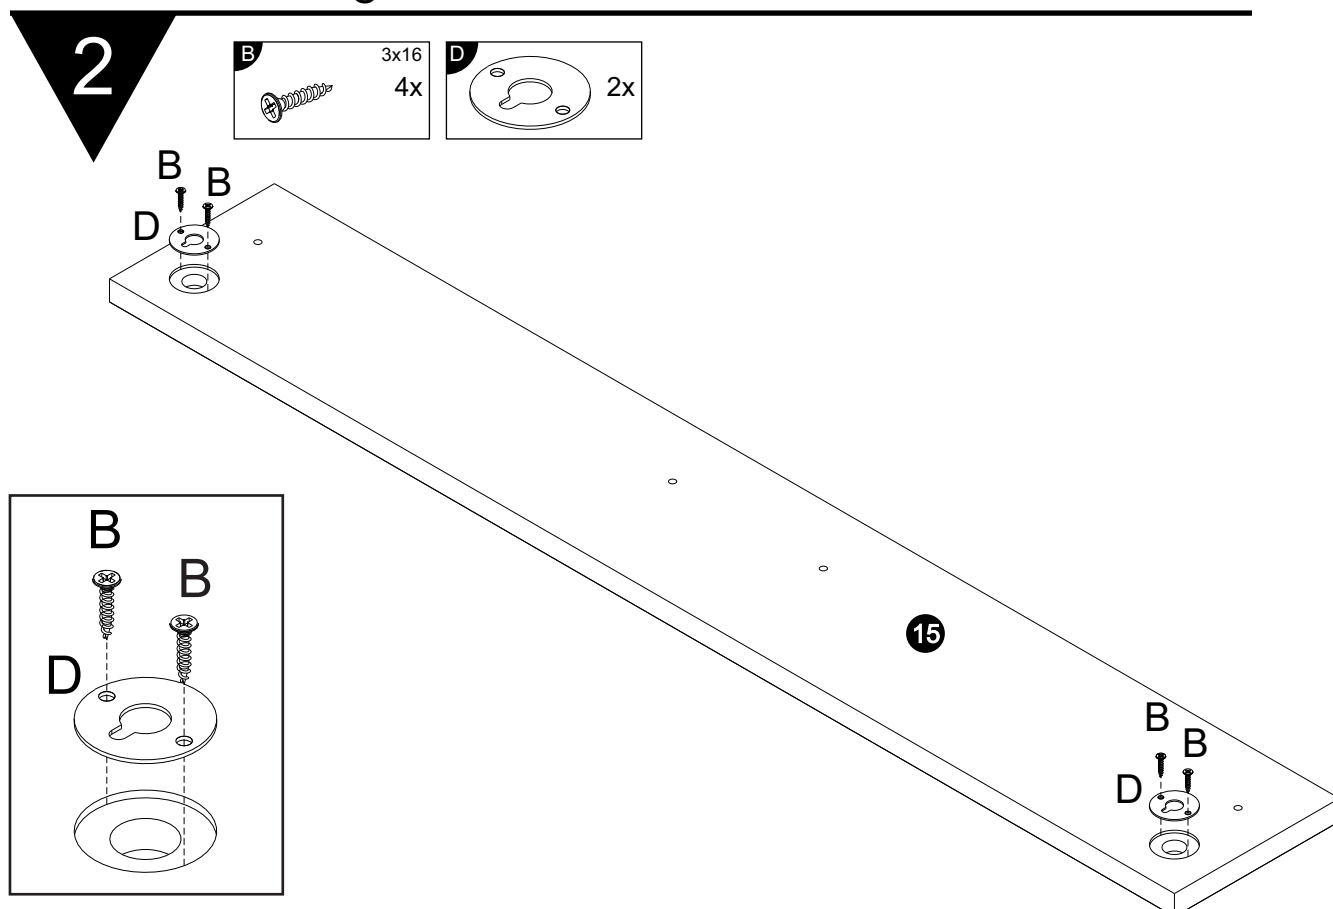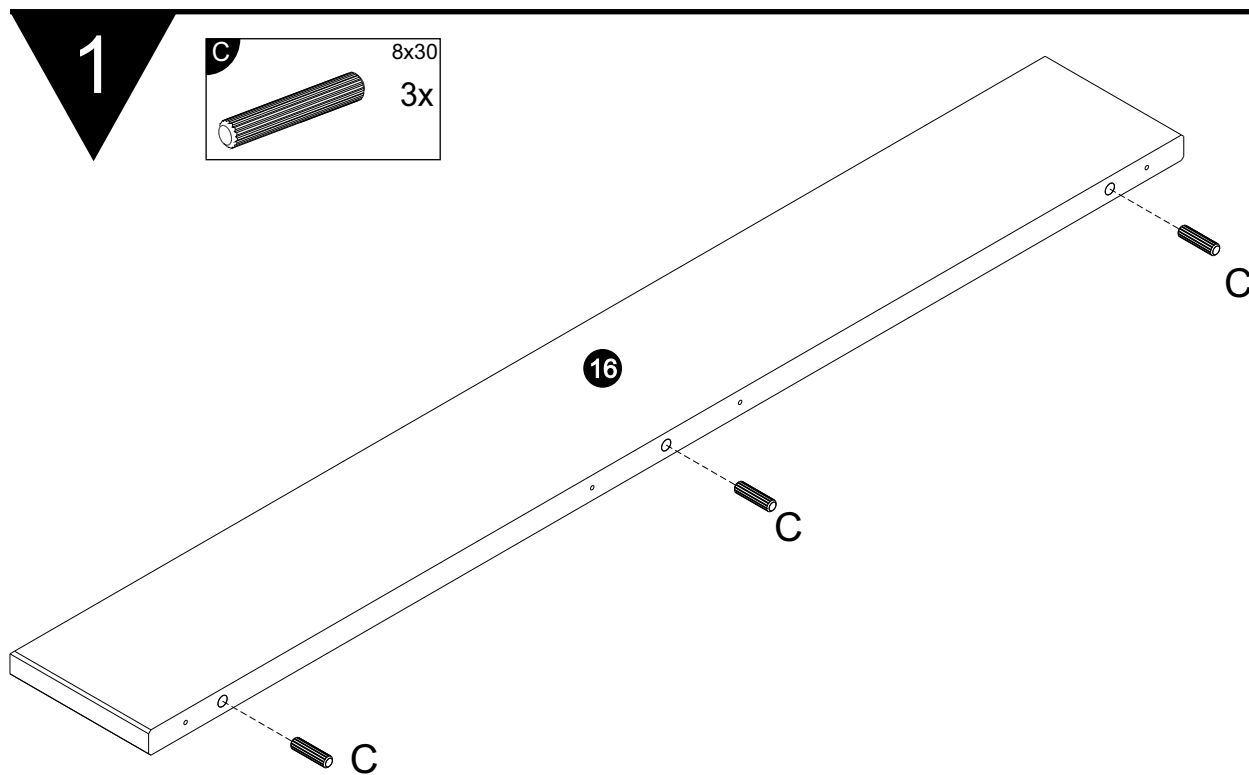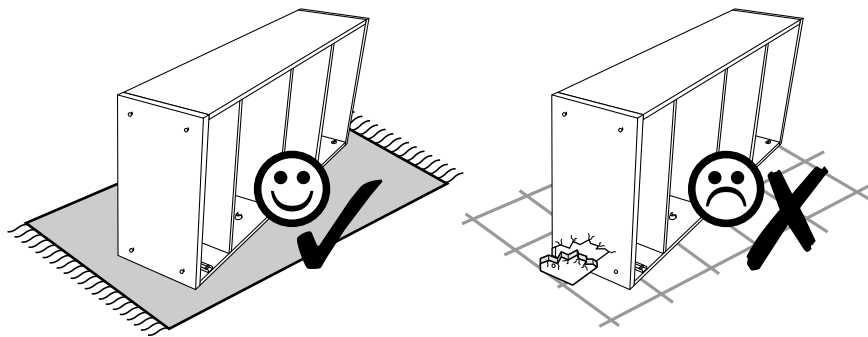

3

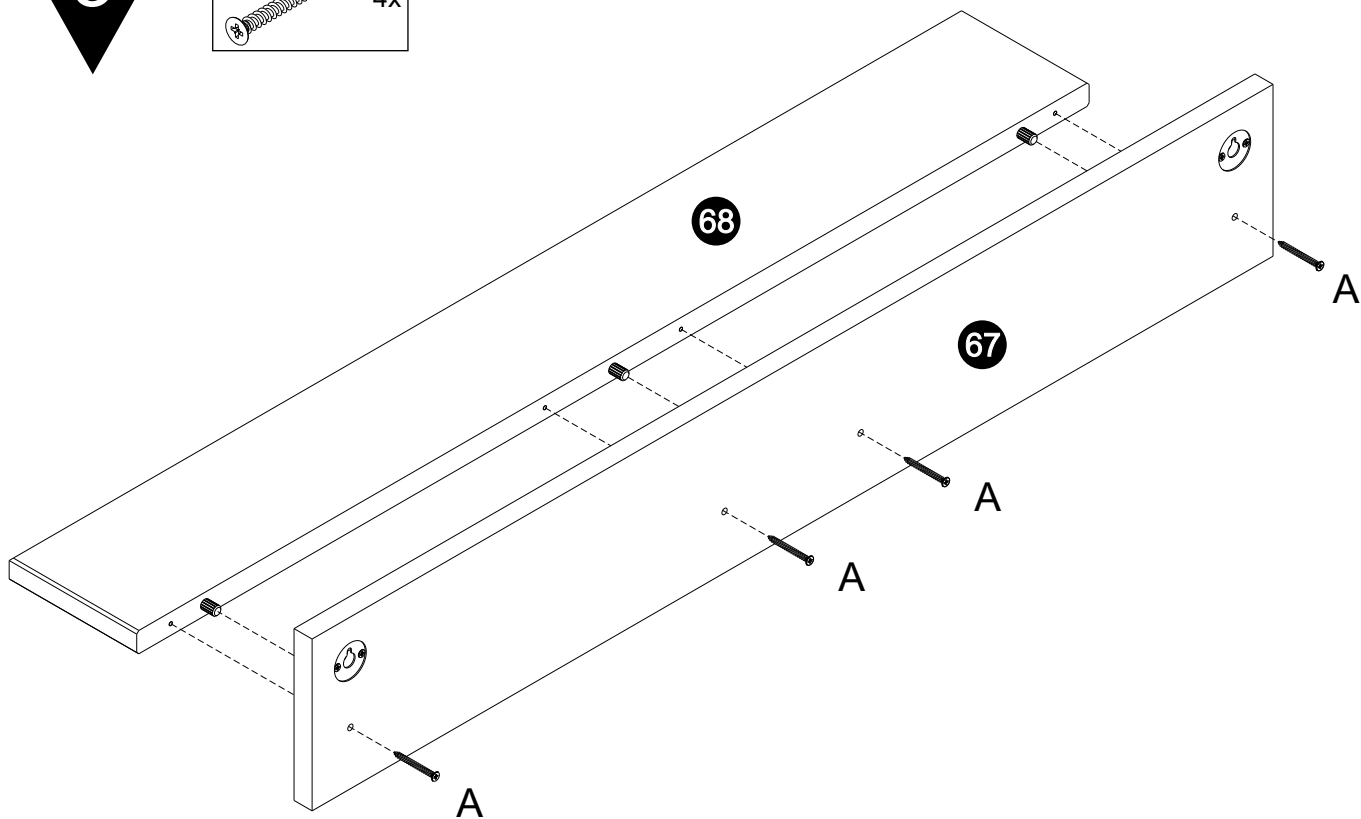

4



!	Achtung • Attention • Opgelet • Uwaga • Dikkat • Внимание	!
(D)	Bei einigen Wandtypen kann ein Spezialdübel erforderlich sein!	
(GB)	For certain wall types, a special dowel may be necessary!	
(NL)	Bij enkele muurtypes is een speciale plug misschien vereist!	
(PL)	Do niektórych rodzajów ścian konieczne mogą być specjalne wkręty!	
(TR)	Bazı duvar tiplerinde bunun için özel bir dübel gerekli olabilir!	
(RU)	Для некоторых типов стен может потребоваться специальный дюбель!	
(FR)	Assurez vous de la nature de votre mur et utilisez les chevilles adaptées. Ne pas hésiter à emmener la vis deux pour obtenir les chevilles de.	

