






MONDEA GLASS CABINET






110 x 45 x 200 cm

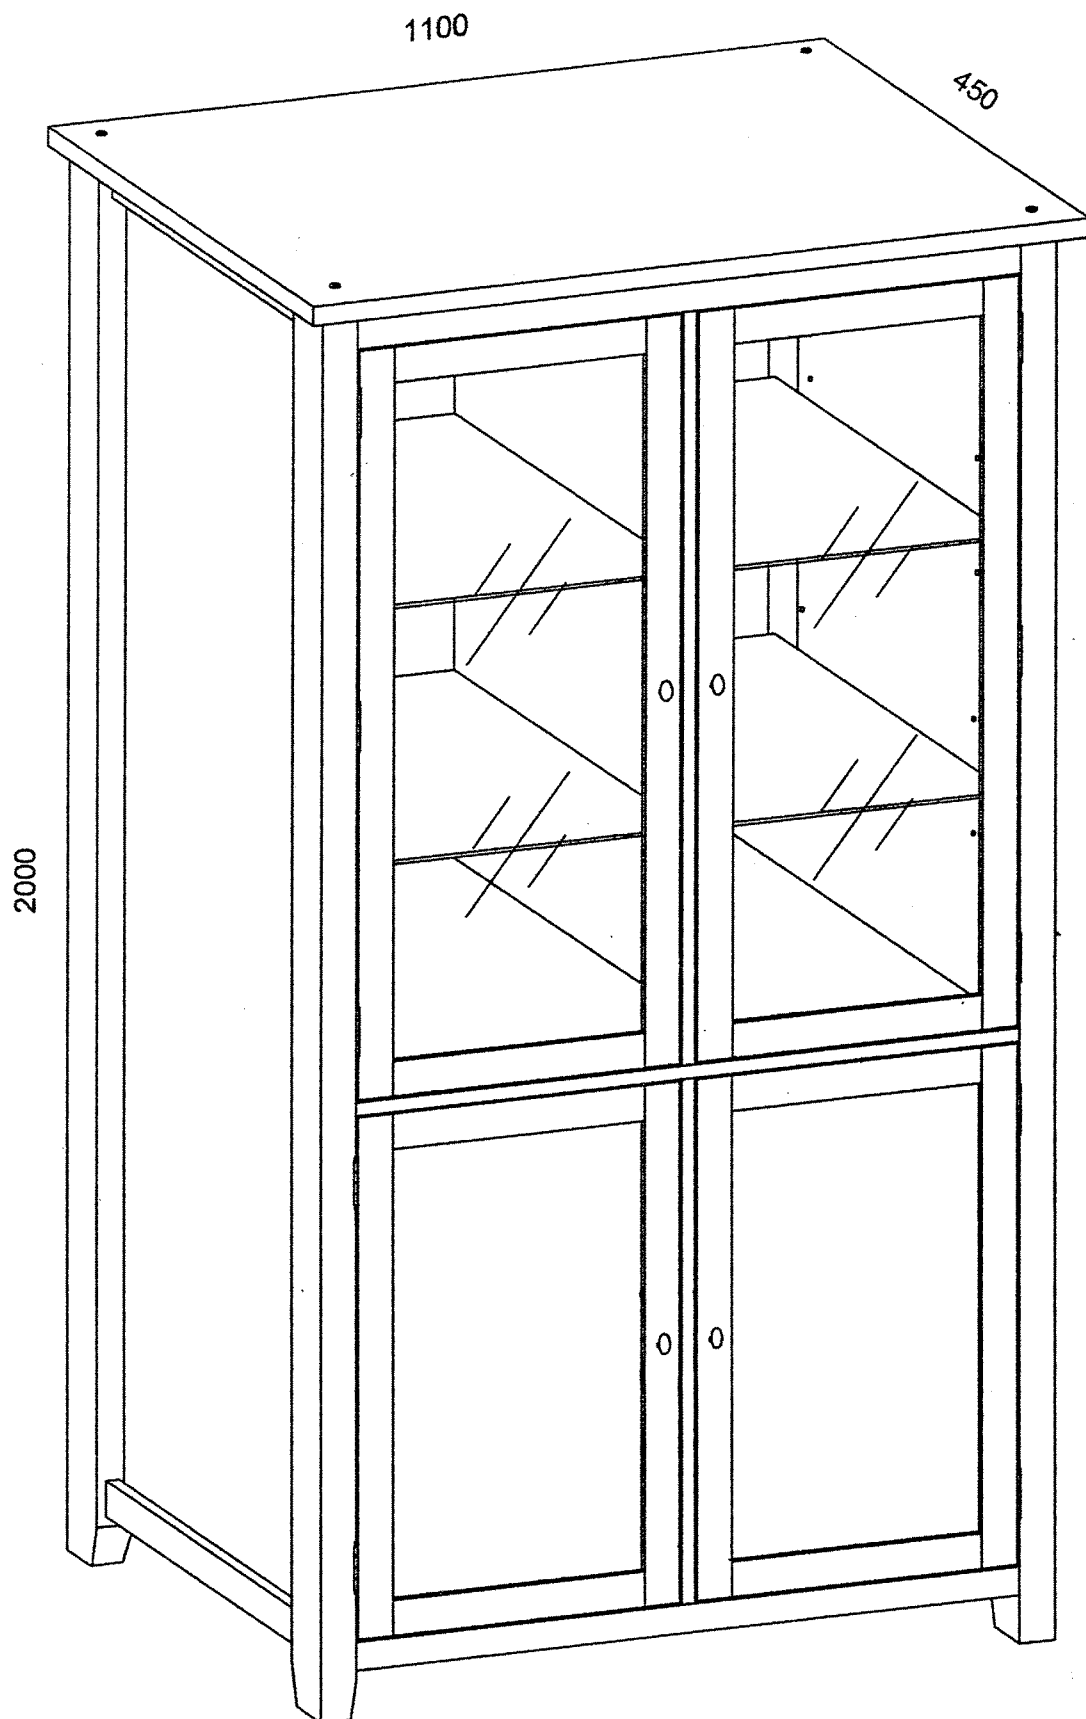













120 m.

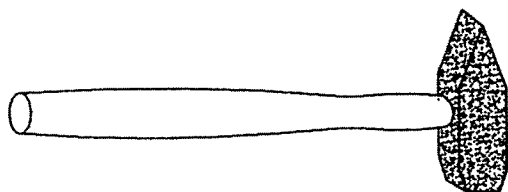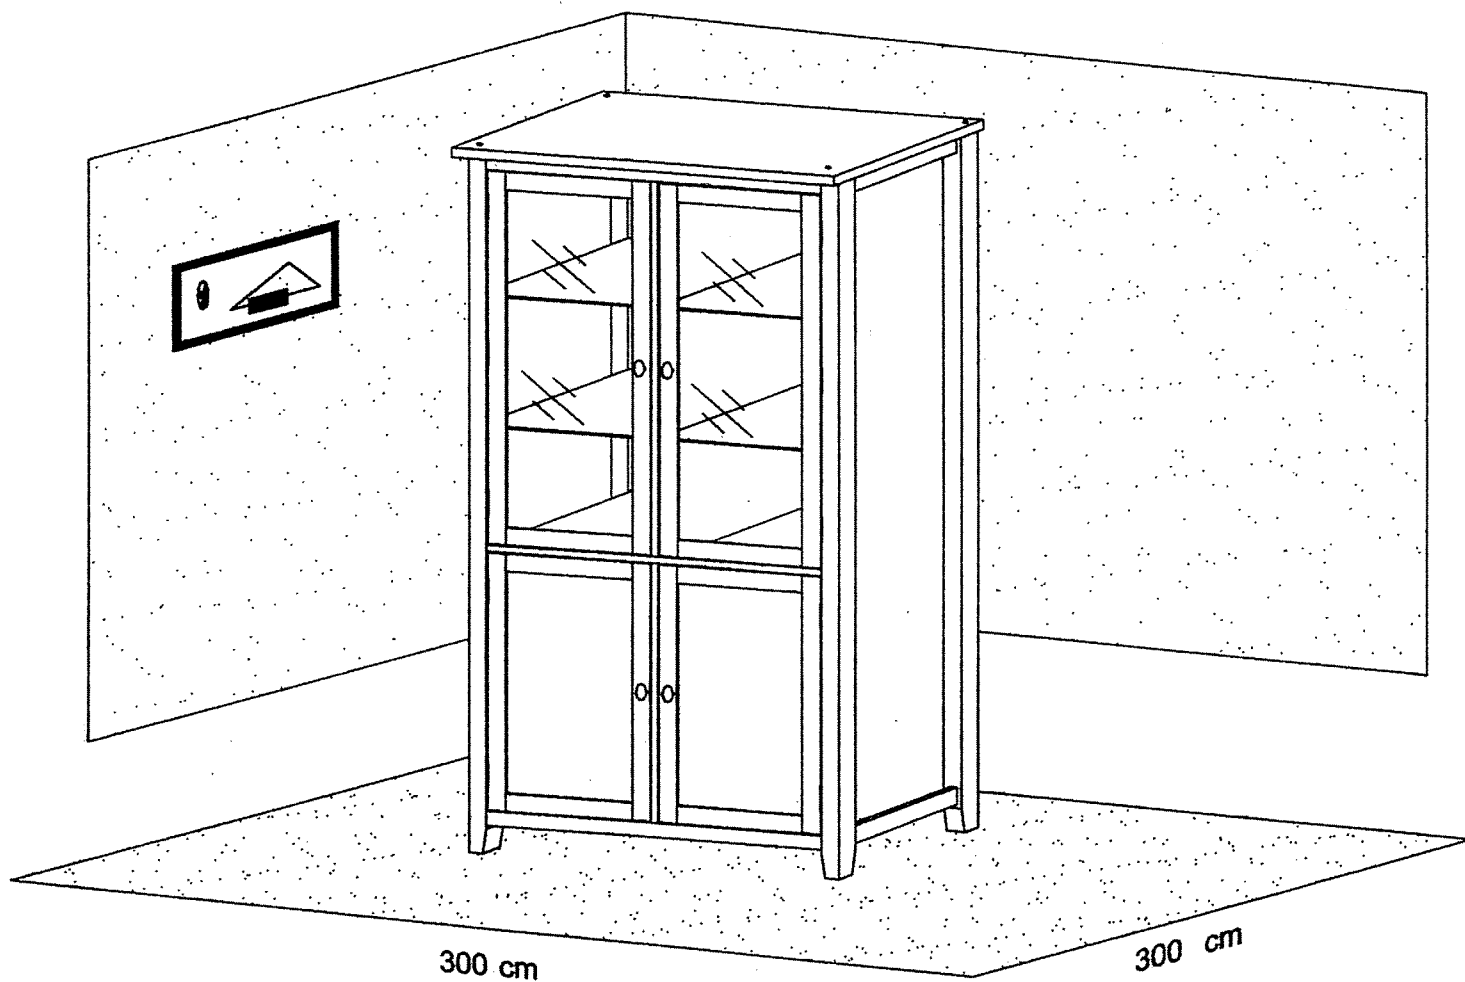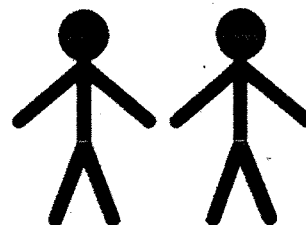

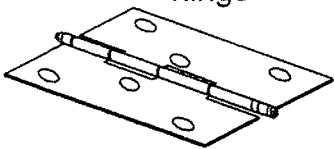A x 10 hinge 	B x 60 15mm hinge wood screw  #6x15 mm	C x 4 pull 
D x 4 25mm bolt 	E x 8 magnetic door catch 	F x 8 magnetic door catch plate  Installed on door frame inside before shipping
G x 16 15mm wood screw magnetic catch  15 mm	H x 14 mini-fix lock head 	I x 14 mini-fix bolt 
J x 6 51mm bolt  51 mm	K x 6 flat washer 	L x 6 lock washer 
M x 20 wood dowel  ø8x30mm	N x 85 nail  16 mm	O x 8 shelf peg 
P x 16 glass shelf peg 	Q x 1 glue 	



qty	part no	measurement(mm)	
1	1A	1973X320X50	
1	1B	1973X320X50	
1	2	1853X416X19	
1	3-1	1886X484X3	
1	3-2	1886X484X3	
1	4-1	460.5X416X19	
1	4-2	460.5X416X19	
1	5-1	457.5X394X19	
1	5-2	457.5X394X19	
1	6	940X405/397X19	
1	6A	940X40X19	
1	7	1100X450X27	
1	7A	940X40X19	
1	8A	730X455.5X19	
1	8B	730X455.5X19	
1	9A	1054X455.5X19	
1	9B	1054X455.5X19	
#	10	457.5X392X5	

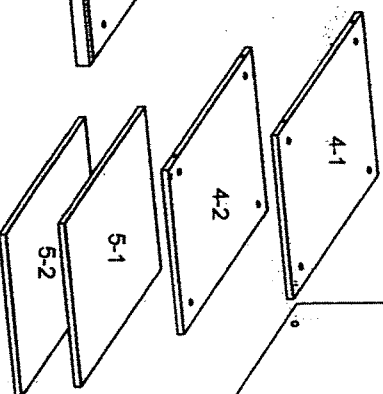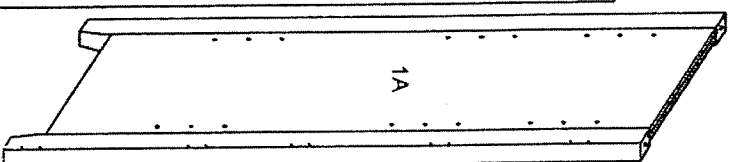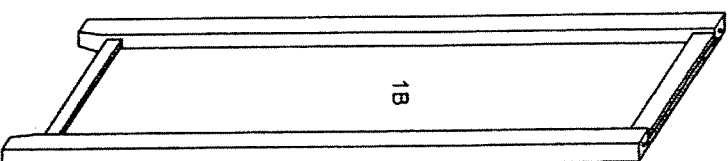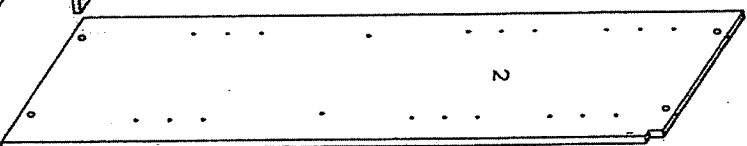
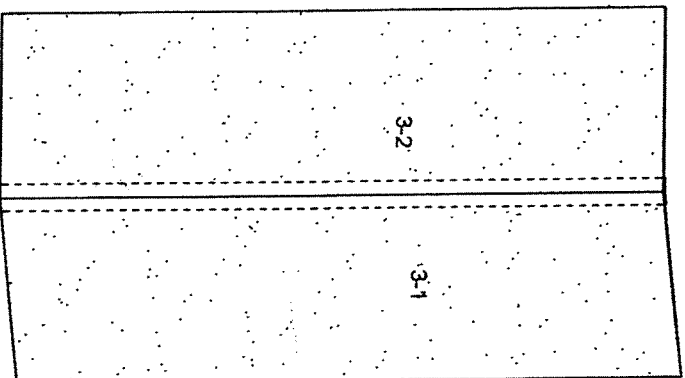
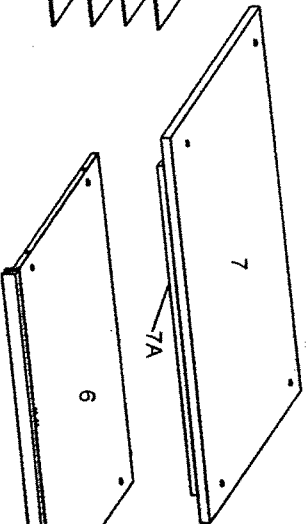
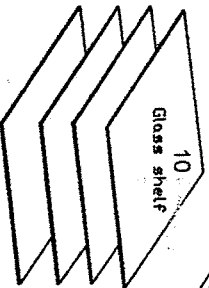
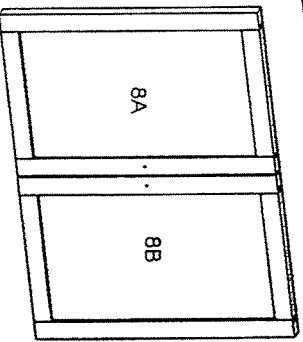
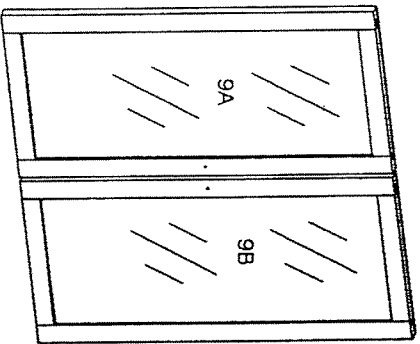


1

H x 14



1 x 14

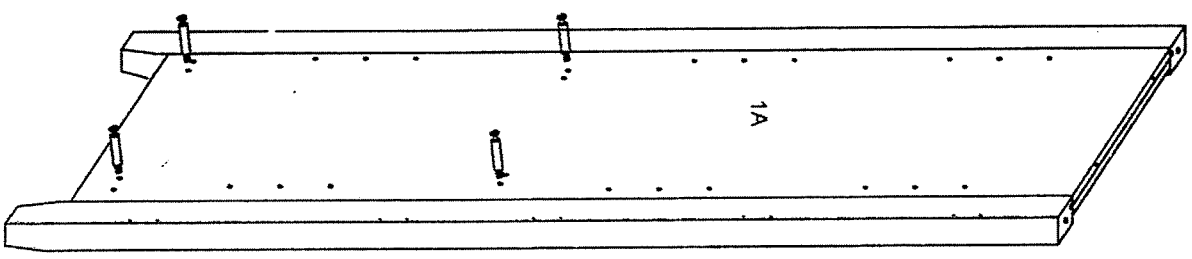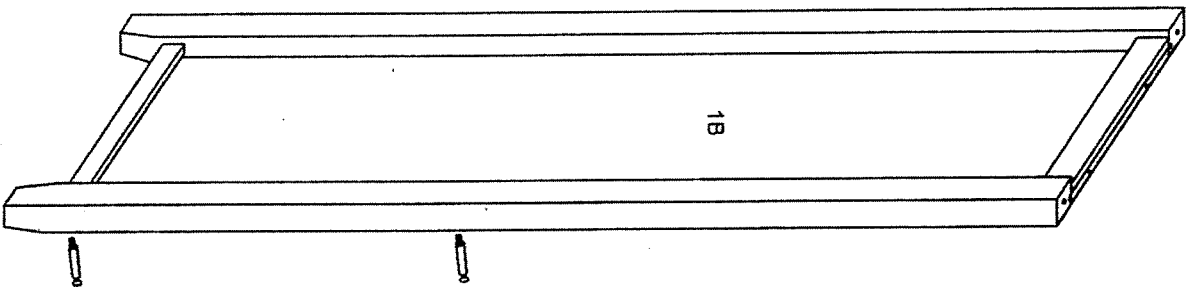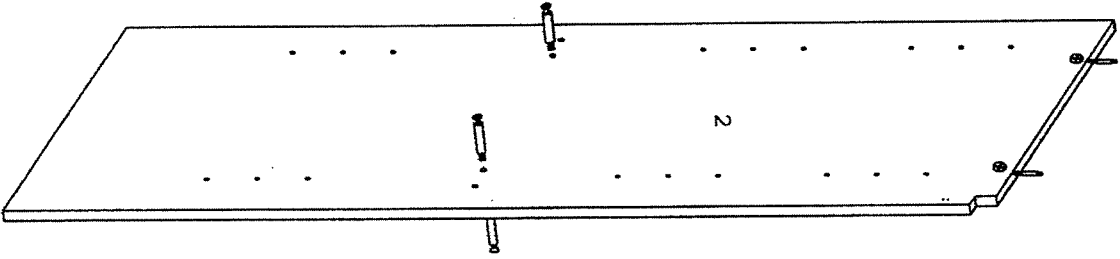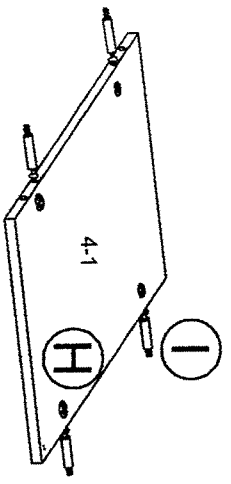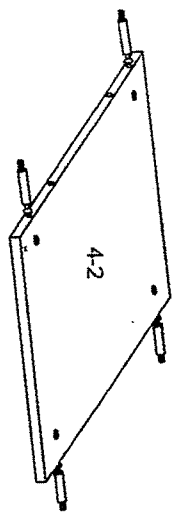
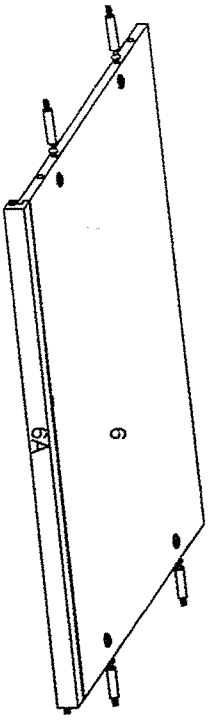


2

H x 4

I x 4

J x 2



K x 2

L x 2

M x 6

Q x 1



2-3

I

2-3-1

2-3-3

2-3-2

H

4-2

4-1

2

2-1

M

2-2

6A



K

L

J


6

10-6

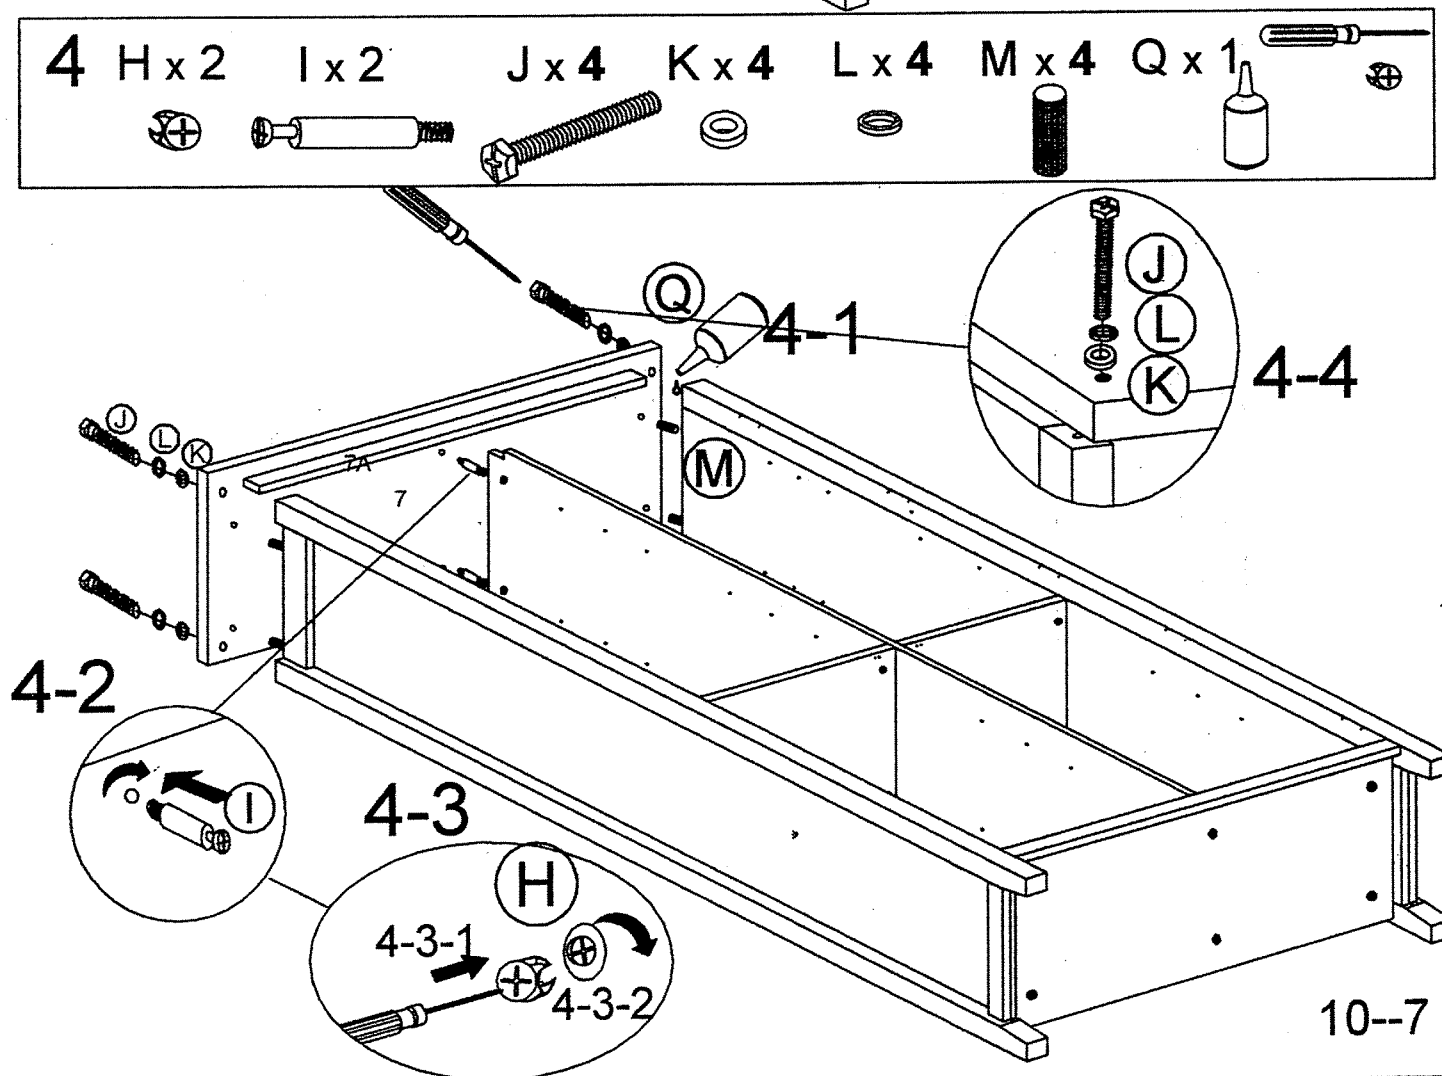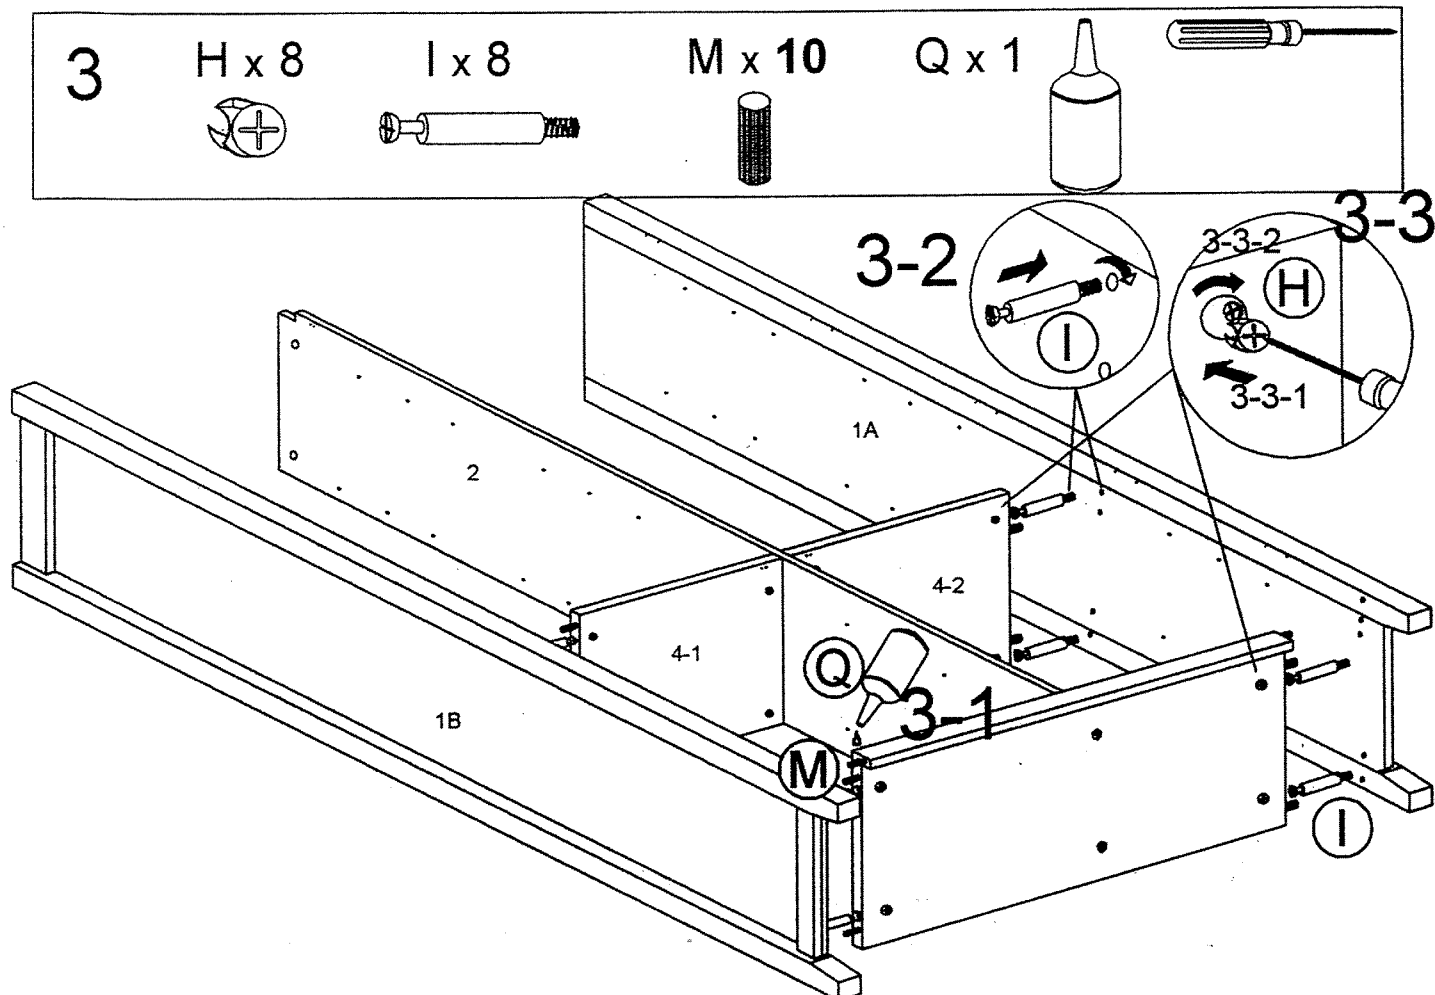

5

A x 10

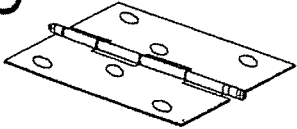



B x 60




C x 4




D x 4




E x 8



F x 8






G x 16

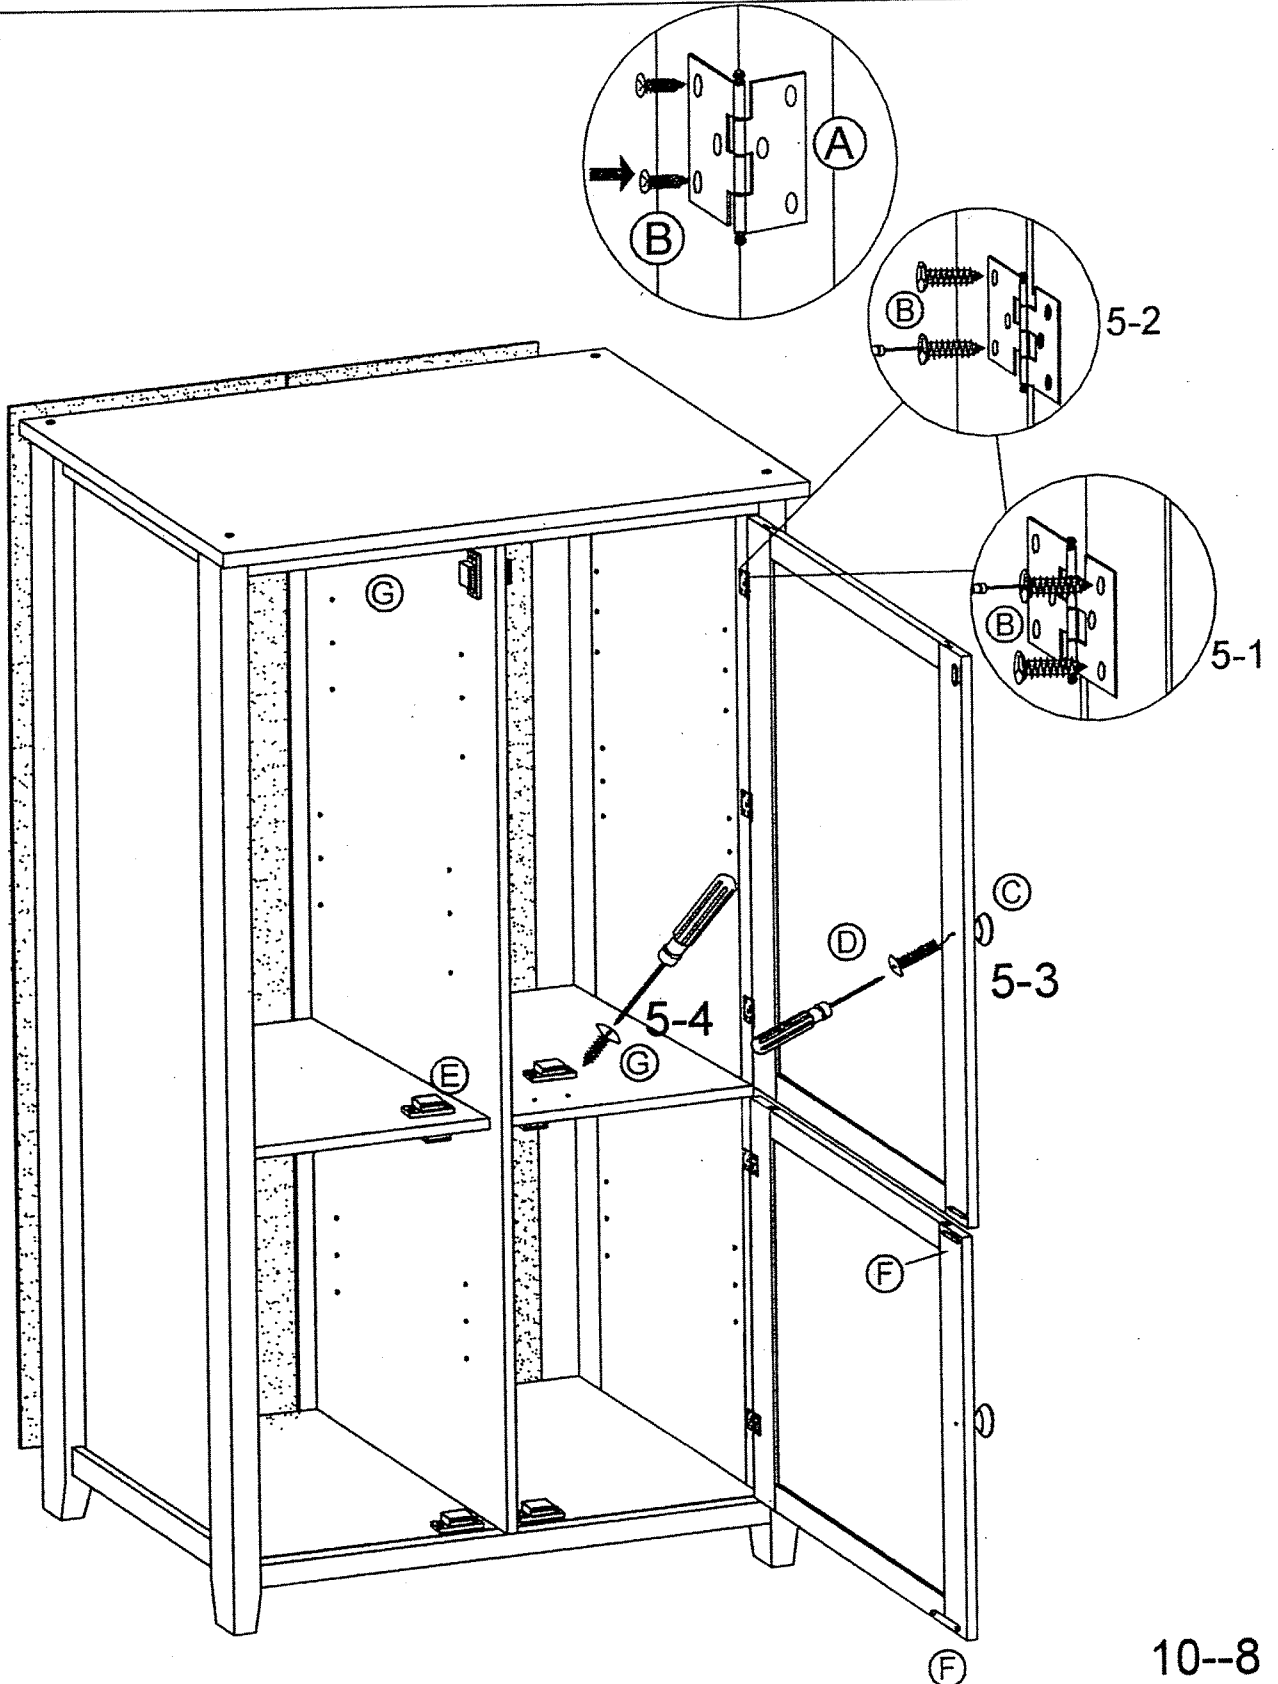

6






N X 85

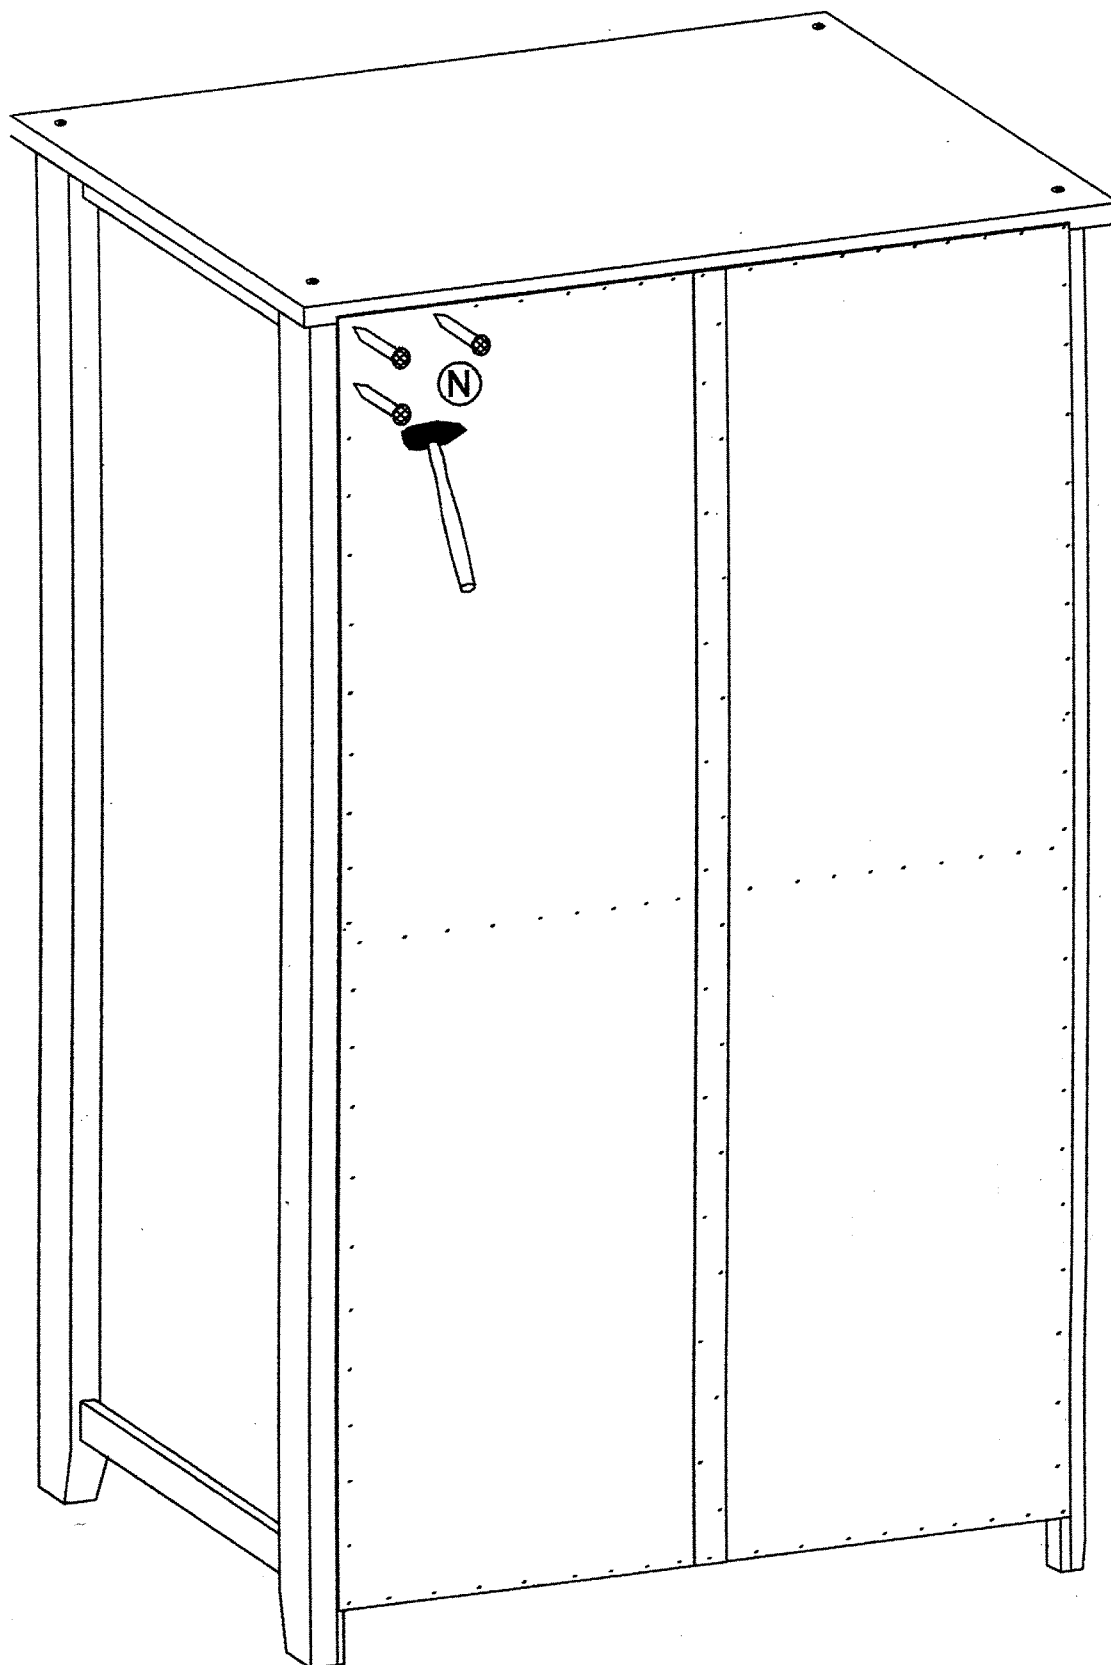

7

O x 8

P x 16

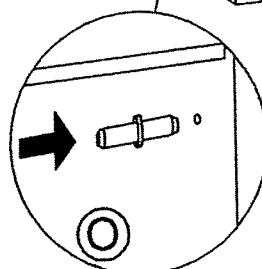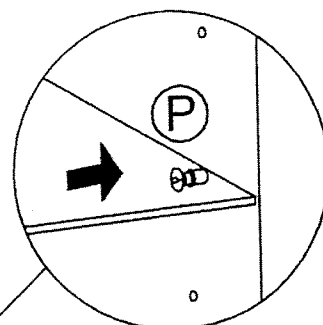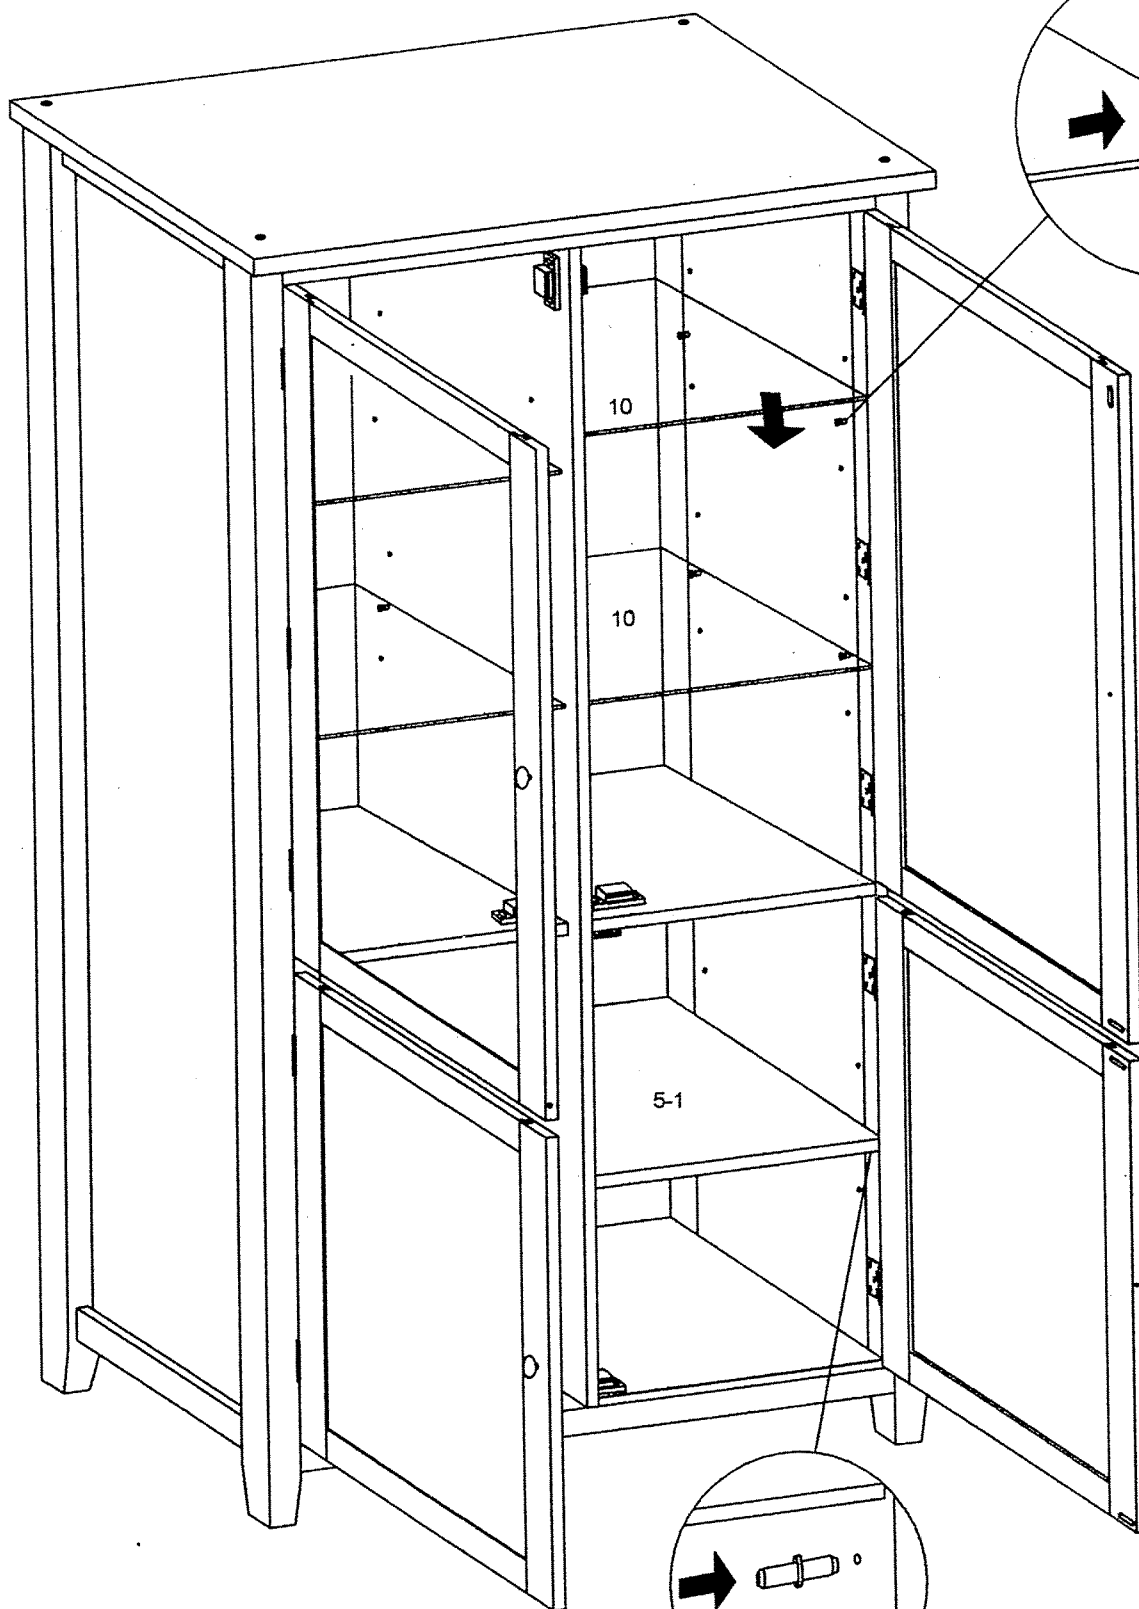

10--10

