


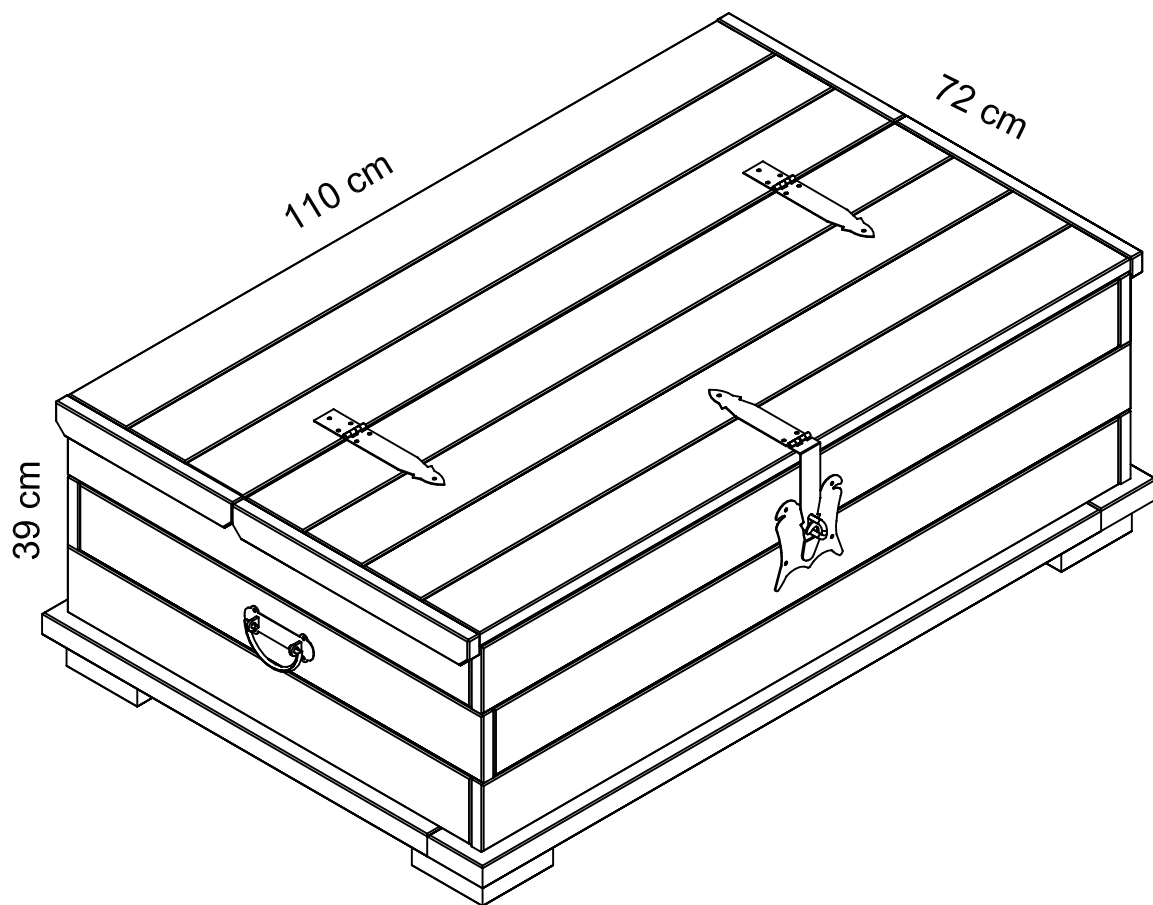

Montageanleitung

8241



Notice de montage

8241



Handleiding voor de montage

8241



Montážní návod

8241



Szerelési útmutató

8241



Montaj talimatı

8241



Assembly instructions

8241



Istruzioni di montaggio

8241



Instrukcja montażu

8241



Návod na montáž

8241





Instrucțiuni de montaj

8241



Инструкция по монтажу

8241

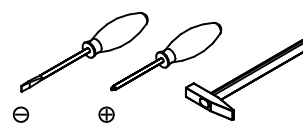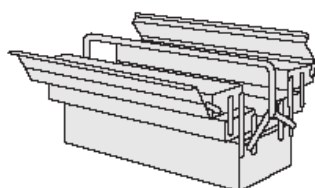

0
10
20
30
40
50
60
70
80
90
100
110
120
130
140
150
160
170
180
190
200


Service • Dienstverlening • Serwis • Servis • Сервисная служба • Assistenza • Szerviz


Name • Nom • Nome • Naam • Nazwa • Jméno • Názov • Név • Denumire • Isim • Название



Nr. • No. • N° • Номер • Č • Sz

Typ • Type • Tip • Tipus • Tipo • Тип



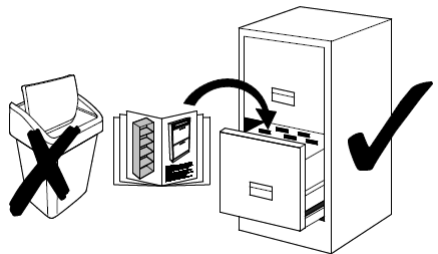


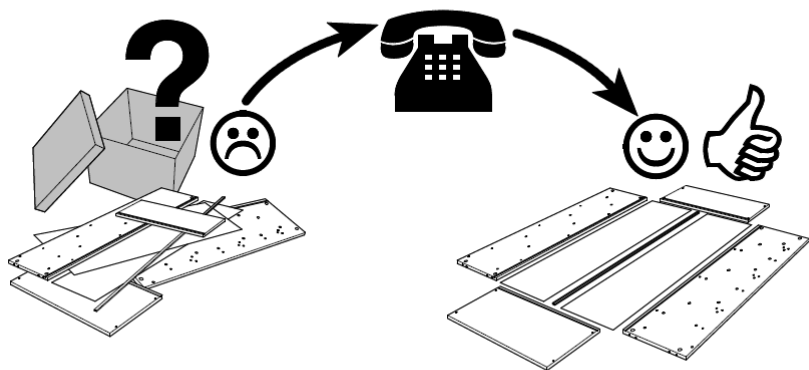





Bc Ø8x35mm  8x	Ca Ø6.5x34mm  4x	Da Ø15x12.5mm  4x	Kh Ø5mm  4x	Ea 20x1.2mm  25x	Aj Ø4x40mm  24x	Az Ø4x50mm  6x	Ag Ø3.5x30mm  4x	An Ø3.5x16mm  27x
Au Ø4x70mm  8x	Yi 195x32mm  2x	Yh 165x136x32mm  1x	Yg 118x110mm  1x	Yf 112x37mm  2x	Yj 52x26mm  1x	Yk Ø20x3mm  16x		

2/9




8241

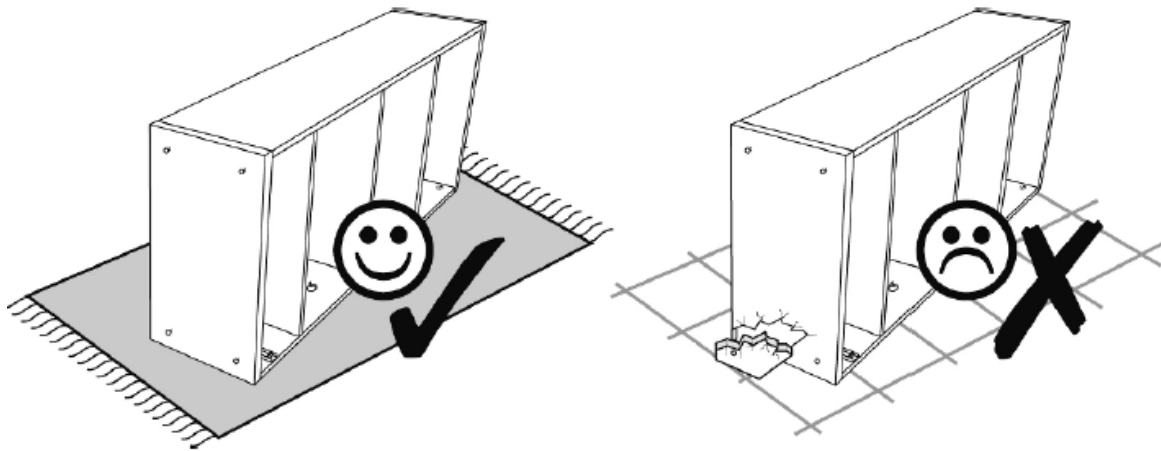

1

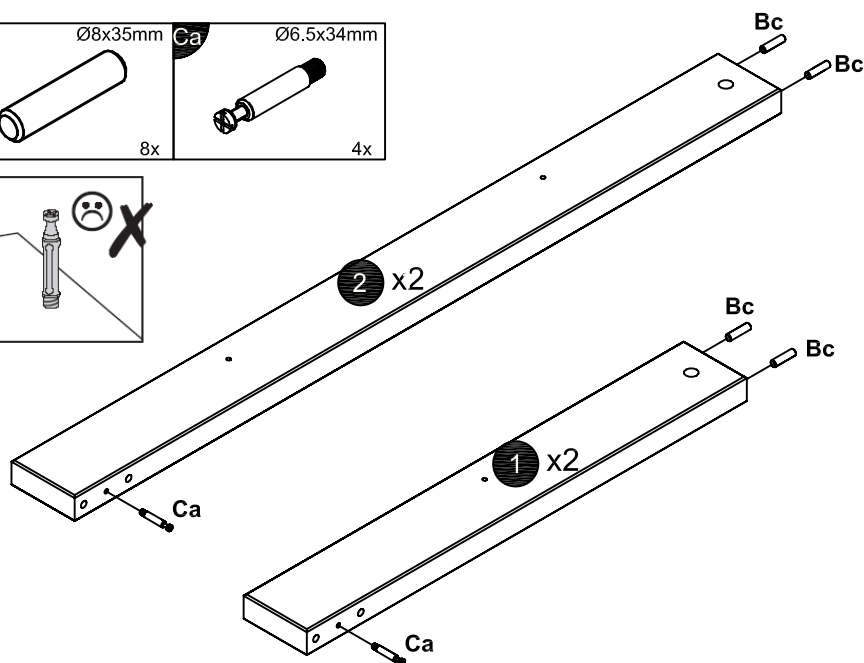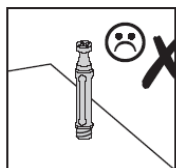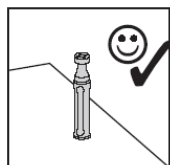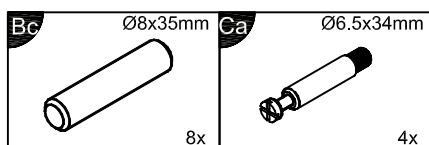


2

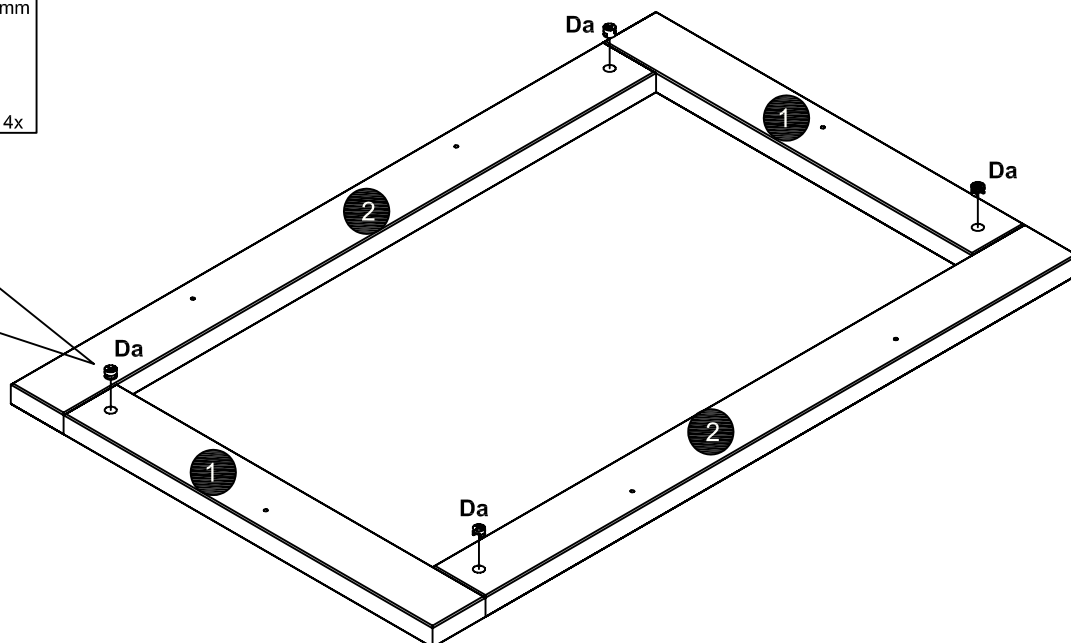
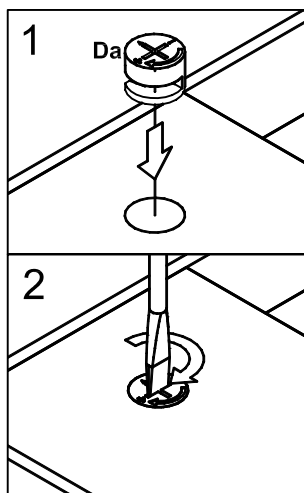
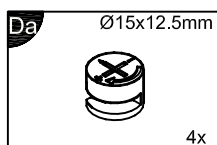


A 3D perspective view of the rectangular frame assembly. The frame consists of four rectangular sections joined at the corners. Each corner joint is secured with a bolt, labeled 'Kh'. The frame is shown in a perspective view, highlighting its three-dimensional structure.



5

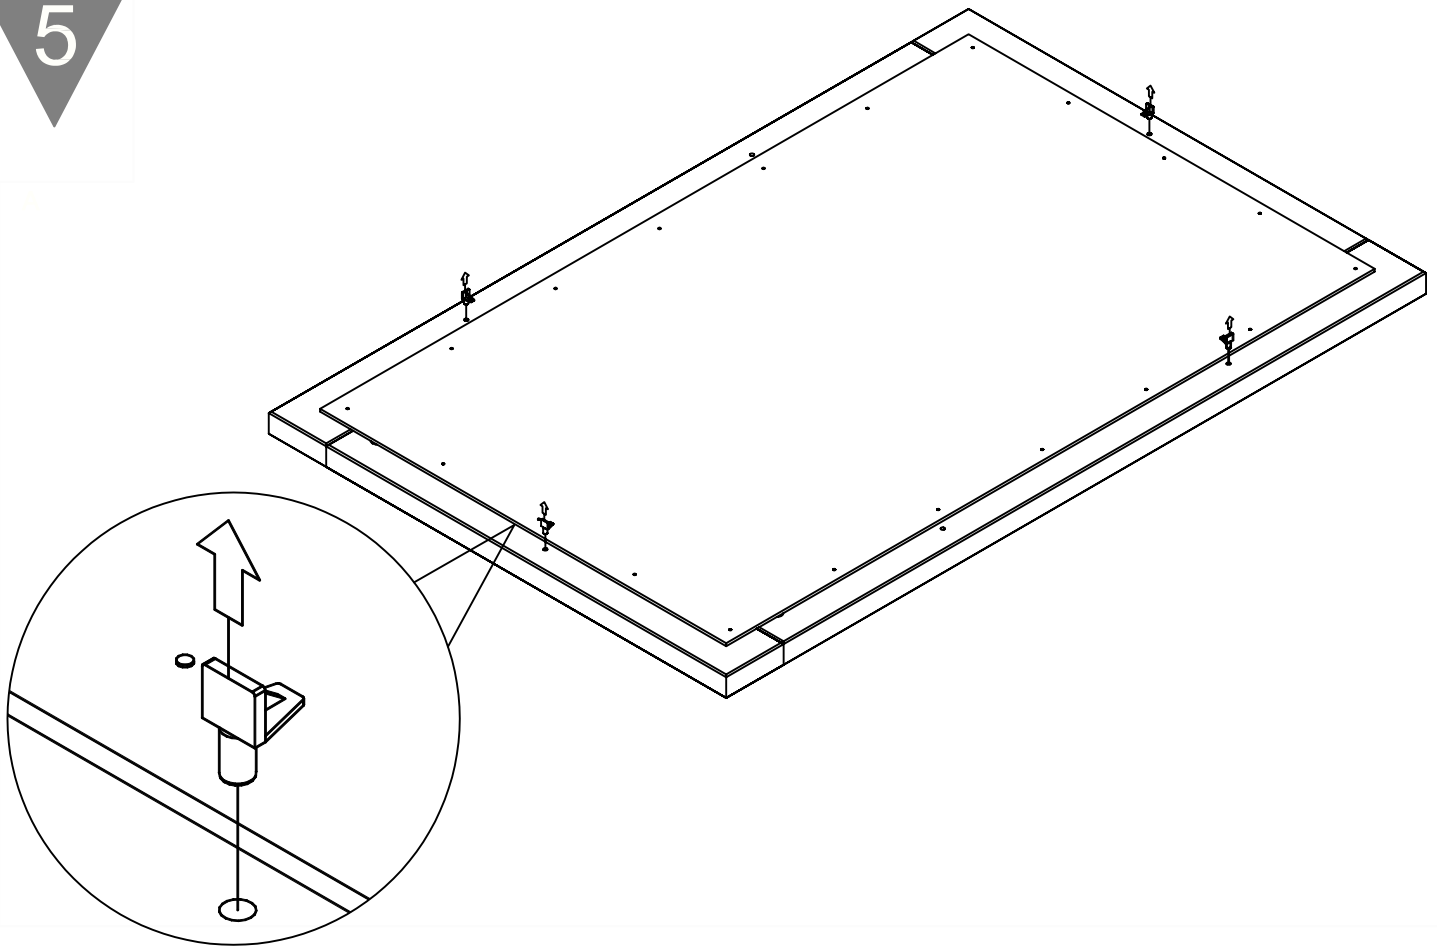





6

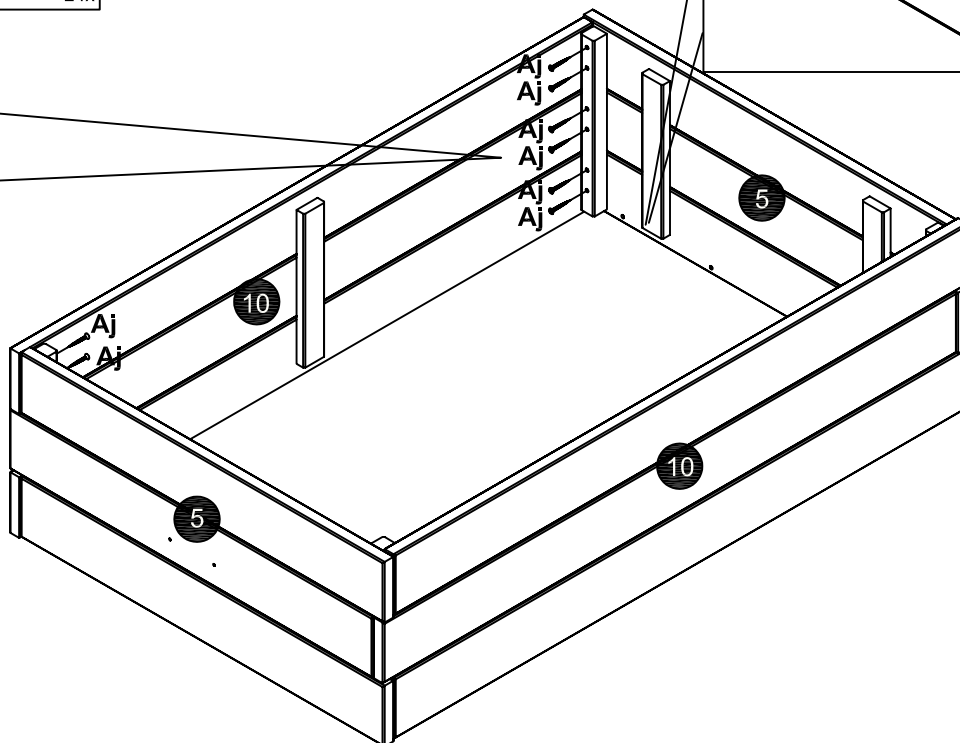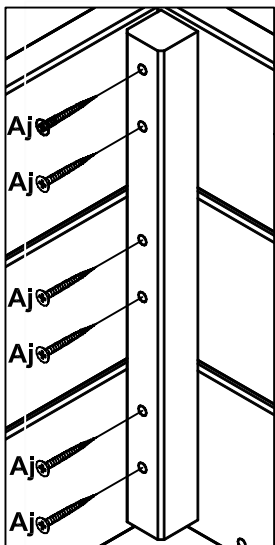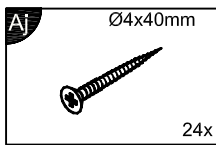




7

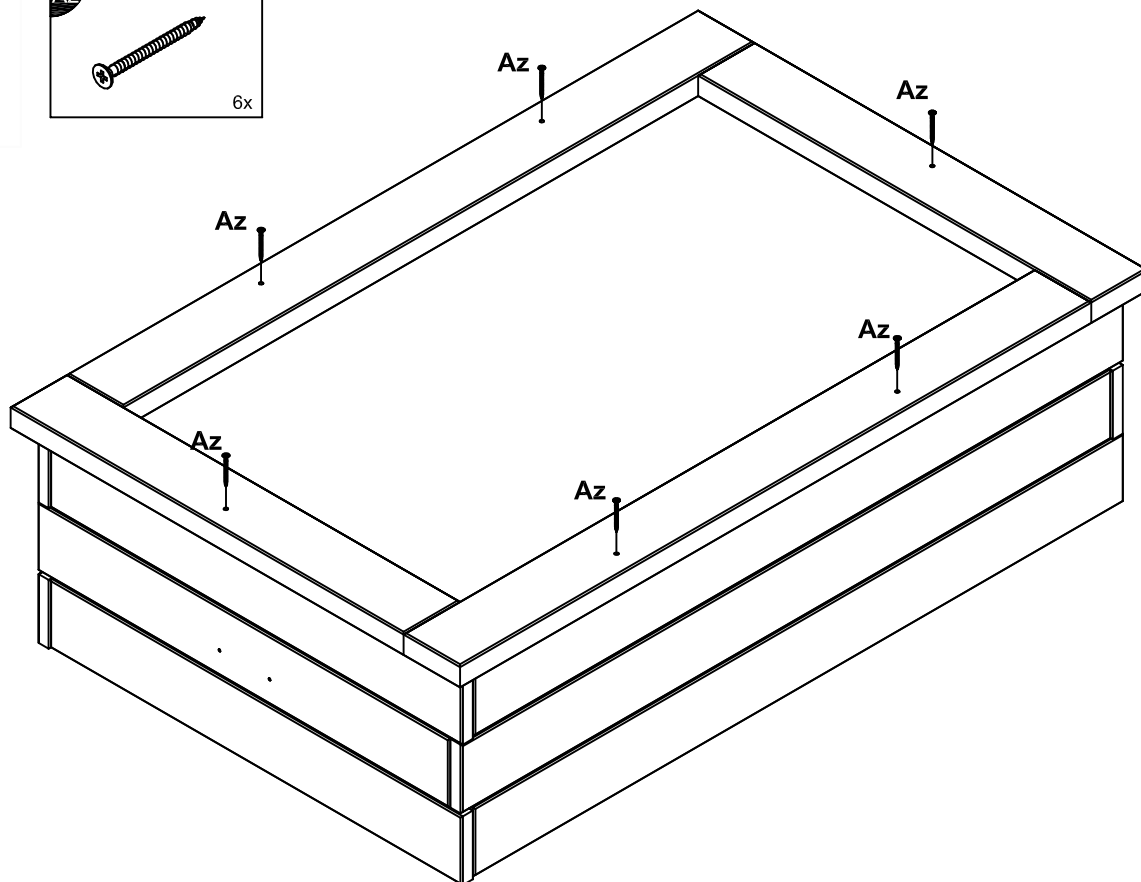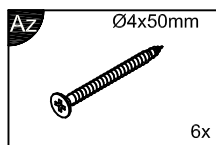




8

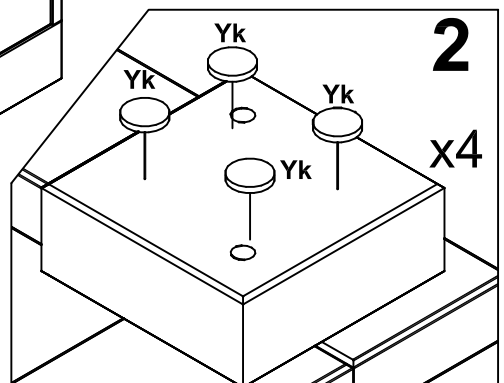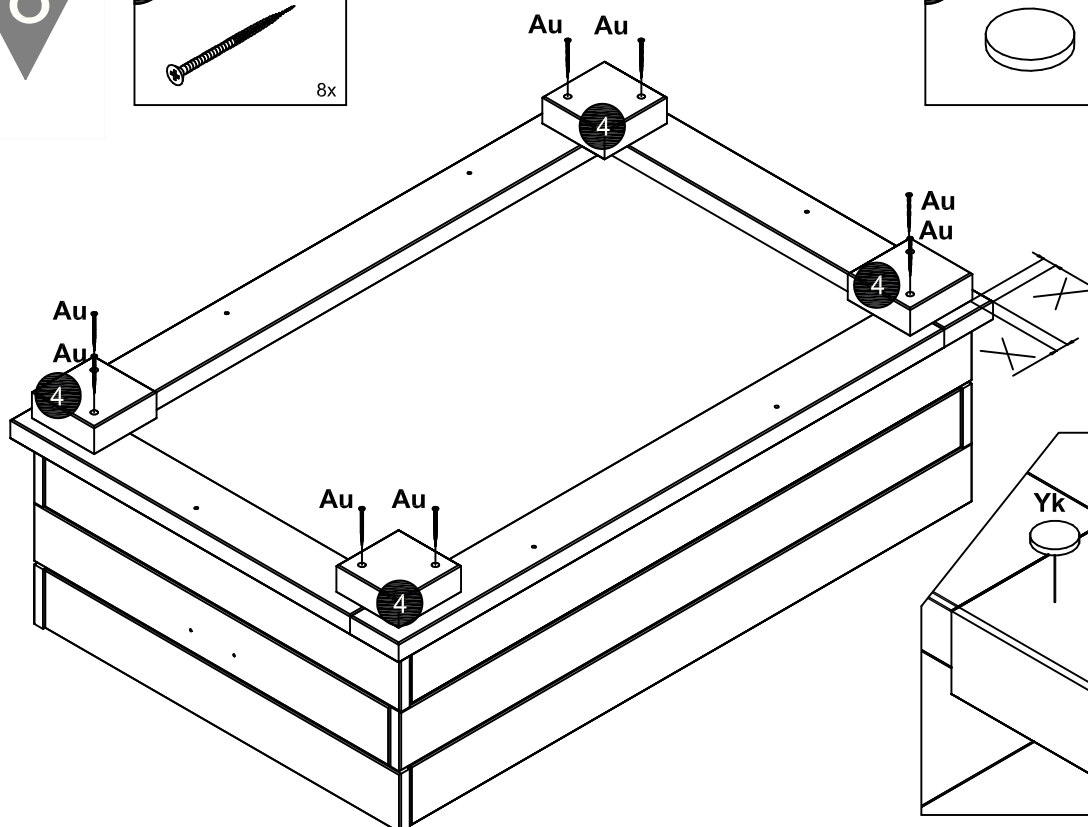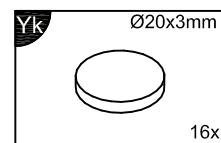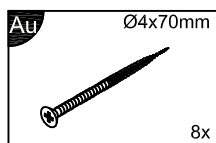




9

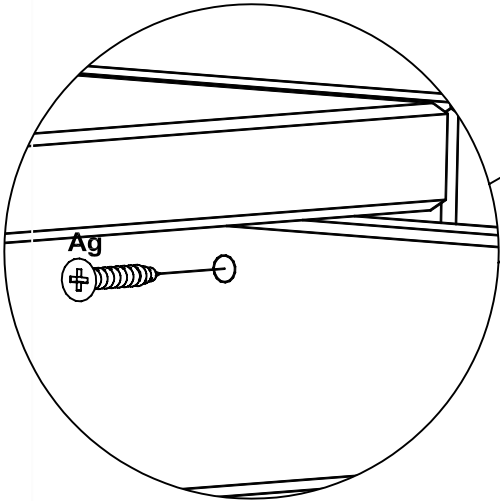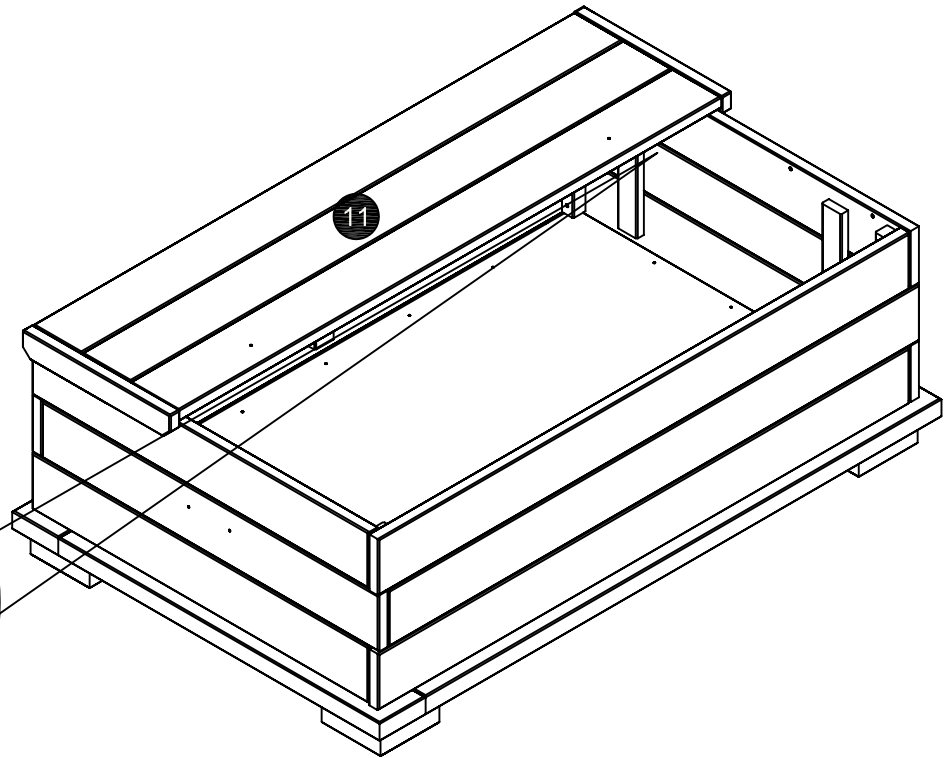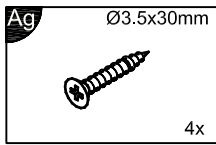




10

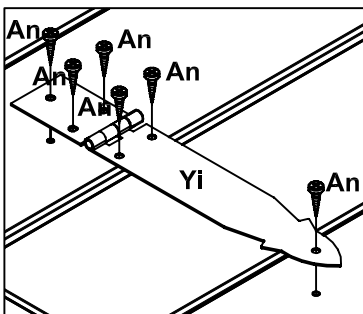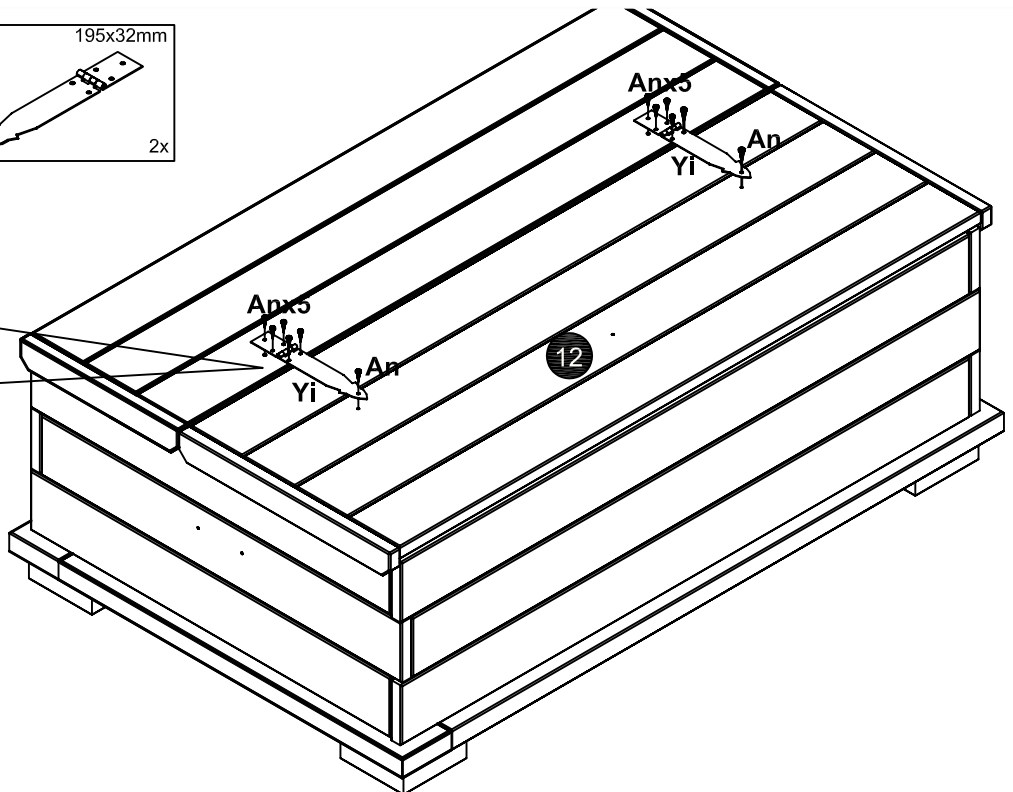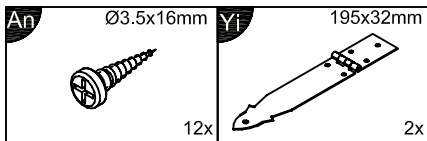




11

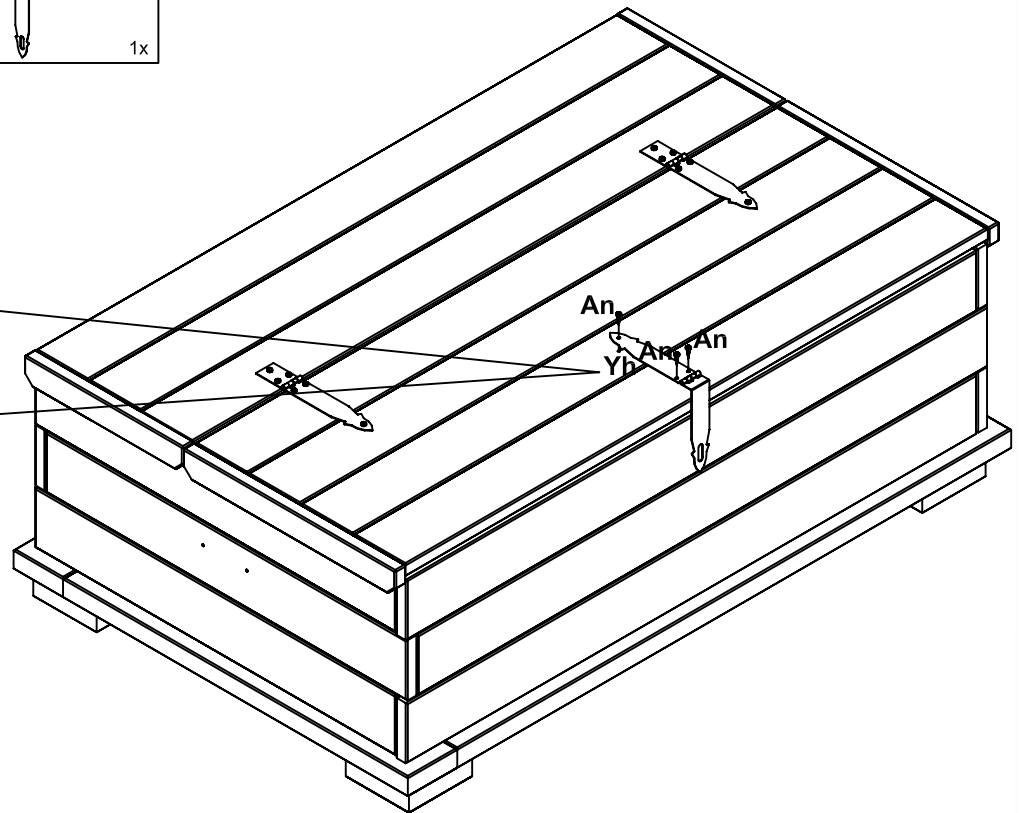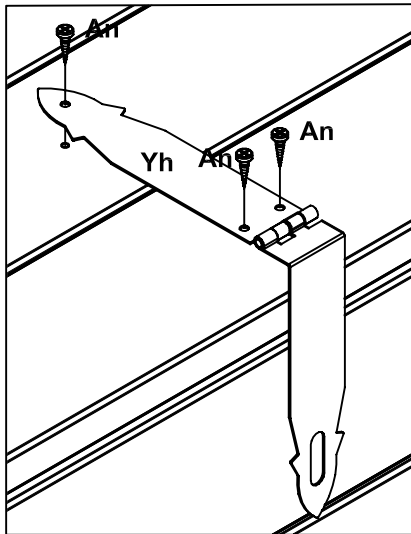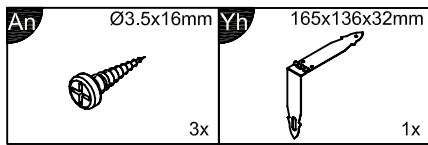

12

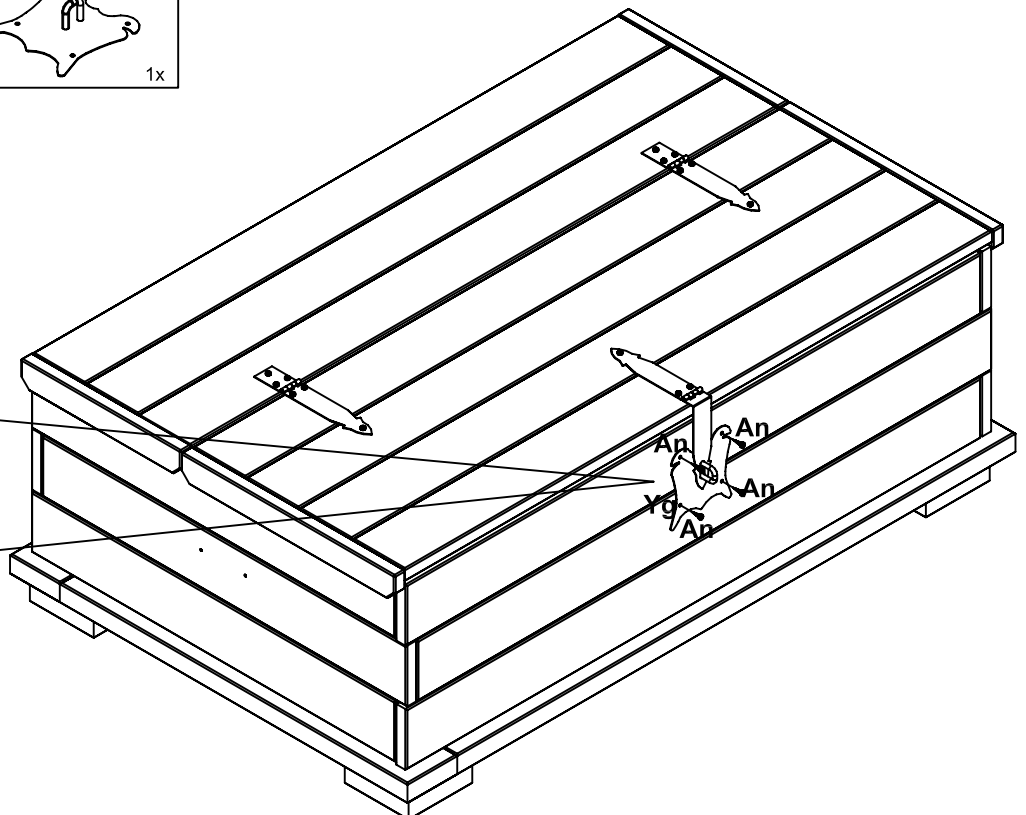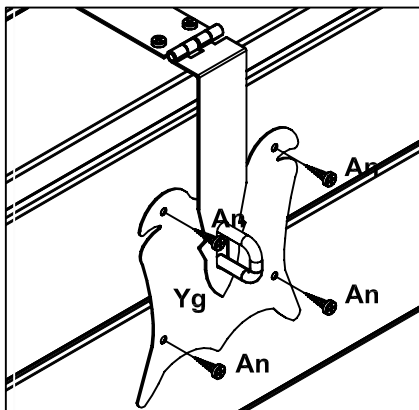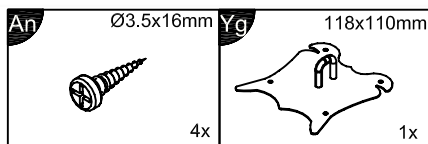

13

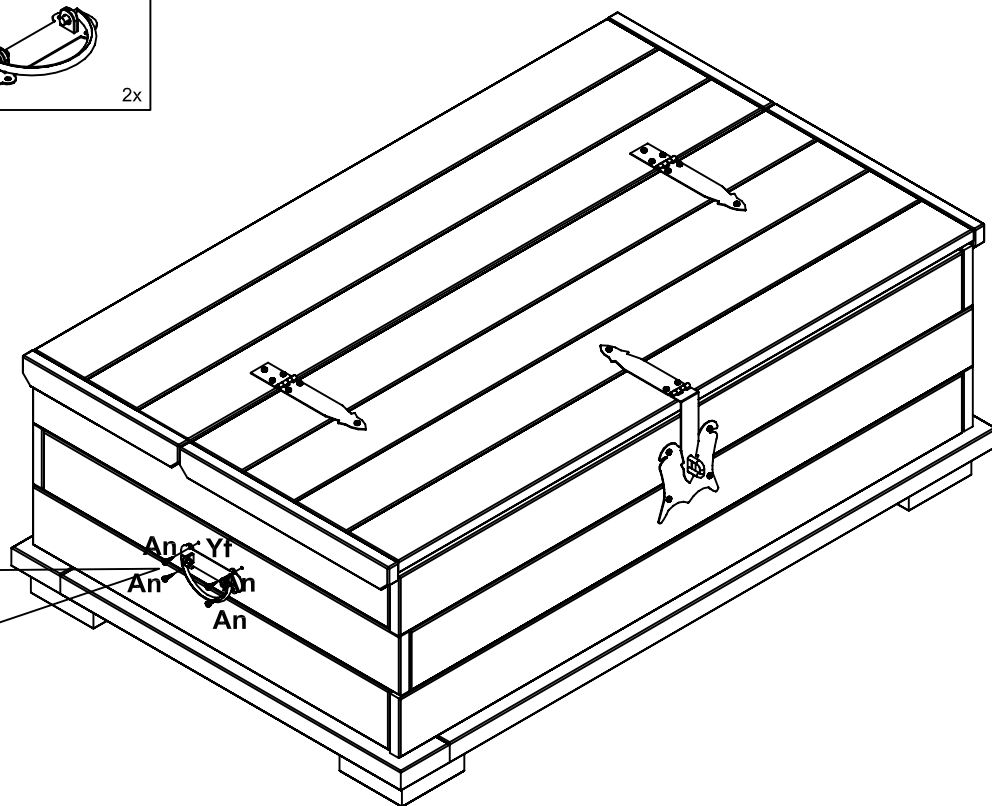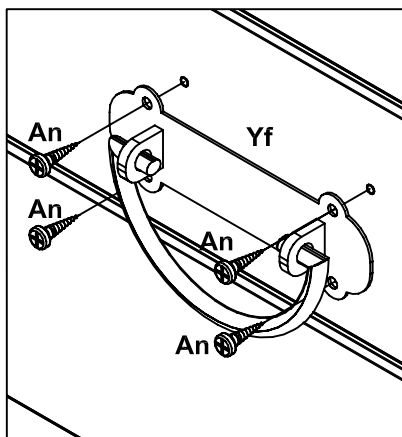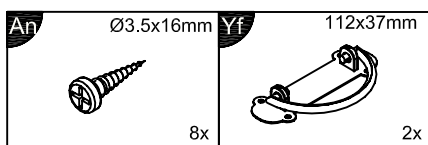

14

