


# COAT DINING CHAIR

ITEM NO.20-3892C

NATURAL  
SIGNATURE


## TIPS

- 1 Please review all parts and hardware before disposing of any packaging.
- 2 Check to be sure that all parts and hardware before you start to assembly.
- 3 Before beginning assembly, separate each type of screw.
- 4 Using a screw that is too long will cause damage.
- 5 Carefully study the screw diagrams below.
- 6 You may receive extra hardware with your unit.
- 7 Place all parts on a clean and smooth surface to avoid the parts from being scratched.
- 8 Keep the product away from heat and humidity.
- 9 Light blue stains and natural wood knots on the product are not considered defects.

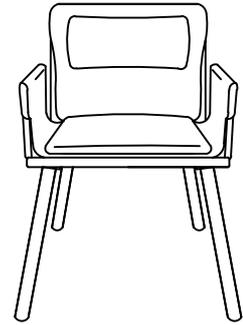

## PART LIST


**A** Back Rest  
1Pc



**B** Arm (Left & Right)  
2Pcs



**C** Seat Panel  
1Pc



**D** Legs  
4Pcs



**E** Backrest & Seat Cover  
1Set



**F** Cushion Backrest  
1Pc




**G** Cushion Seat  
1Pc




## HARDWARE LIST

**H** JCBC Screw M6 x 20mm  
24Pcs



**I** Metal Backrest Support  
1Pc



**J** Metal Arm Support  
4Pcs




**K** Allen Key M4  
1Pc




ASSEMBLY INSTRUCTIONS


1 STEP 1

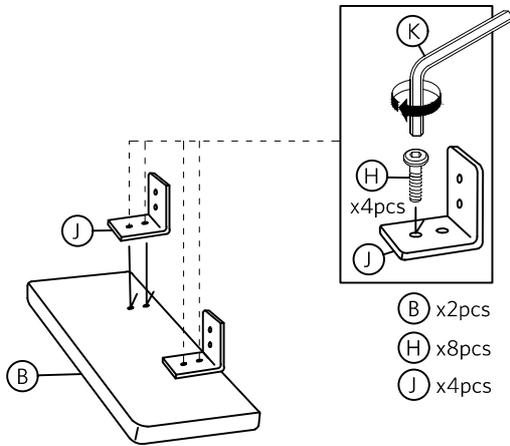


2 STEP 2

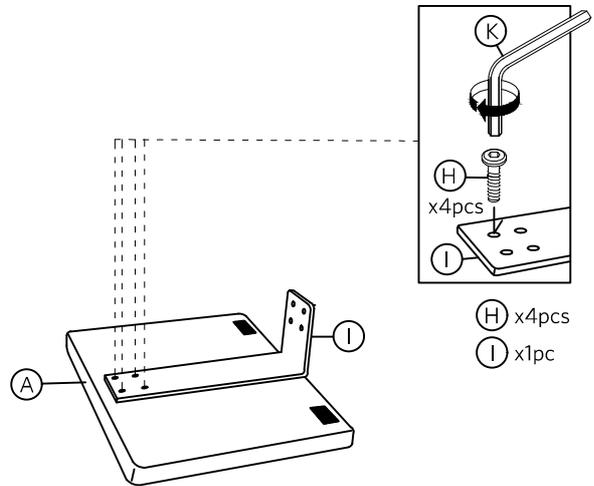


3 STEP 3

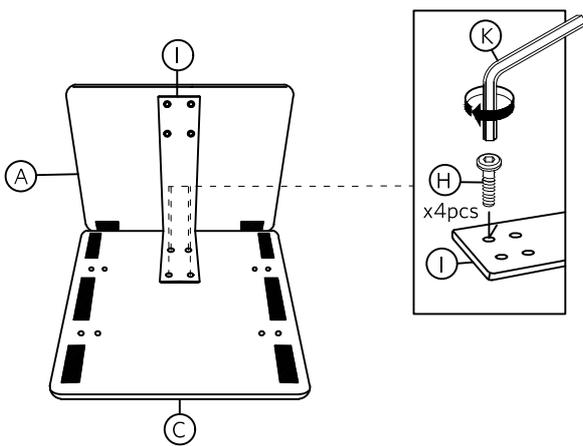


4 STEP 4

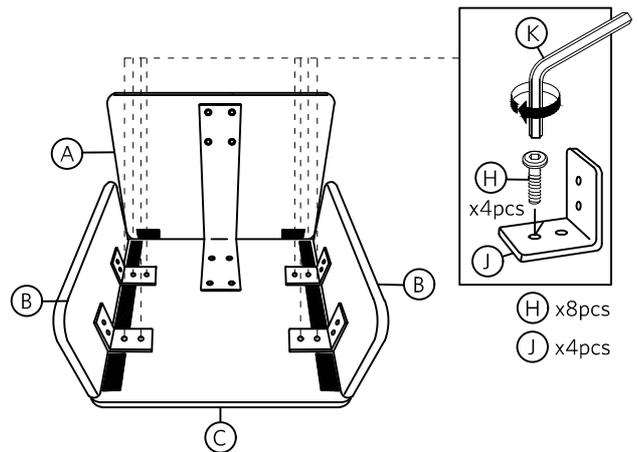

5 STEP 5

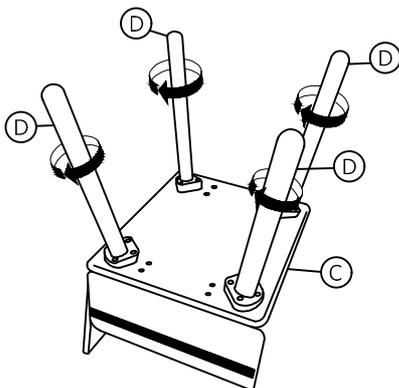


6 STEP 6

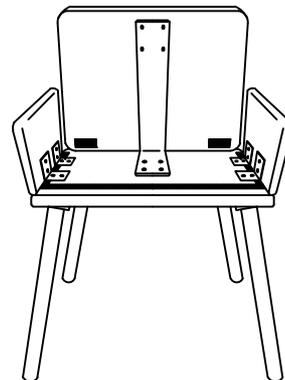


ASSEMBLY INSTRUCTIONS

7 STEP 7


Tape the backrest & seat cushion cover to velcro as shown.

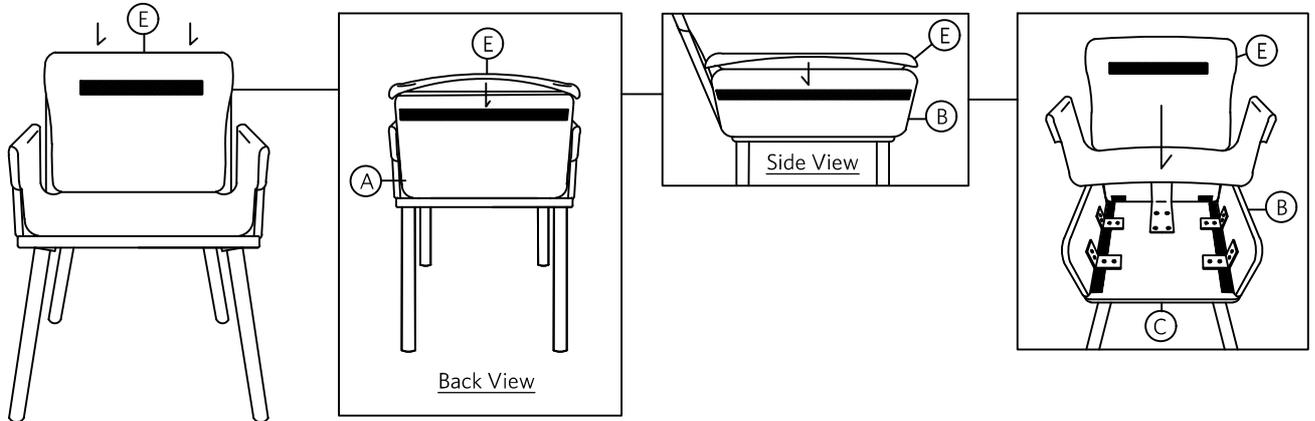

8 STEP 8

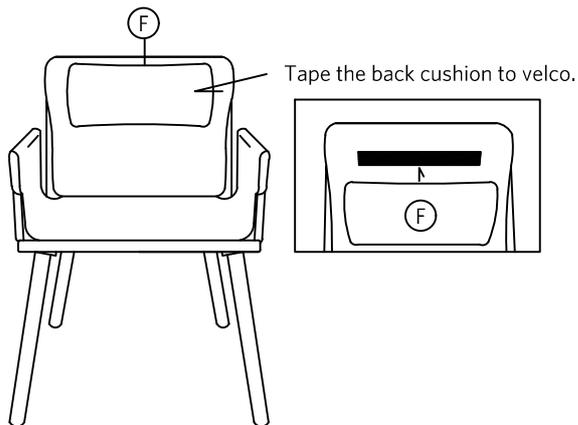

9 STEP 9

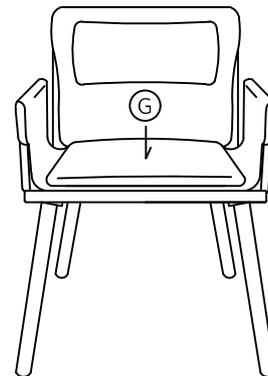

10 STEP 10

