


copley

upholstered barstool

style # S017412T (dark grey)

dpci # 249-01-4687

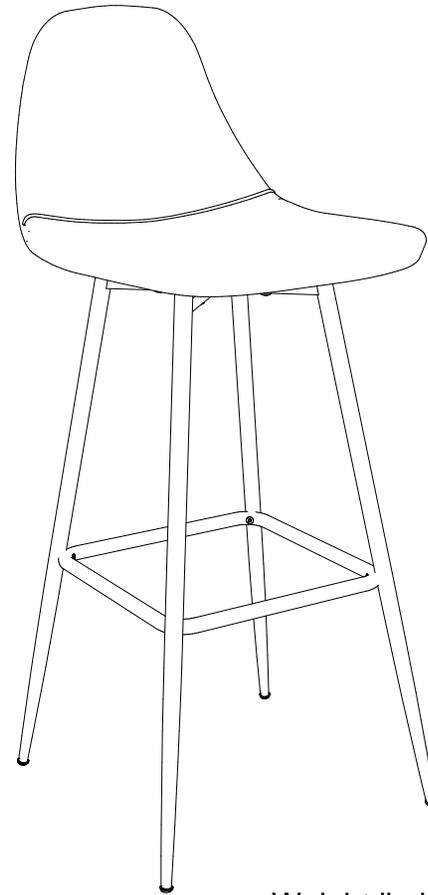

Weight limit: 250lbs / 113kgs

>> assembly instructions (B34S017412T00 - 260306 - W)



Congratulations on your latest Target purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hardwork for you. All you need to do is follow our simple instructions and you'll be on your way to transforming your room in no time. Good luck--though we're confident you won't need it.

before you begin

1. Check for damaged or missing parts. Call **1-800-440-0680** to order missing supplies.
2. Use the carton as a working surface to prevent product damage during assembly.
3. Gather all tools prior to assembly.



table of contents

introduction	2
hardware	4
parts list	5
assembly	6 - 9



hardware

Hardware Pack# **TS014412-00**



(H1) X 4
M6 bolt




(H2) X 2
M6 bolt




(H3) X 2
M6 bolt




(H4) X 4
M6 Bolt



(H5) X 1
M4 allen key

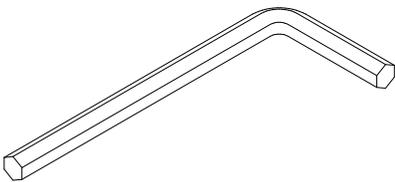


(H6) X 1
M5 allen key

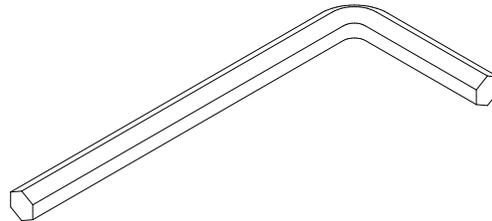


ITEM	DESCRIPTION	QUANTITY
------	-------------	----------



A	seat	1
B	leg	2
C	round plate	1
D	ring stretcher	1

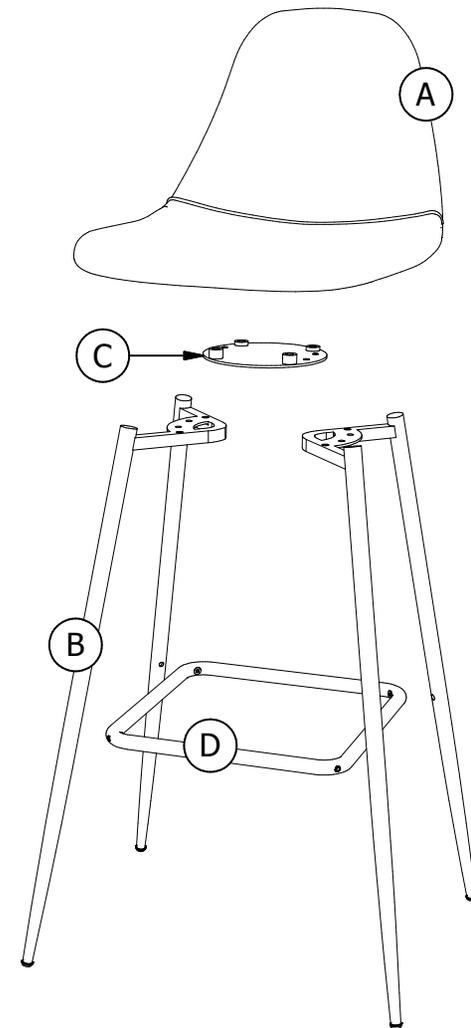

step 1

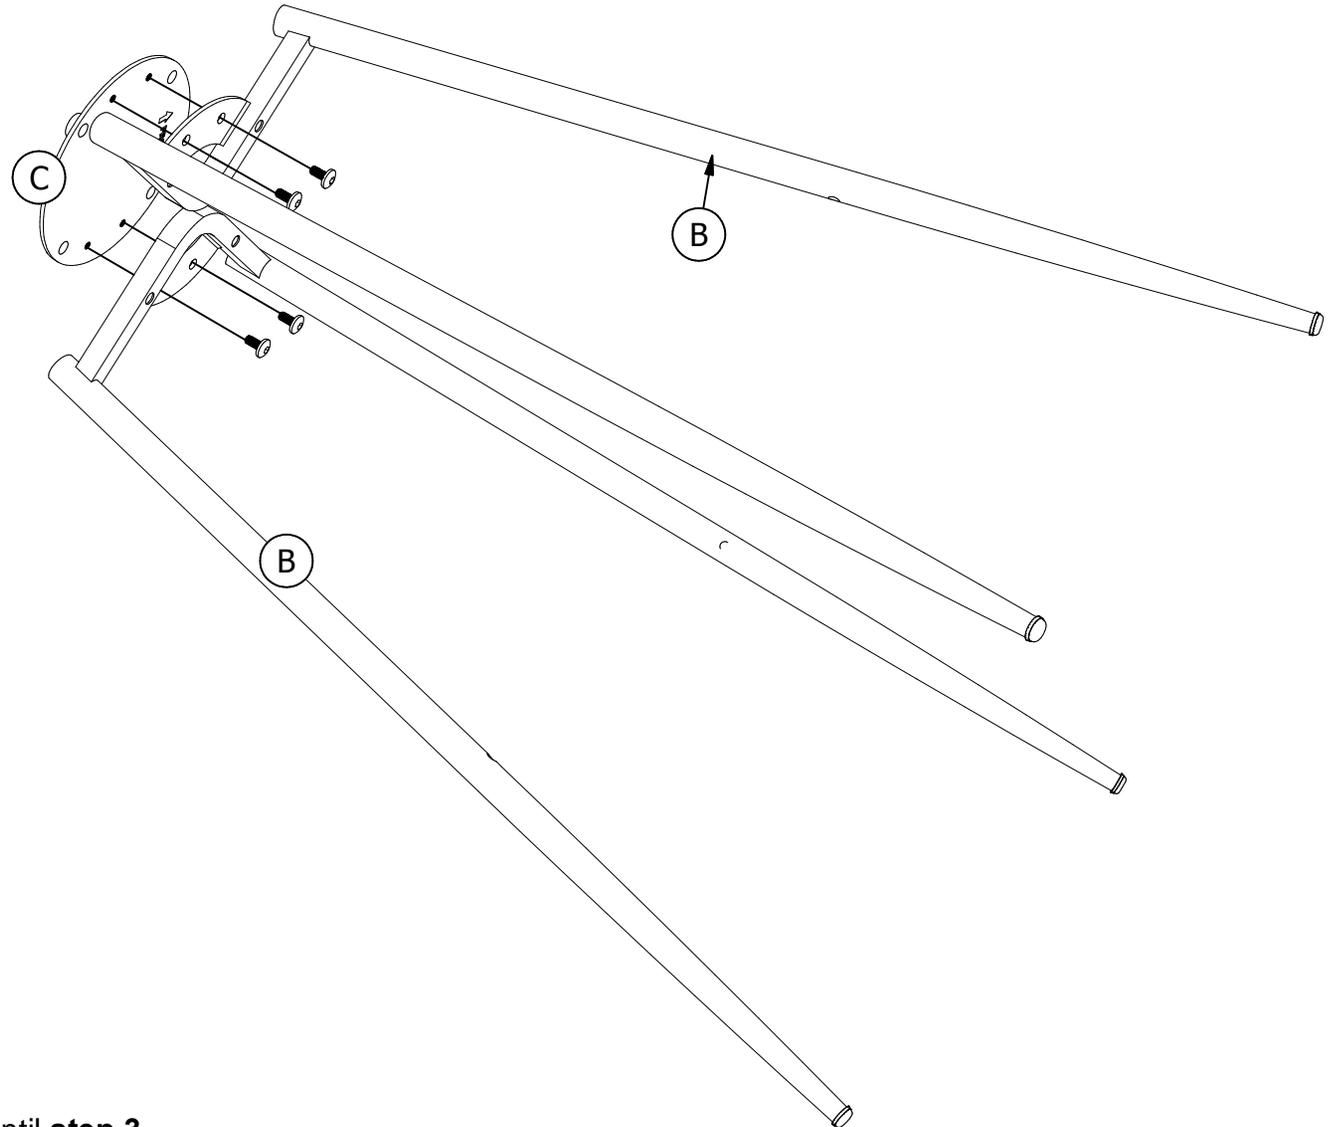



(H1) X 4
M6 bolt




1. Do **NOT** fully tighten bolts at this step until **step 3**.

step 2



(H4) X 4
M6 Bolt

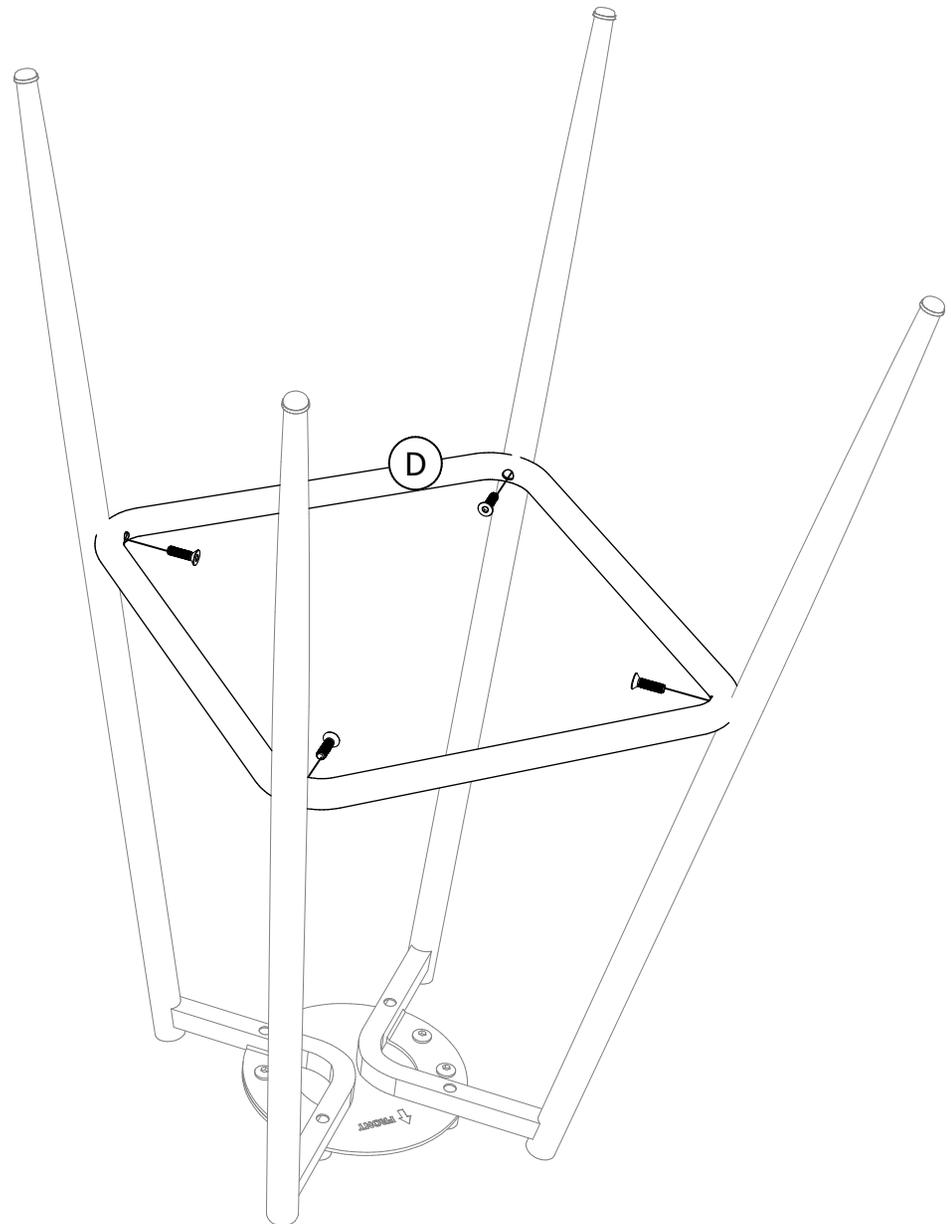




step 3

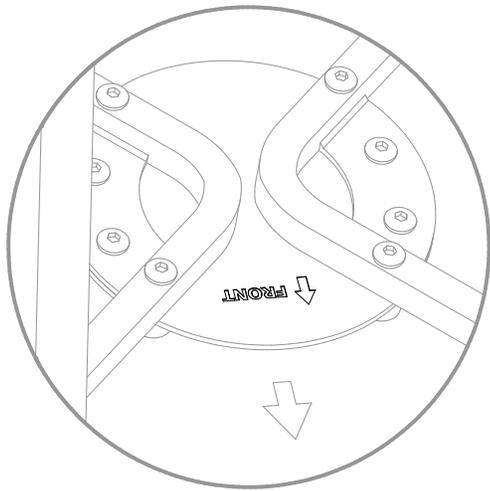

(H2) X 2
M6 bolt




(H3) X 2
M6 bolt

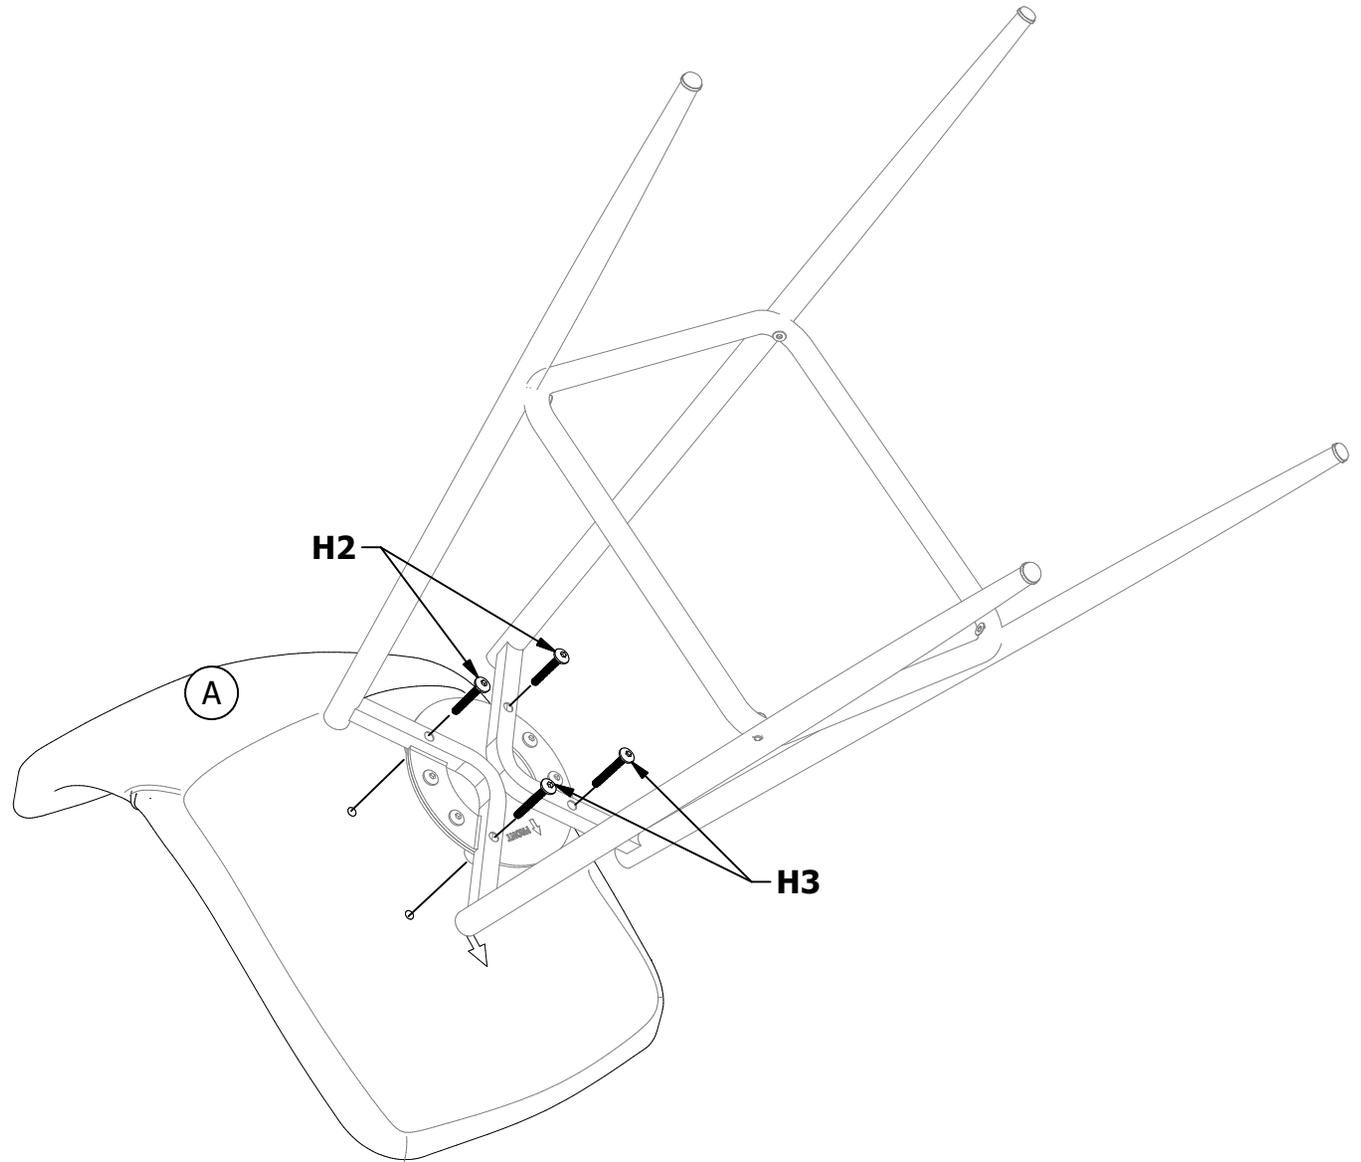

1. The **round plate** should be directed as shown.
2. Please insure that all bolts are tightened before next step.

step 4

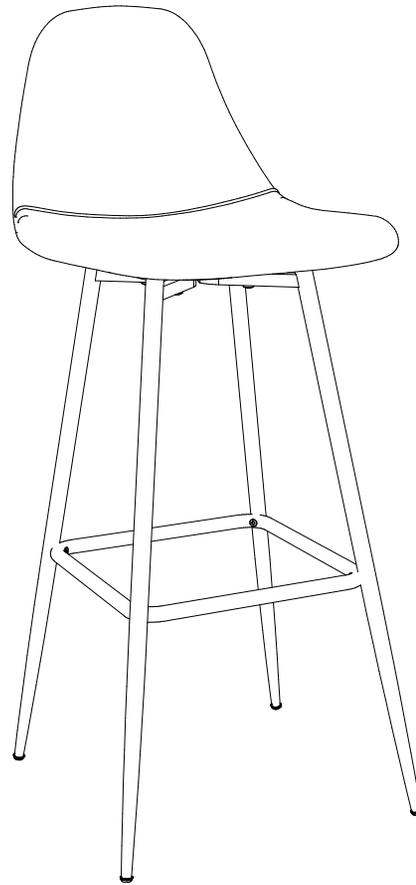

1. Your stool is now ready for use!

