


bowden

upholstered molded barstool

dpci # 249-01-5337 (caramel)

dpci # 249-01-5194 (brown)

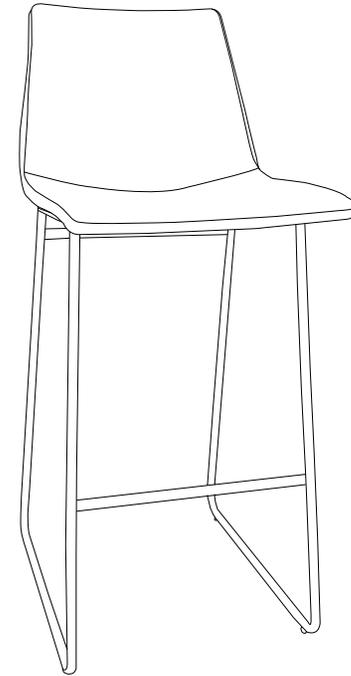

Weight limit: 250lbs / 113kgs

>> assembly instructions



Congratulations on your latest Target purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you. All you need to do is follow our simple instructions and you'll be on your way to transforming your room in no time. Good luck--though we're confident you won't need it.

before you begin

1. Check for damaged or missing parts. Call **1-800-440-0680** to order missing supplies.
2. Use the carton as a working surface to prevent product damage during assembly.
3. Gather all tools prior to assembly.

table of contents


introduction	2
hardware	4
parts list	5
assembly	6 - 7

hardware

Hardware Pack# **TS021413T-00**


(H1) X 4

M6 bolt

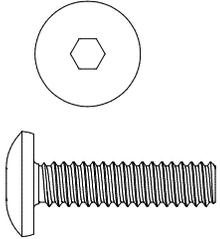


(H2) X 1

M5 allen key

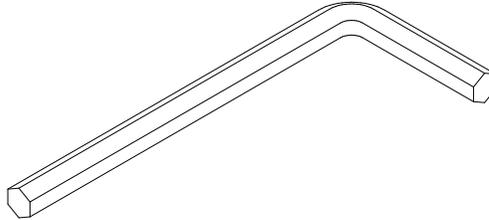



ITEM	DESCRIPTION	QUANTITY
------	-------------	----------

A	seat	1
B	leg	1

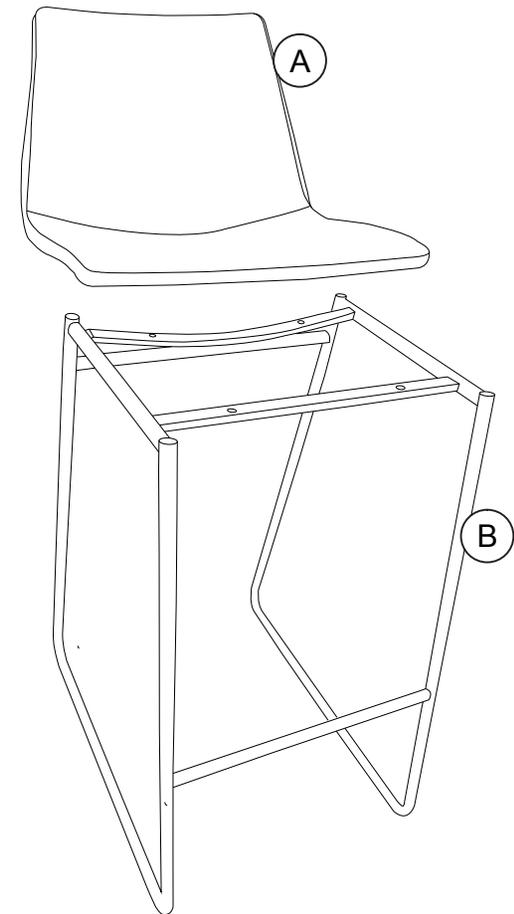


step 1

(H1) X 4
M6 bolt

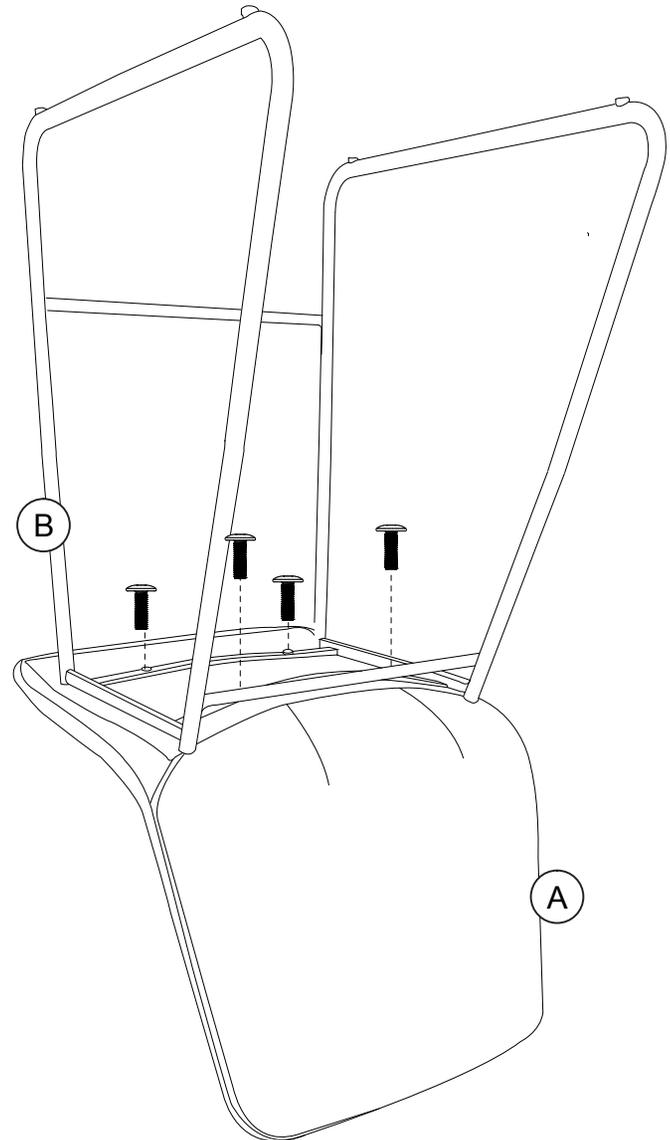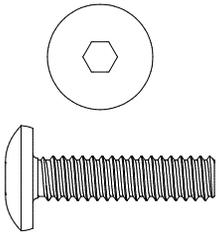

step 2

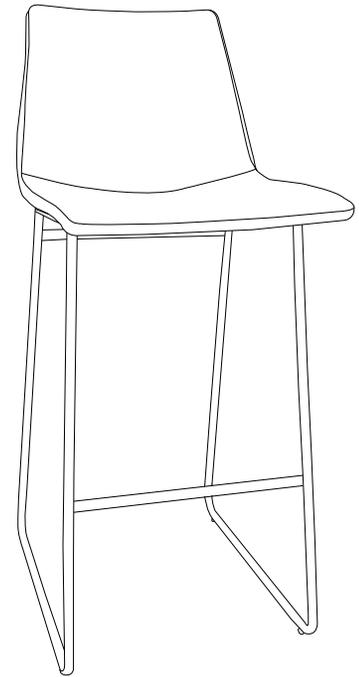

1. Your stool is now ready for use!

